



# Telemotive System Client User Guide

Version 2.4.1 / 16.09.2016



## Table of contents

<b>1</b>	<b>LICENSE AGREEMENT .....</b>	<b>8</b>
<b>2</b>	<b>PRODUCT LIABILITY .....</b>	<b>9</b>
<b>3</b>	<b>Overview .....</b>	<b>10</b>
<b>4</b>	<b>System requirements .....</b>	<b>11</b>
4.1	Further manuals .....	12
4.2	Additional features by optional licenses .....	13
4.3	Telemotive AG *firmware upgrade / product maintenance* .....	14
<b>5</b>	<b>Downloading the Telemotive System Client .....</b>	<b>15</b>
5.1	Connecting the blue PiraT2 / blue PiraT2 5E .....	15
5.2	Connecting the blue PiraT Mini.....	17
5.3	Connecting the blue PiraT Remote.....	18
5.4	Connecting the Remote Control Touch.....	19
5.5	Download and installation of the Telemotive System Client .....	20
5.6	Telemotive System Client portable .....	21
5.7	Console installer for the client.....	22
	5.7.1 Starting the console installer.....	22
	5.7.2 Uninstaller .....	22
5.8	Using the Client Library .....	22
<b>6</b>	<b>General functions of the Telemotive System Client.....</b>	<b>23</b>
6.1	The menu bar of the client.....	23
	6.1.1 File .....	23
	6.1.2 Tools .....	23
	6.1.3 Window .....	24
	6.1.4 Help.....	25
6.2	The “Network Logger” tab.....	26
6.3	Starting an application .....	27
6.4	The tab “Favorites” .....	28
<b>7</b>	<b>Configuration of the data logger .....</b>	<b>29</b>
7.1	Opening the application “Configuration” .....	29
7.2	The tab “Configuration” .....	30
7.3	Loading and saving configuration .....	31
7.4	Changing date format .....	32
<b>8</b>	<b>The configuration tree.....</b>	<b>33</b>
8.1	General .....	33
	8.1.1 Name .....	33
	8.1.2 Network settings.....	34
	8.1.3 Resetting network settings .....	35
	8.1.4 Buffer .....	36
	8.1.5 Compression .....	37
	8.1.6 Standby.....	37
	8.1.7 Voice recording .....	38
	8.1.8 Zone settings.....	38
	8.1.9 Parallel logging to External Storage.....	39
	8.1.9.1 Configuration via external storage.....	40
	8.1.9.2 Firmwareupdate via external storage .....	41
	8.1.9.3 Stopping Parallel logging.....	41
8.2	Password Protection.....	42
	8.2.1 Activating password protection .....	43
	8.2.2 Adding new user.....	44
	8.2.3 Visibility of the Password Protection sub-categories.....	46
	8.2.4 The userlist.....	47
8.3	General settings of the further ports .....	48

8.4	CAN .....	49
8.4.1	CAN-HS/-LS .....	49
8.4.2	General settings .....	51
8.5	LIN 52 .....	
8.5.1	LIN .....	52
8.5.2	General settings .....	53
8.6	Serial .....	54
8.6.1	Serial .....	54
8.6.2	General settings .....	54
8.7	MOST .....	55
8.7.1	MOST .....	55
8.8	FlexRay .....	56
8.8.1	FlexRay .....	56
8.8.2	General settings .....	56
8.9	Ethernet .....	58
8.9.1	Ethernet .....	58
8.9.2	Differing settings at blue PiraT Mini / blue PiraT2 5E .....	61
8.9.3	Settings off he rear ports – blue PiraT Mini .....	61
8.9.3.1	Bridging front / back ethernet ports .....	62
8.9.3.2	Filtering options of rear ports at blue PiraT Mini .....	62
8.9.4	Port settings of the rear ports – blue PiraT2 .....	64
8.9.4.1	Port mode *Switch* .....	64
8.9.4.2	Port mode *Spy* .....	65
8.9.4.3	Port mode *Tap* .....	65
8.9.5	Spy logging .....	66
8.9.6	Available port speeds .....	67
8.9.7	Protocol “EsoTrace” .....	68
8.9.8	Protocol “GNLogger” .....	68
8.9.9	Protocol “Raw” .....	69
8.9.10	Protocol “SpyMode” .....	69
8.9.10.1	Filter configuration in SpyMode .....	69
8.9.11	Protocol “TCPServer” .....	71
8.9.12	Protocol “UDPServer” .....	71
8.9.13	Protocol “UTF8” .....	71
8.10	Analog .....	72
8.10.1	Analog .....	72
8.10.2	General settings .....	72
8.11	Digital input .....	73
8.11.1	Digital In .....	73
8.11.2	General settings .....	73
8.11.3	Threshold .....	74
8.12	Digital Out .....	75
8.13	Trigger .....	75
8.13.1	Status .....	77
8.13.2	Remove trigger .....	77
8.13.3	Mode .....	77
8.13.4	Name .....	77
8.13.5	Event and action .....	77
8.13.6	Selecting an event .....	78
8.13.6.1	Event: Complex event .....	78
8.13.6.1.1	Inserting an Expression .....	79
8.13.6.1.2	Expression: CAN-/LIN-/FlexRay-Signal .....	80
8.13.6.1.3	Expression: Remote control function key .....	81
8.13.6.1.4	Expression: Digital input .....	82
8.13.6.1.5	Expression: Analog input .....	83
8.13.6.1.6	Overview of operators .....	84
8.13.6.1.7	Verification of input parameter .....	85

8.13.6.1.8	Deleting events, characters and operators.....	86
8.13.6.1.9	Changing CAN databases .....	87
8.13.6.2	Event: Receive CAN/LIN/FlexRay signal.....	87
8.13.6.3	Event: Key stroke.....	88
8.13.6.4	Event: Digital Input.....	89
8.13.6.5	Event: Analog Input.....	90
8.13.7	Selecting an action .....	91
8.13.7.1	Action: Send CAN message.....	91
8.13.7.2	Action: Set marker .....	92
8.13.7.3	Action: Set digital output .....	92
8.13.7.4	Action: Append info entry to event overview.....	93
8.13.7.5	Action: Display notification on Remote Control.....	93
8.13.7.6	Action: Execute CCP/XCP action (with add. License only) .....	94
8.13.7.7	Action: Display Remote Control Monitor (with add. License only).....	94
8.13.8	Setting a marker via an external button .....	95
8.13.9	Event management .....	95
8.13.10	Trigger overview.....	97
8.13.10.1	Im- or export trigger .....	97
8.13.10.2	Duplicate trigger.....	98
8.13.11	Automatically eliminated trigger .....	99
8.14	Online Streaming.....	100
8.15	Channelmapping .....	101
8.16	System Link (TSL).....	102
8.17	Databases .....	103
<b>9</b>	<b>Establishing and configuring a TSL network .....</b>	<b>104</b>
9.1	Requirements.....	104
9.2	Connections in TSL .....	105
9.3	Access to a TSL .....	105
9.4	Marker in a TSL network .....	106
9.5	Configuration of TSL.....	106
9.5.1	Activating TSL .....	106
9.5.2	General settings – TSL.....	107
9.5.3	Bus configuration – TSL .....	108
9.5.4	MOST settings – TSL .....	109
9.5.5	Ethernet port settings – TSL.....	109
9.5.5.1	Ethernet / camera settings – TSL .....	110
9.5.6	Databases – TSL.....	110
9.5.7	Feature configuration – TSL.....	110
9.5.8	Password protection – TSL .....	111
9.5.9	Trigger, Signal based filter, CCP/XCP, Live View – TSL.....	111
9.5.10	System Link – TSL .....	111
9.5.11	Offline configuration – TSL .....	113
9.6	Downloading / converting – TSL.....	115
9.7	Downloading from a TSL network.....	116
9.7.1	Unsorted download .....	117
9.7.2	Sorted download .....	117
9.8	Converting data from logger or offline data set – TSL.....	118
9.9	Creating a bug report – TSL .....	119
9.10	Firmware or license update – TSL .....	120
<b>10</b>	<b>Online Monitor .....</b>	<b>121</b>
10.1	Starting the Online Monitor .....	121
10.1.1	Context menu of the channes .....	123
10.2	Assigning databases .....	124
10.3	Adding filter .....	125
10.3.1	CAN filter.....	125
10.3.2	Text filter for Ethernet and serial channels.....	126

10.4	Redirecting logging into a file.....	127
10.5	Display of Online Monitor .....	128
10.5.1	Context menu for messages.....	129
10.6	Changing the view.....	131
10.6.1	Tabular or Telemotive ASCII.....	131
10.6.2	Chronological or fixed.....	131
10.6.3	Sorting by columns.....	132
10.6.4	Time zone.....	133
10.6.5	Searching in online monitor .....	133
<b>11</b>	<b>Telemotive Live View.....</b>	<b>134</b>
11.1	Open Live View .....	134
11.1.1	Application icon [Telemotive Live View] .....	134
11.1.2	Right click on the logger .....	134
11.1.3	Access via the configuration .....	135
11.1.4	Access via the Client-Portal.....	135
11.2	Password configuration .....	136
11.3	Connection between mobile device and logger via Wi-Fi.....	137
11.4	Registering the device .....	138
11.5	Requirements.....	139
11.6	Requirements for mobile devices.....	139
11.7	Database configuration.....	140
11.8	Adding signals.....	141
11.9	The display of Telemotive Live View.....	143
11.9.1	Language Setting .....	143
11.10	Data .....	144
11.10.1	Adding and Configuration of widgets .....	146
11.10.1.1	Data Source.....	146
11.10.1.1.1	Label.....	146
11.10.1.1.2	Adding signals.....	147
11.10.1.1.3	Represent multiple signals in a widget.....	147
11.10.1.1.4	Update Interval.....	148
11.10.1.2	Presentation.....	149
11.10.1.2.1	Scaling .....	150
11.10.1.2.2	Timeunit .....	150
11.10.1.2.3	Decimal places.....	150
11.10.1.2.4	Adding Color .....	150
11.10.2	Customizing widgets.....	155
11.11	Marker.....	156
11.12	Channels .....	157
11.13	Settings .....	158
11.14	Info 160	
<b>12</b>	<b>Downloading data from logger or offline data set.....</b>	<b>161</b>
12.1	Opening the application "Create data set" .....	161
12.2	The tab "Create data set" .....	163
12.2.1	Toolbar .....	163
12.2.1.1	Current logger time .....	163
12.2.1.2	Disk usage .....	163
12.2.2	Reset marker counter .....	164
12.2.3	Delete data .....	164
12.2.4	Defining data block.....	164
12.2.5	Event overview .....	165
12.2.5.1	Displaying wakeup reasons.....	167
12.2.6	Time period .....	168
12.3	Settings .....	169
12.4	Downloading data set.....	169
12.5	Partitioning a data set.....	170

12.6	Trace file viewer .....	171
<b>13</b>	<b>Terminal light.....</b>	<b>173</b>
<b>14</b>	<b>Converting data from logger or offline data set .....</b>	<b>174</b>
14.1	Conversion format overview .....	174
14.2	Description of file formats .....	175
14.2.1	APN ASCII (*.APN.txt) .....	175
14.2.2	ASCII Hexadecimal (*.txt) .....	175
14.2.3	Autosar DLT (*.dlt) .....	175
14.2.4	Binary Logging (*.blf) .....	175
14.2.5	CANCorder (*.CANCORDER.txt) .....	175
14.2.6	CANoe ASCII (*.asc) .....	176
14.2.7	EsoTrace (*.esotrace) .....	176
14.2.8	Ethernet Raw (*.raw) .....	176
14.2.9	GN-Log (*.GNLog.<yy>aa) .....	176
14.2.10	GPS Exchange (*.gpx) .....	176
14.2.11	KML (*.kml) .....	176
14.2.12	KMZ (*.kmz) .....	176
14.2.13	MDF Logging (*.log) .....	176
14.2.14	MDF Signal v3.3 (*.mdf) .....	177
14.2.15	MDF Signal v4.1 (*.mf4) .....	177
14.2.16	MOST Data Analyser (*.img) .....	177
14.2.17	MPEG4 – Video (*.mpeg4) .....	177
14.2.18	MPEG Isochronous raw (.ts) .....	177
14.2.19	NMEA – ASCII GPS (*.nmea) .....	177
14.2.20	OptoLyzer (*.op2) .....	178
14.2.21	Raw Serial (*.RAW.txt) .....	178
14.2.22	Serial Debug (*.txt) .....	178
14.2.23	Serial Trace Analyser (*.txt) .....	178
14.2.24	TCP dump (*.pcap) .....	178
14.2.25	Telemotive ASCII (*.txt) .....	178
14.2.26	Trace Client Format (*.tcr) .....	179
14.3	Opening the application “Conversion” .....	180
14.4	The tab “Conversion” .....	181
14.4.1	Event overview and time period .....	182
14.4.2	Defining a data block .....	184
14.4.3	Choosing channel .....	184
14.4.4	Selecting target directory .....	185
14.4.5	Import/export format settings .....	185
14.4.6	Changing conversion format .....	186
14.5	Converting data .....	187
14.6	Automatically generated Events.txt .....	187
14.7	Settings .....	188
14.7.1	General .....	188
14.7.2	File names .....	188
14.7.3	Partitioning .....	189
14.7.4	Formats .....	190
14.7.5	CAN pseudo messages .....	191
14.7.6	MOST pseudo messages .....	192
14.7.7	CAN databases .....	193
14.7.8	Specific Format Settings .....	194
14.7.8.1	Converting of GPS data .....	194
14.7.8.2	Converting of MOST150 streaming data .....	195
14.7.8.3	Channel width of MOST150 isochronous data .....	195
<b>15</b>	<b>Firmware / Licenses update.....</b>	<b>196</b>
15.1	Device information .....	198
15.2	Update firmware .....	198

15.3 Licenses .....	199
15.4 Force component update.....	200
<b>16 Bug reporter.....</b>	<b>201</b>
16.1 Opening the application “Bug reporter” .....	201
16.2 Error overview .....	202
16.3 Error protocol.....	203
16.4 Error type info.....	203
16.5 Error details.....	204
16.6 Save bug report.....	204
<b>17 Abbreviations .....</b>	<b>206</b>
<b>18 List of figures.....</b>	<b>208</b>
<b>19 List of tables .....</b>	<b>214</b>
<b>20 Contact.....</b>	<b>215</b>

# 1 LICENSE AGREEMENT

Please read the license agreement of this license contract carefully, before you install the software. By the installation of the software you agree to the conditions of this license contract. This software-license agreement, in the following called "license", contains all rights and restrictions for final users that regulate the use of the accompanying software, operating instructions and other documents, in the following called as "software".

1. This license contract is an agreement between licensor and licensee, who is being licensed to use the named software.
2. Licensee acknowledges that this is only a limited nonexclusive license. This means, that the licensee has no right to allocate sublicenses. Licensor is and remains the owner of all titles, rights and interests in the software.
3. The software is a copyright property of the Telemotive AG. The program or parts of it may not be further licensed to third parts, rented, sold or be further marketed in any form without explicit written approval by Telemotive AG. The user may neither change the software and their components, nor modify, nor redevelop or decompile otherwise in any form.
4. This software is subject to no warranty. This software is sold as is, without any warranty. If at any time, a user changes his system, we hold no responsibility to change our software to make it work again.
5. This license permits licensee to install the software on more than one computer system, as long as the software will not be used on more than one computer system simultaneously. Licensee will not make copies of the software or allow copies of the software to be made by others, unless authorized by this license agreement. Licensee may make copies of the software for backup purposes only. Licensee is not entitled to transmit or to transfer the software or its rights from this license agreement.
6. Licensor is not liable to licensee for any damages, including compensatory, special, incidental, exemplary, punitive or consequential damages, connected with or resulting from this license agreement or licensee's use of this software.
7. Licensee agrees to defend and indemnify licensor and hold licensor harmless from all claims, losses, damages, complaints or expenses connected with or resulting from licensee's business operations.
8. Licensor has the right to terminate this license agreement and licensee's right to use this software upon any material breach by licensee. The duration of the license contract is indefinitely determined.
9. Licensee agrees to return all copies of the software to licensor or to destroy them upon termination of the license contract.
10. This license agreement replaces and supersedes all prior negotiations, dealings and agreements between licensor and licensee regarding this software.
11. This license contract is subject to German law.
12. If a regulation of this license contract is void by law, the validity of the remaining regulations is not affected. If there is such a regulation it will be replaced by a valid, according to the legal regulations and enforceable regulation with similar intention and similar economic consequence.
13. The license contract is effective by delivery of the software of the licensor to the licensee and/or by usage of the software by the licensee. This license contract is also valid without licensor's signature.
14. The license automatically goes out if the licensee does not agree to the license regulations described here or offend against the license regulations of this license contract. With ending the license contract the licensee is obliged to extinguish or to destroy the software and all copies of it no matter if installed or stored on disk or to hand all of it back to Telemotive AG.
15. The licensee is liable for all damages caused to the licensor by the violation of these license regulations.



## 2 PRODUCT LIABILITY

For all offers, sales and supplies the following conditions apply exclusively, even if the buyer, orderer and suchlike prescribes other conditions. Alterations are only valid, if they are agreed in writing.

1. The technical documentation is part of the products. The product liability and the product guarantee will be excluded, if contents and in particular the safety references and instructions of the documentation are not considered.
2. The products do belong to the group of test tools. By application of the equipment a disturbance of the tested system cannot be completely excluded. For this reason, the warranty of a perfectly functioning system cannot be taken over by the manufacturer. Application of the product takes place at one's own risk.
3. The liability of the substitution of damages according to §1 product liability law is expressly excluded in the context of §9 product liability law, as far as compelling legal terms do not provide anything else.
4. In no event will the producer be liable for any indirect, incidental, special or consequential damages, including loss of profits, loss of revenues, loss of data, loss of use, any other economic advantage or damage caused by pretensions of third party towards the customer out of this agreement, under any theory of liability, whether in an action in contract, strict liability, tort (including negligence) or other legal or equitable theory.
5. The burden of proof is with the customer.
6. The Telemotive AG does ensure the legal warranty according to German law. Except for warranties expressly set forth in this agreement, any and all products are delivered "as is" and the producer makes and the customer receives no additional express or implied warranties. The producer hereby expressly disclaims any and all other warranties of any kind or nature concerning the products, whether express or implied, including without limitation, any warranty of title, merchantability, quality, accuracy or fitness for a particular purpose or the customer's purpose. The producer expressly disclaims any warranties that may be implied from usage of trade, course of dealing or course of performance. Except for the express warranties stated in this agreement the products are provided with all faults and the entire risk of unsatisfactory quality, performance, accuracy. The possible effort is with the customer. The producer does not warrant that the products will operate without interruption or be error free.
7. The Telemotive AG is justified to exchange defective goods against homogeneous acceptable ones or to eliminate the fault within an appropriate period. In this case a demand for redhibitory action or reduction of price expires. Warranty claims presuppose a due notice of defects.
8. Resale, transfer, donation, exchanges or the rental of the offered products at third party is permitted without clearance of the Telemotive AG.
9. German Law is deemed to be as legal basis.

### 3 Overview

This user guide describes the administration of the Telemotive system clients which can be used for configuring and handling of the following Telemotive products:

- blue PiraT2
- blue PiraT2 5E
- blue PiraT Mini
- Remote Control Touch
- blue PiraT Remote

The Telemotive System Client was only tested with Microsoft® Windows® 7.

The hardware is described in the user guide of your data logger.

This document refers to data logger firmware version 02.04.01 and the **Telemotive System Client** version 2.4.1. Some features depend on model and feature license or may not be available in older versions.

Software updates and user guides for other, optional, licensed enhancements are available in the Telemotive ServiceCenter. *(Please find the address under Contact at the last page Contact).*

To ensure the most reliable operation of your system as possible, please make sure to use always current firmware and software versions.

[Index](#)

## 4 System requirements

### Control Unit

A Windows based Laptop or PC is needed to configure the devices of Telemotive AG by **Telemotive System Client**. It also allows to save the recorded data and to use them offline later.

### Telemotive System Client

The software client is used for configuring the data logger as well as downloading the recorded data or convert these into your needed file format. An firmware update can be performed by the **Telemotive System Client** too to ensure that your devices are always up to date.

### blue PiraT2 / blue PiraT2 5E / blue PiraT Mini

The communication between bus systems and control units is monitored and relevant data can be recorded very precisely with the data logger of Telemotive AG. The collected data are stored to the logger and can be downloaded via Ethernet to a PC.

The blue PiraT2 is our top-class all-in-one data logger. Seven models cover a wide range of interfaces.

Additionally, the blue PiraT2 5E offers improved power management and power backup, five integrated Ethernet ports and super-fast start-up behavior. The blue PiraT2 can be flexibly expanded via [Telemotive System Link](#).

The blue PiraT Mini is smallest data logger in the world with an outstanding functional scope. It offers a wide range of interfaces, stable temperature behavior, very low energy consumption, four GBit Ethernet ports, and much more. Different blue PiraT Mini can be flexibly expanded to one cluster and therefore handled very easily by using [Telemotive System Link](#).

### Remote Control Touch

Operate your blue PiraT Mini or blue PiraT2 data loggers safely and comfortably from the driver's or passenger seat. Via Telemotive System Link our new remote control becomes part of your logger network. One remote control can handle all connected loggers.

### blue PiraT Remote

While Remote Control Touch is just a control unit for handling unique devices or a TSL network, the blue PiraT Remote additional has logger functionality by offering internal storage and some interfaces.

### License

For some additional features an installed license is required. Settings for licensed features can be performed with a valid license only.

If you need a license for your logger, please contact our sales department (please find the address under contact at the last page).

## 4.1 Further manuals

Beside this user guide we offer the main manuals for our client as well as for the different data logger generations in our ServiceCenter at <https://sc.telemotive.de/bluepirat>.

### User manual for the Telemotive System Client

[https://sc.telemotive.de/4/uploads/media/TelemotiveSystemClient\\_UserManual.pdf](https://sc.telemotive.de/4/uploads/media/TelemotiveSystemClient_UserManual.pdf)

### User manual for blue PiraT2 / blue PiraT2 5E

[https://www.telemotive.de/4/uploads/media/blue\\_PiraT2\\_UserManual.pdf](https://www.telemotive.de/4/uploads/media/blue_PiraT2_UserManual.pdf)

### User manual for blue PiraT Mini

[https://www.telemotive.de/4/uploads/media/blue\\_PiraT\\_Mini\\_UserManual.pdf](https://www.telemotive.de/4/uploads/media/blue_PiraT_Mini_UserManual.pdf)


### User manual for Remote Control Touch

[https://sc.telemotive.de/4/uploads/media/RCTouch\\_UserGuide.pdf](https://sc.telemotive.de/4/uploads/media/RCTouch_UserGuide.pdf)

### User manual for blue PiraT Remote

[https://sc.telemotive.de/4/uploads/media/blue\\_PiraT\\_Remote\\_UserGuide.pdf](https://sc.telemotive.de/4/uploads/media/blue_PiraT_Remote_UserGuide.pdf)

For having an easy access if necessary, the most important manuals are linked in the client under the menu item [Help] and are reachable easily from there.

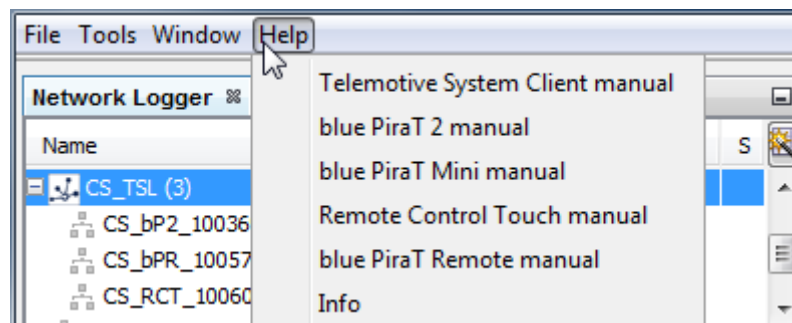

**Figure 4.1: links to the manuals**

Our licensed enhancements have own manuals which are stored in the ServiceCenter too. You will find a list of these enhancements in the user manuals in the chapter **Additional features by optional licenses**.

[Index](#)

## 4.2 Additional features by optional licenses

Additional features can be activated by purchasing and installing licenses. Licenses can be ordered at our sales team. You find the user guides for these additional features in the Telemotive ServiceCenter. Currently the following licensed features are available.

Feature	Description
<b>Complex Triggers</b>	Certain events (e.g., conditions on CAN-signals) can be programmed to be a trigger for certain actions (e.g., display of a message on the Remote Control or send a CAN message). The standard configuration of the data logger contains 2 complex triggers. This license allows configuring up to 50 complex triggers.
<b>Remote Control Monitor</b>	display of configurable CAN, LIN, FlexRay, analog and digital signals at the Remote Control
<b>Diagnostic Log and Trace</b>	logging of Diagnostic Log and Trace (DLT) messages over Ethernet or serial (restricted) connections
<b>Camera Link</b>	video recording via video server or network cameras
<b>WLAN</b>	supporting wireless LAN (802.11, 802.11a, 802.11n), (802.11ac from FW 02.04.01)
<b>GPS logging</b>	tracking of GPS data
<b>Measurements with CCP</b>	CAN Calibration Protocol
<b>Measurements with XCP</b>	Universal Measurement and Calibration Protocol Currently the functionality for Ethernet (XCP on Ethernet) and the CAN-bus (XCP on CAN) are available.
<b>MOST150 Streaming</b>	logging MOST150 synchronous/isochronous data
<b>Signal Based Filtering</b>	The feature <b>Signal Based Filtering</b> provides the possibility to extract pre-configured signals directly from the recorded CAN, LIN, FlexRay, analog and digital messages with an adjustable sampling frequency. These filtered signals can be stored directly to the logger and extract automatically in a MDF, CSV or TMT file.
<b>Telemotive Live View</b>	showing CAN signals in a HTML-5 compatible browser on mobile devices like smartphones, tablets or laptops over Wi-Fi (licensed feature) or Ethernet The enhanced version has no limitation to mobile devices or signals which can be shown.
<b>BroadR-Reach logging</b>	recording of data over BroadR-Reach Ethernet. (Note: Just available for blue PiraT Mini)
<b>MLBevo</b>	The license <b>Connected-Gateway MLBevo</b> enables the recording of data of the ATOP control unit MLBevo via USB to the Telemotive data logger and convert these data with the Telemotive System Client. (from FW 02.03.01)
<b>Telemotive Download Terminal</b>	Telemotive Download Terminal allows an automatization of configured tasks for a defined group of devices. (from FW 02.03.01)
<b>TPE</b>	<b>TPE = Telemotive Performance Extension</b> Increasing the logging rate for Ethernet data up to 100Mbit/s (from FW 02.04.01)
<b>Test automatisaton</b>	Interface for connecting to test automation tools. At the moment, the sending of CAN messages is supported. (from FW 02.04.01)

**Table 4.1: Additional features by optional licensees**

## 4.3 Telemotive AG \*firmware upgrade / product maintenance\*

Telemotive AG is investing a lot into the newly development of their products to fit the requirements of their customers.

Therefore Telemotive implements continuous new features and enhancements which were offered by new firmware and software versions. In future releases there's a changing in the distribution of these packets.

### Basic conditions

The customer buys the Telemotive product always with the latest version of the firmware which is released and is permitted in his company. (Please notice this version in your order.)

For his earlier bought versions Telemotive will offer optional new main releases. These can be ordered as a license. A main release (e.g., 02.xx.yy) includes all minor releases such as 02.02.yy.

Telemotive plans to release main versions all 12-18 month.

Telemotive will inform all customers before releasing new versions and their content to give every customer the chance to decide if he needs this release or not.

### Affected products

<b>blue PiraT Mini</b>	FW 02.xx.yy series range (FW 03.xx.yy and following have to be paid)
<b>blue PiraT2 5E</b>	FW 02.xx.yy series range (FW 03.xx.yy and following have to be paid)
<b>blue PiraT2</b>	Bug fixes in release 01.xx.yy if necessary Buy later of firmware update license for existing devices, orders after release of FW 02.xx.yy will have this version included new features and enhancements by firmware update license
<b>blue PiraT Remote</b>	FW 02.xx.yy series range (FW 03.xx.yy and following have to be paid)
<b>Remote Control Touch</b>	FW 02.xx.yy series range (FW 03.xx.yy and following have to be paid)

#### Note:

**Enhancements are only possible in current firmware releases.**

#### Attention:

**Please note that updates from firmware version 02.00.01 need a special update license and can't be flashed to a device without this license.**

**If you try to flash firmware version 02.00.01 to a blue PiraT2 without this license, in rare cases the logger is set into error mode and has to be flashed with the latest working version for using this device again.**

To buy these licenses please contact our sales department (*please find the address under Contact*).

[Index](#)

## 5 Downloading the Telemotive System Client

The **TSC** can be downloaded in Telemotive's ServiceCenter (<https://sc.telemotive.de/bluepirat>).

A current version is always on the logger itself and can be downloaded from there. The following steps show you how to download the TSC directly from these devices:

- **blue PiraT2**
- **blue PiraT2 5E**
- **blue PiraT Mini**
- **blue PiraT Remote**
- **Remote Control Touch.**

### 5.1 Connecting the blue PiraT2 / blue PiraT2 5E

Connect the blue PiraT2 via the power harness (**red/+/clamp30** and **black/GND/-/clamp31**) with the vehicle battery or a power supply.



Figure 5.1: Power connection on the blue PiraT2



Figure 5.2: Power connection on the blue PiraT2 5E

#### Attention:

**If you have ordered an external antenna, e.g., for Wi-Fi or GPS, the connector has to be bolt only by hand, not with any tools.**

Switch on the blue PiraT2 by pressing the **[ON / Trigger]** button and wait until the logger is ready. Telemotive Logo changes into showing the available bus ports.



**Figure 5.3: Switching on the blue PiraT2**

For switching off the blue PiraT2 please press the **[OFF / Esc]** button for some seconds until the display shows “Shutdown”.

Pressing down the rotary knob will enter the operation menu. Now select “[1] Info” and press the rotary knob again. Then choose “9/11” by turning the knob. In the bottom line you can see the IP address of the logger. This IP address is required for the next step.



**Figure 5.4: Info screen – IP address**



## 5.2 Connecting the blue PiraT Mini

Connect the **blue PiraT Mini** to the vehicle battery or a power supply via the power harness (**red/+/clamp30** and **black/GND/-/clamp31**).


Connect the Gigabit Ethernet port ETH #1 with the Ethernet port of your computer by using an Ethernet cable.



**Figure 5.5: Power connection on the blue PiraT Mini**

When the power supply is switched on the device will start automatically.

Is the **blue PiraT Mini** in standby mode please press the **[ON / Trigger]** button to start the device. The boot sequence takes about 15 seconds until the logger is reachable by the TSC. Data logging is starting much earlier.

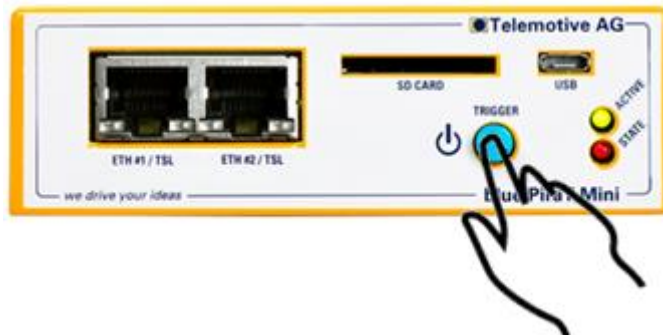

**Figure 5.6: Switching on the blue PiraT Mini**

To switch off the blue PiraT Mini please press the **[ON / Trigger]** button for about five seconds till the green ACTIVE-LED starts pulsing.

[Index](#)

### 5.3 Connecting the blue PiraT Remote

Connect the **blue PiraT Remote** to the vehicle battery or a power supply via the power harness (1.) (**red/+/clamp30** and **black/GND/-/clamp31**).

Connect the Gigabit Ethernet port ETH #1 with the Ethernet port of your computer by using an Ethernet cable.

When the power supply is switched on the device will start automatically.

Is the **blue PiraT Remote** in standby mode please press the **[ON / Trigger]** button (2.) to start the device. The boot sequence takes about 45 seconds until the logger is reachable by the TSC. Data logging is starting much earlier.



**Figure 5.7: Switching on the blue PiraT Remote**

To switch off the **blue PiraT Remote** please press the **[ON / Trigger]** button (2.) for about five seconds till the green ACTIVE-LED starts pulsing.

## 5.4 Connecting the Remote Control Touch

Connect the **Remote Control Touch** to the vehicle battery or a power supply via the power harness (1.) (**red/+/clamp30** and **black/GND/-/clamp31**).

Connect the Gigabit Ethernet port ETH #1 with the Ethernet port of your computer by using an Ethernet cable.

When the power supply is switched on the device will start automatically.

Is the **Remote Control Touch** in standby mode please press the **[ON / Trigger]** button (2.) to start the device. The boot sequence takes about 45 seconds until the logger is reachable by the TSC. Data logging is starting much earlier.




**Figure 5.8: Switching on the Remote Control Touch**

To switch off the **Remote Control Touch** please press the **[ON / Trigger]** button (2.) for about five seconds till the green ACTIVE-LED starts pulsing.

## 5.5 Download and installation of the Telemotive System Client

Open your internet browser, enter the IP address of the logger

(Default settings: **DHCP server with IP 192.168.0.233**) and press **[Enter]**.

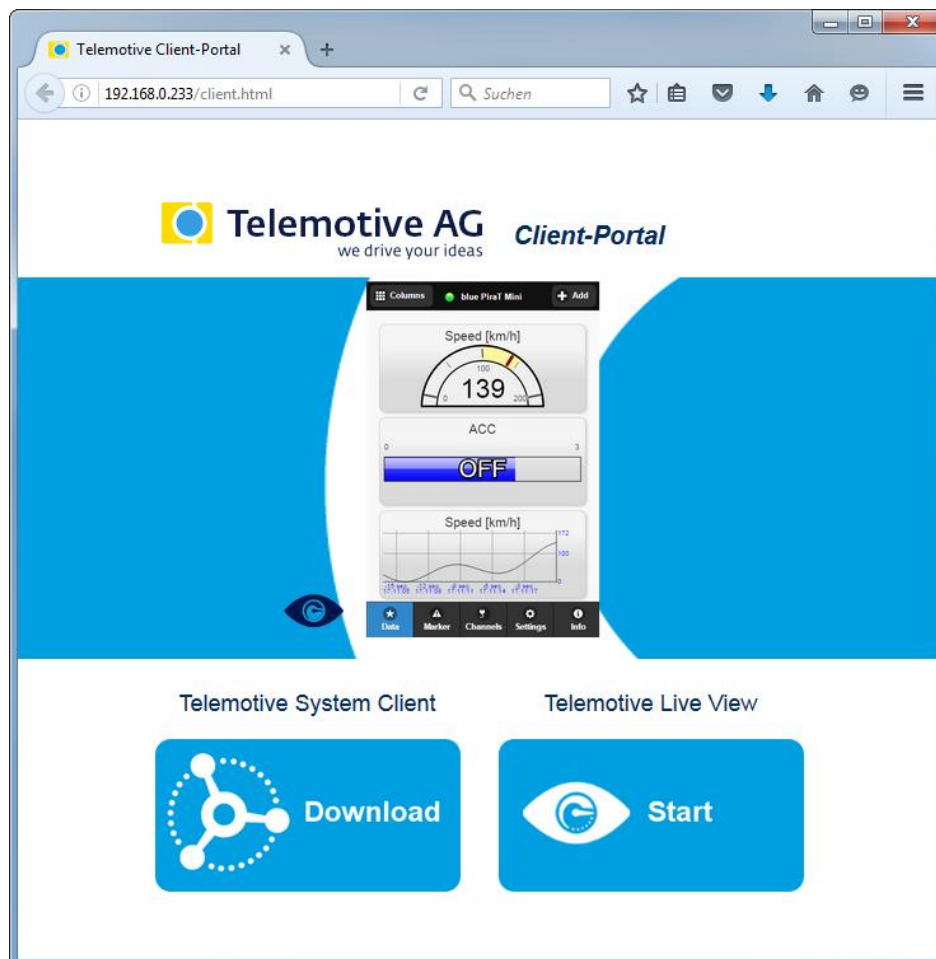

**Figure 5.9: TSL Client Portal**

The connection between the logger and your computer system will be established. Please take care that the network settings of your network adapter are set to **Obtain IP address automatically**.

Click **[Download]**, to download the Telemotive System Client directly from the logger.


Follow these steps, depending on your browser:

Browser	Proceeding
<b>Internet Explorer</b>	Click <b>[Save]</b> , to locally save the file on your system. Click <b>[Accomplish]</b> .
<b>Mozilla Firefox</b>	Click <b>[Save file]</b> , to locally save the file on your system. Click the arrow on the right top of the browser menu and select the downloaded application in the appearing context menu.

In the dialog that opens select the desired software language from the dropdown menu.  
Click **[OK]**.

Follow the instructions in the next dialog and select an installation directory.  
Click **[Install]**.


After successful installation you will find the **Telemotive System Client** icon on your desktop.  
Double-click the icon to start the application.

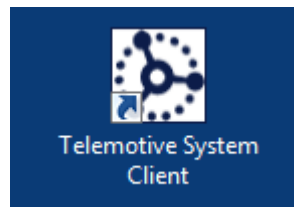

**Figure 5.10: Desktop icon**

## 5.6 Telemotive System Client portable

The Telemotive System Client is also available as a portable version which needs no installation but unpacking. This version is ready for downloading in our ServiceCenter.

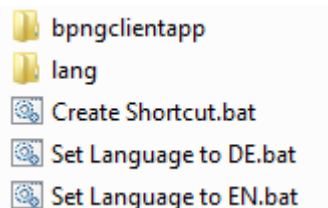

**Figure 5.11: Content of the portable client**

The portable version includes some batch files for these functions:

- |                               |  |
|-------------------------------|--|
| <b>Create Shortcut.bat</b>    | creates a shortcut for the start file of the portable client |
| <b>Set Language to DE.bat</b> | changes the language into german                             |
| <b>Set Language to EN.bat</b> | changes the language into english (standard)                 |

## 5.7 Console installer for the client

For installing the client software by a batch script or Windows prompt (console) you need an additional tool which can be downloaded from the ServiceCenter of the Telemotive AG.

If there appear some errors during installation by the console installer these errors will be displayed in the console. When the installation runs successful, no messages will be shown in the console.

### 5.7.1 Starting the console installer

Please start the console installer in this way:

```
TSC_Console_Installer.exe <path to setup> [/L=...] [/D=...] [/DS=...]
```

Example:

```
TSC_Console_Installer.exe Telemotive_System_Client_Setup_2.3.1.exe  
/L=g /D="C:\Tools\TSL" /DS=1
```

The first argument is the path to the clients setup file. The next arguments /L, /D and /DS are optional.

<b>/L</b>	to set the installation language. „e“ for English (default), „g“ for German
<b>/D</b>	to set the installation path. This must be an absolute path. If there are blanks in the path you have to surround them by apostrophes. Without this argument the Client will be installed into the default path. “<Program Files>\Telemotive AG\TSL”
<b>/DS</b>	to define if you want to install a Desktop symbol or not. "0" = no, "1" = yes (default)

**Table 5.1: Arguments for console installer**

You can call the help file by using /h.

### 5.7.2 Uninstaller

The TSC installation installs two different uninstaller into the installation folder. For uninstalling the client with a batch script you have to use the **\*uninst\_silent.exe\*** which will not create any messages. Errors will be shown at the console.

## 5.8 Using the Client Library

For automation or implementing of some client functions into other programs we offer a **C++ Client-lib**.

The Client-lib can be downloaded from Telemotive ServiceCenter at **[Software-Downloads]**.

The documentation is included into the download package.

[Index](#)

## 6 General functions of the Telemotive System Client

This section describes the usage of the TSC in general and shows how to use the different modules.

You can start the TSC by using the desktop icon. Double-click the icon to start the application.


Otherwise you can start the client over the menu **[Start] → [All programs] → [Telemotive AG] → [System Client] → [Telemotive System Client]**.

### 6.1 The menu bar of the client

There are four menu items in the menu bar of the client.

#### 6.1.1 File

The item **[File]** allows closing the client.

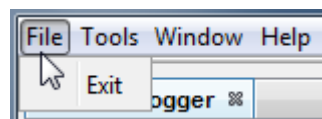


**Figure 6.1: Menu item [File]**

#### 6.1.2 Tools

The item **[Tools]** allows creating a bug report of the client. For creating a bugreport of the logger, please see *chapter 16 Bug report*. Additionally you can switch over to **Telemotive Download Terminal** which is a licensed feature and is described in an own manual:

[bP2-Mini\\_Telemotive-Download-Terminal\\_UserGuide.pdf](#)

With **[Tools] => [Settings]** you'll open a new window where some of the basic settings of the client and it's modules can be configured. These options are described in the modules where they were needed.

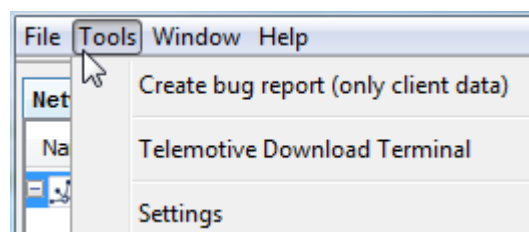

**Figure 6.2: Menu item [Tools]**

### 6.1.3 Window


The item **[Window]** allows specifying which windows on the client screen is visible. It also allows to reset the window settings to default values.

Every tab can be closed by the **[X]** in the title bar and reactivated by the menu items.


Network Logger ☒

Favorites (locally saved offline data, configuration, bug report) ☒

By using **[Window] => [Output] / [Strg & 4]** it is possible to show a window with additional output information at the bottom of the client.

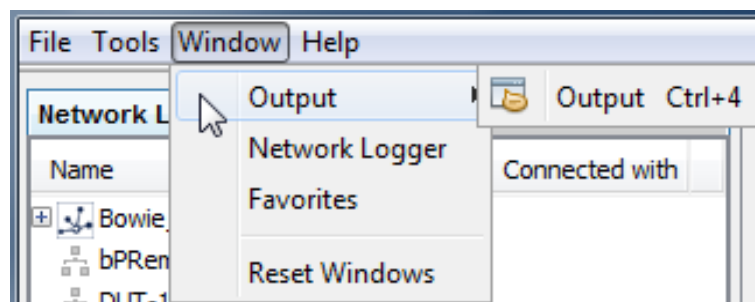

**Figure 6.3: Menu item [Window]**

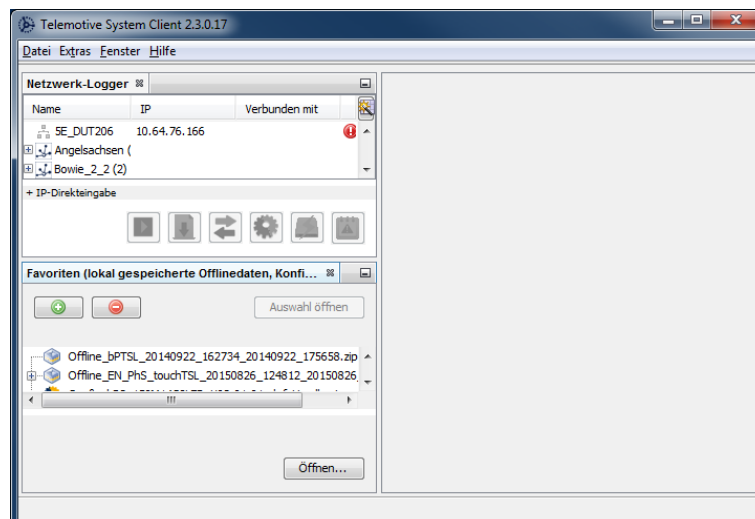


**Figure 6.4: Standard view after [Reset Windows]**



## 6.1.4 Help


The item **[Help]** offers access to general information about the client and a link to the main manuals.

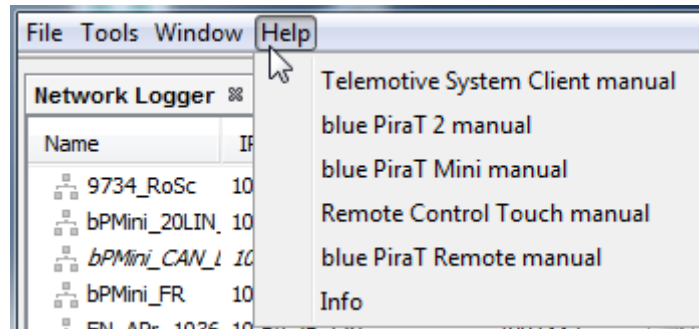

**Figure 6.5: Menu item [Help]**

## 6.2 The “Network Logger” tab

You can find a list of connected data loggers in your network in the <Network Logger> tab. You can configure which details from the connected data loggers will be shown by right clicking the header of the table. Possible details are the IP-address, the serial number, the user, which the data logger is connected to and the status of the device. The name will always be shown. After selecting one of the devices, you have access to the following applications.

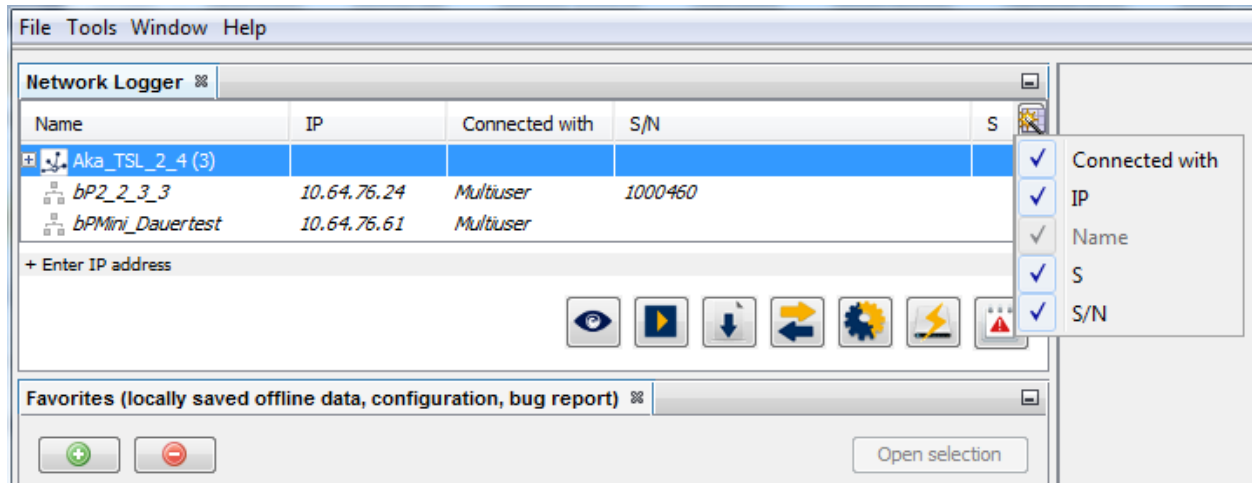

**Figure 6.6: Start screen of the client**

You can choose and selecting the columns you need by right clicking the first row.



**Figure 6.7: Application icons**


### Available applications:

1. Telemotive Live View
2. Online Monitor
3. Download data
4. Convert data
5. Open configuration
6. Update firmware
7. Open bug report

## 6.3 Starting an application


Clicking on one of the applications establishes an exclusive connection to the logger (no other clients will be able to connect). But you can have access to the logger with different modules on the client at a time, e.g., **[Open Configuration]** and **[Download data]**.

If another client is already connected to a logger, the clients' user is shown in the <Connected with> column and the row is displayed as italics. Also the applications are grayed out and cannot be activated. Its only possible to get access to these devices by **[Live View]**.

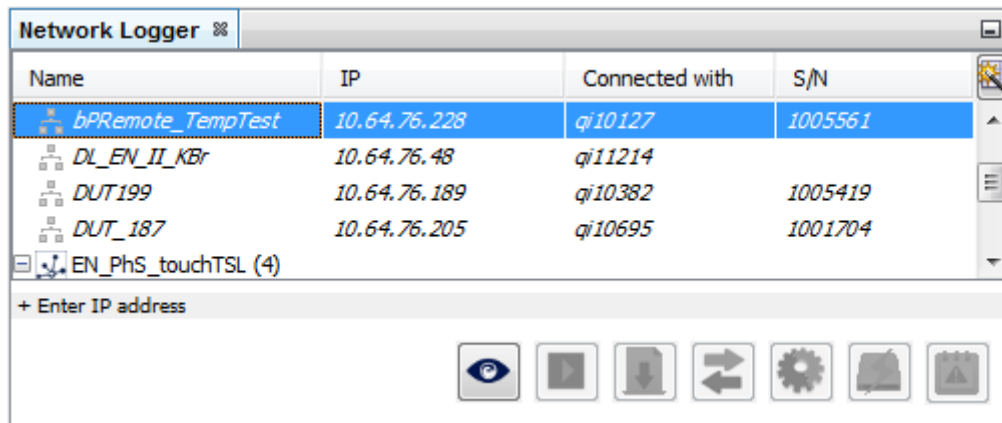

**Figure 6.8: Devices which are used by other users**


A device in error mode is shown in red with an error icon, all applications are still available.

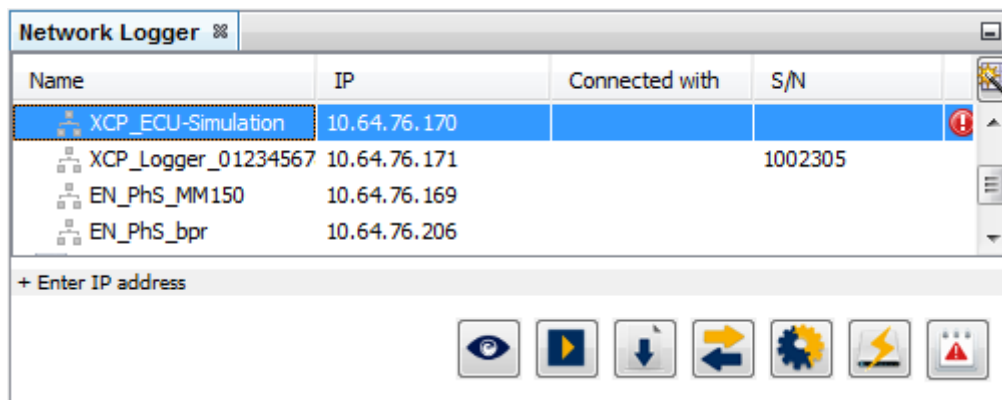

**Figure 6.9: Device in error state**

The context menu (accessible via right clicking on a logger) allows quick access to the applications as well as the following actions:

- basic functions of the client,
- upload configuration (upload a stored configuration directly),
- reset the device to default configuration (only available for data loggers in error mode),
- activate the LED of the device (to identify a physical device),  
blue PiraT Mini: red STATE-LED                      blue PiraT2: orange Memory-LED
- set date and time (synchronized to PC time) and
- restart or shutdown the device

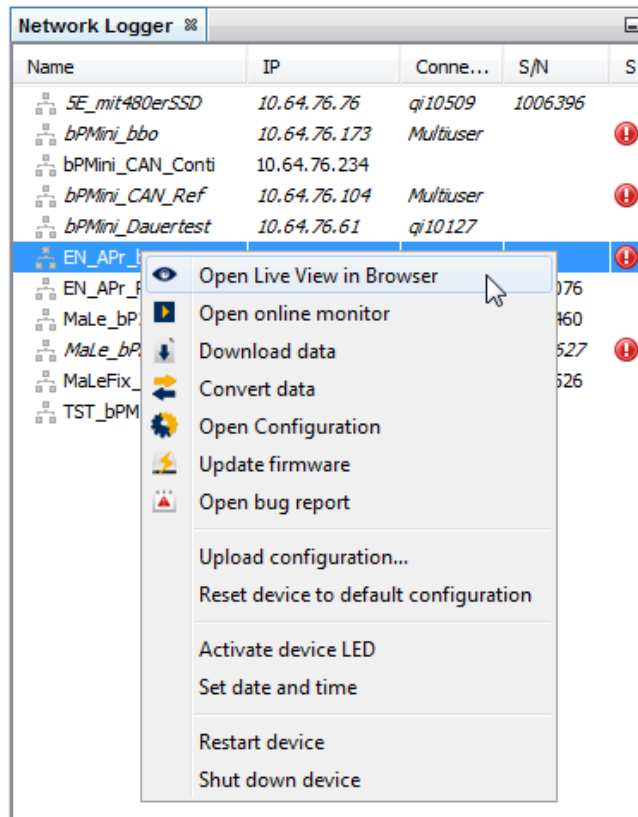


**Figure 6.10: Context menu**

## 6.4 The tab “Favorites”

The tab <Favorites> allows displaying saved offline data, configuration and bug reports.

At first the list is empty. To add an offline data set, click on the green **[+]** to select the needed data set. It is also possible to load the files per drag & drop. A double-click or the button **[Open selection]** allows to open entire tree files or .zip in the list.

The red **[-]** removes the selected entrees from the list.

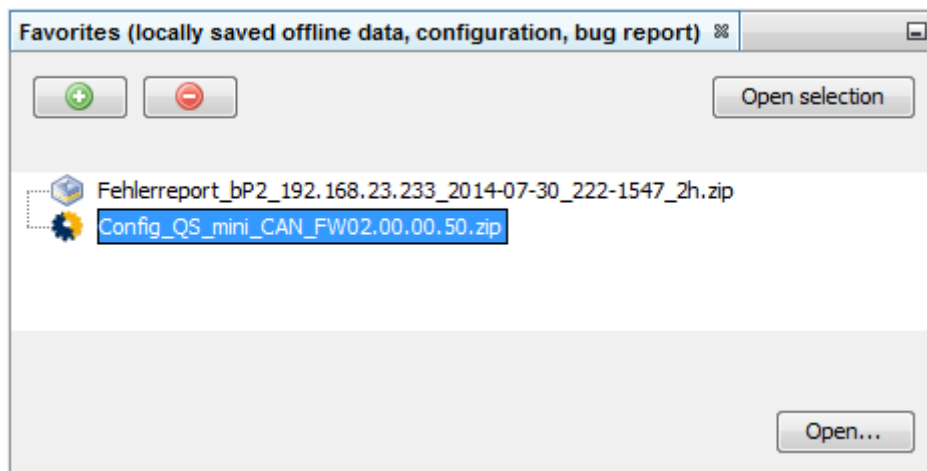


**Figure 6.11: Tab “Favorites”**

## 7 Configuration of the data logger

This chapter describes the configuration of the logger by using the client.

### 7.1 Opening the application “Configuration”


In the tab <Network Logger> click a logger that is not already connected.

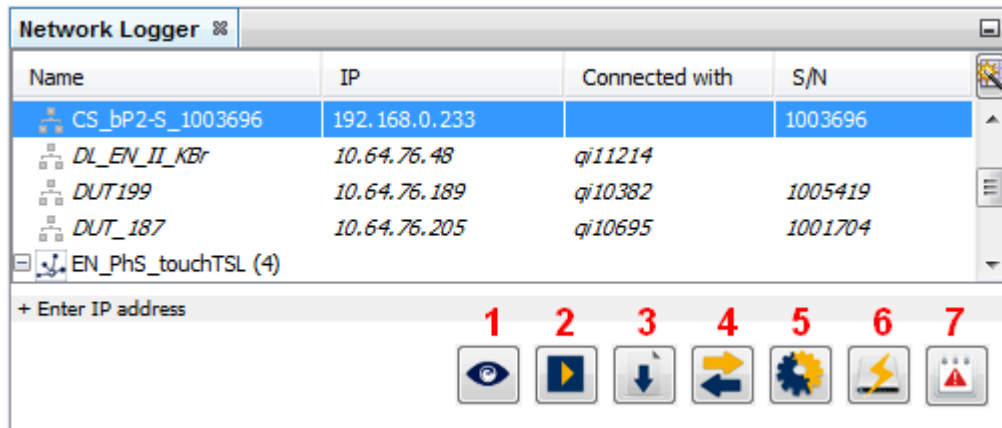

**Figure 7.1: Selecting logger**

Click on the application [Open configuration] (5).

The tab <Configuration> is opening. The configuration tree is displayed in the main display area on the left.

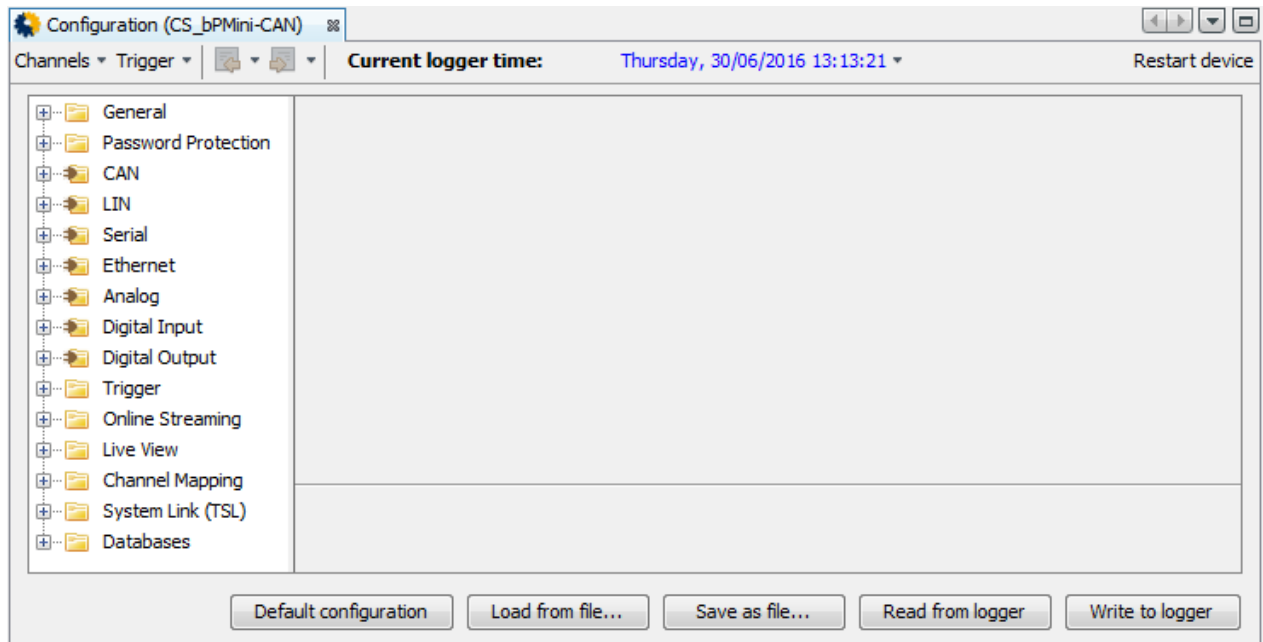

**Figure 7.2: Tab “Configuration”**

## 7.2 The tab “Configuration”


The toolbar at the top of the tab contains the following panels.

**[Channels]** activates or deactivates all logging channels. The channel settings are preserved.

**[Trigger]** enables or disables all triggers (exceptional the standard trigger by the **[Trigger]** button).

**[Current logger time]** shows the logger time. By clicking the arrow the logger time can be synchronized to PC time.

**[Restart device]** makes a restart of the data logger, for example to activate a configuration that needs a restart.

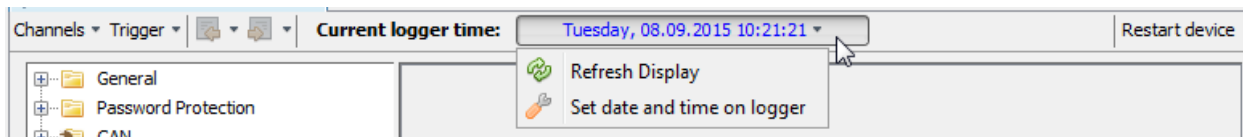

**Figure 7.3: Toolbar in the tab “Configuration”**

The button bar at the bottom of the tab contains the following buttons.


Button	Effect
Default configuration	resets all settings back to factory defaults Changes are only local! To apply changes on the device use the <b>[Write to logger]</b> button.
Load from file...	loads all settings from a file
Save as file...	saves all settings to a file
Read from logger	loads the most current settings from the device Any local changes will be lost!
Write to logger	writes all settings back to the data logger Changes are applied immediately. Exceptions are displayed by the client and the device can be restarted directly.

**Table 7.1: Buttons in the tab “Configuration”**

## 7.3 Loading and saving configuration


Loading and saving locally helps applying the same configuration to several data loggers. The following procedure explains how to do it.

1. Setup the desired configuration of one of the data loggers.
2. Save this configuration to a local file by clicking on the Button **[Save as file...]**.
3. Choose the desired saving location.
4. Type in a file name.
5. Click the **[Save]** button.

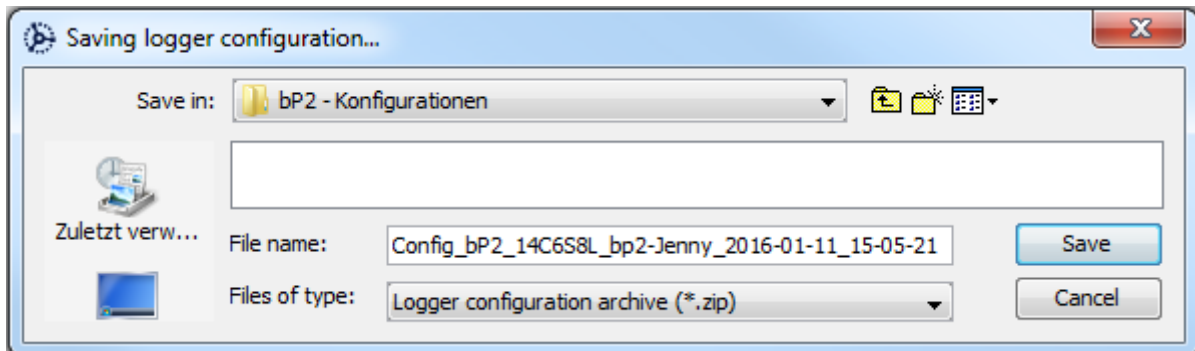

**Figure 7.4: Saving configuration**

6. For the remaining data loggers, load this file.

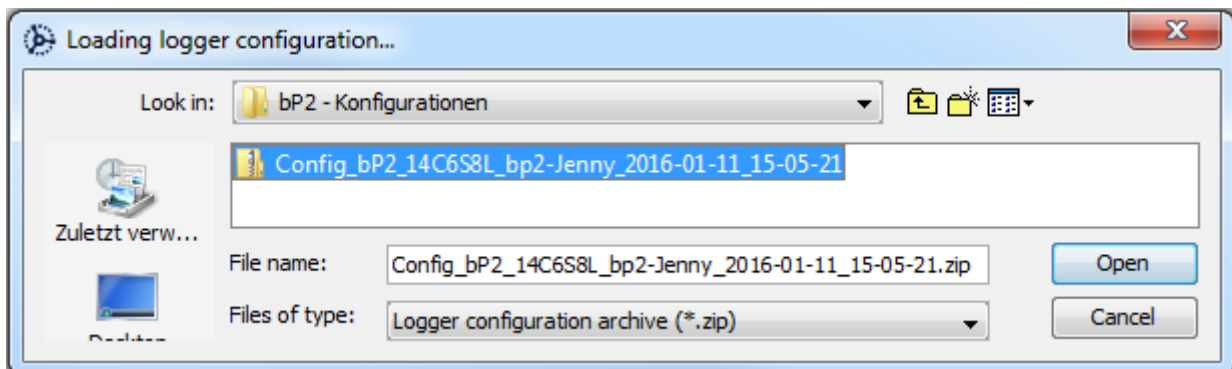


**Figure 7.5: Loading configuration**

7. Then apply the configuration to each selected device by clicking **[Write to logger]**.

## 7.4 Changing date format

Under **[Tools]** → **[Settings]** → **[General]** the format of the date could be changed. This is unique to the illustration at the user interface. After a reboot of the client, the modifications are assumed.

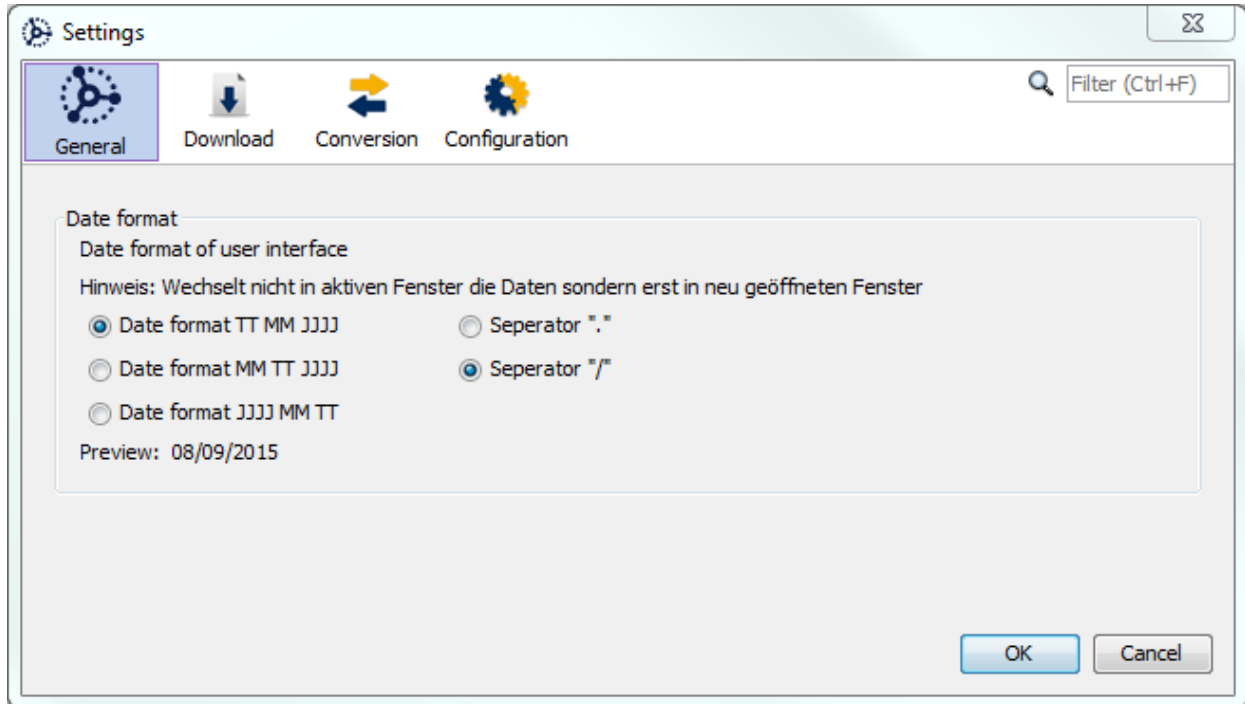

**Figure 7.6: Changing date format**

[Index](#)



## 8 The configuration tree

This chapter describes the configuration tree and all changeable parameters the user will be able to configure.

The configuration tree is split into **categories** with **sub categories**. Each category can be expanded by clicking on the **[+]** at the left.

Selecting one of the sub-categories will open the corresponding configuration form.

**Note:**


**Any network changes have to be applied to the device by clicking on [Write to logger]. If changes are applied only after restart, the client will inform you and offers the direct restart.**

### 8.1 General

The following sections describe the general settings of the data logger.

#### 8.1.1 Name

Assign a name to the device. This name will be used in trace file names. The Name of configuration can be output on the display of logger (under Menu / Info).

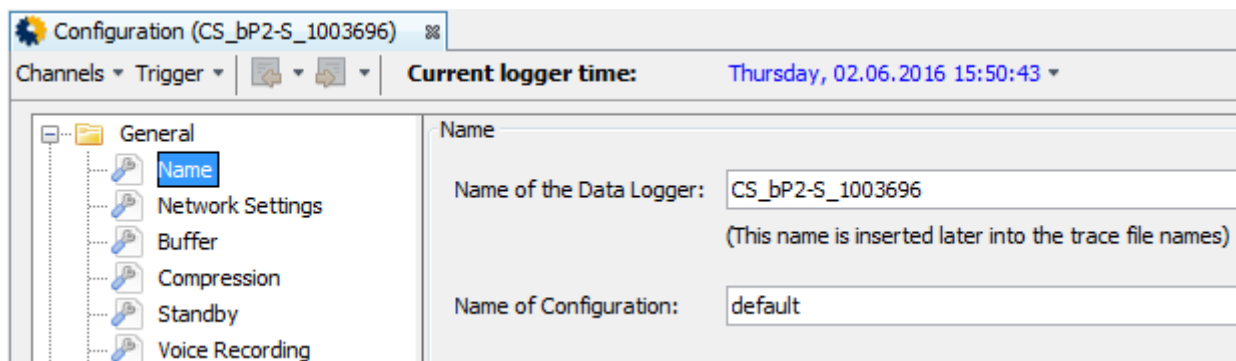

**Figure 8.1: Configuration – General – Name**

## 8.1.2 Network settings

Network settings can be modified at this point. Please read the descriptions carefully about the connection of the data logger to a network before modifying these settings.

### Notice:

**If “DHCP server” is selected as the <DHCP mode>, you can also modify the IP address and subnet mask of the logger. This is necessary, when the control unit is in the same subnet as the logger client interface.**

**General**

- Name
- Network Settings**
- Buffer
- Standby
- Voice Recording
- Zone Settings
- External Storage

**Password Protection**

- CAN
- LIN
- Serial
- Ethernet
- Analog
- Digital Input
- Digital Output
- Trigger
- Online Streaming
- Live View
- Channel Mapping
- System Link (TSL)
- Databases

**Network Settings**

**Important notice:**  
Due to a wrong network setting it might be impossible to reach the data logger any more. In this case the network configuration can be resetted by a long press of the ON button (ca. 20 sec.) to default settings: DHCP server with IP:192.168.0.233. Afterwards the data logger can be reached again by using a direct connection with a PC/Laptop.

**DHCP mode**

- DHCP Server (default setting)**  
The data logger assigns IP addresses to the connected PC/laptop. This setting must be used if the data logger is directly connected to a Laptop/PC via a network cable. This setting must not be used if the data logger is connected to a network!
- DHCP Client**  
The data logger obtains its IP address from the network. This setting must be used, if the data logger is connected to a network. This setup has to be clarified with and confirmed by the appropriate network administrator! Telemotive AG does not assume any responsibility for resulting problems!
- No DHCP**  
The data logger uses a fixed IP address and no DHCP. This setting can be used in special cases. One must make sure that the IP address is available in the network. If the data logger is directly connected to a PC/laptop, the PC/laptop must be set to a fixed IP address in the same subnet. If the data logger is connected to a network, then this setup has to be clarified with and confirmed by the appropriate network administrator! Telemotive AG does not assume any responsibility for resulting problems!

IP Address of Data Logger (Default: 192.168.0.233)    192 . 168 . 0 . 233

Subnet Mask of the Data Logger (Default: 255.255.255.0)    255 . 255 . 255 . 0

Default configuration    Load from file...    Save as file...    Read from logger    Write to logger

**Figure 8.2: Configuration – General – Network settings**

### 8.1.3 Resetting network settings

**Important note:**

**Due to a wrong network setting it might be impossible to reach the data logger any more. In this case the network configuration can be resetted by a long press on the [ON / Trigger] button (bP2 ca. 5 – 10 sec. during operation / bP Mini ca. 20 sec. during startup) to default settings: DHCP server with IP 192.168.0.233.**

After a reboot the data logger can be reached again by using a direct connection with a PC/Laptop.

### 8.1.4 Buffer

The Buffer option affects logger behavior when running out of disk space.


If the checkbox **Circular buffer mode active** is enabled, the logger will stop logging additional data until the issue is resolved manually.

If the checkbox **Circular buffer mode active** is enabled, the logger will automatically delete the oldest data as required and remain operational.

In <Protection of marker data> it is possible to delete the video data first. Also data around a marker can be protected against being overwritten.

**The length of this data block is specified below.**

If a time is given as the data block end, and the data logger shuts down before this time, then the marker data protection ends with the shutdown of the data logger.

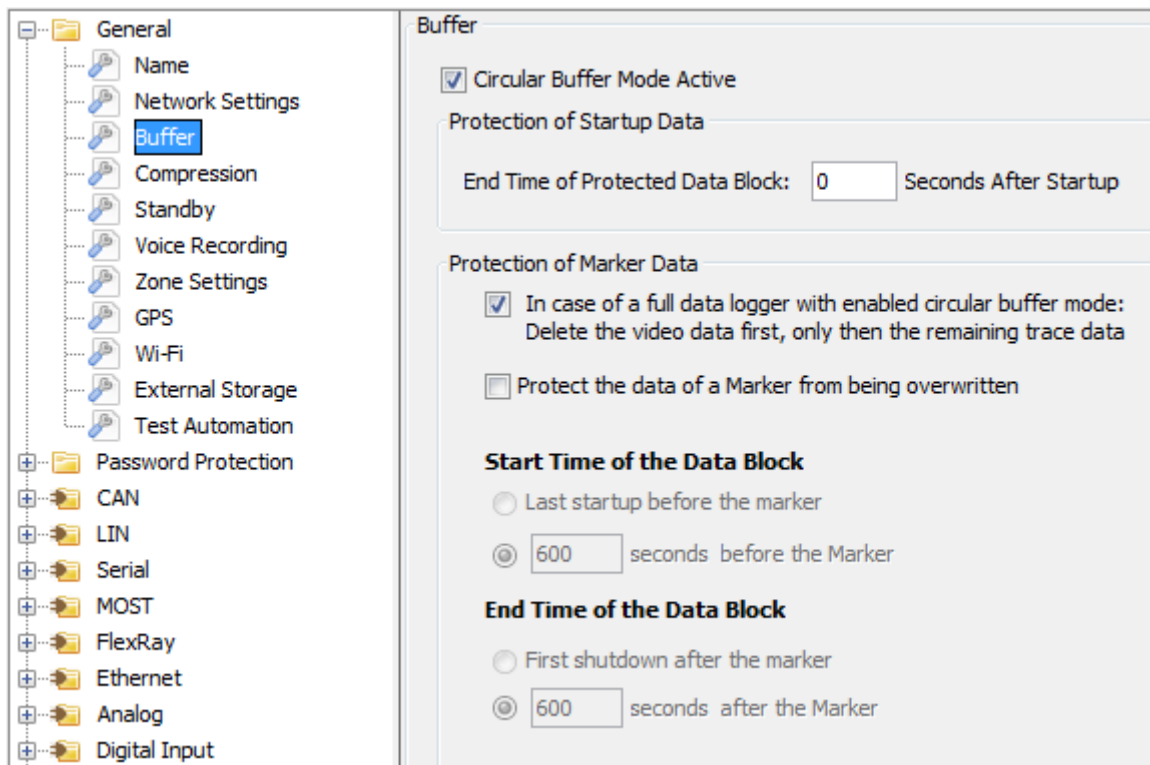

**Figure 8.3: Configuration – General – Buffer**

**Note:**

**When the buffer is activated, this setting is valid for internal storage as well as for external storage.**


[Index](#)

### 8.1.5 Compression

Trace files can be compressed during recording on blue PiraT2 by activating the checkbox **Compress trace files during recording**. The blue PiraT Mini has an internal compression algorithm which compresses all data which will be stored to the logger automatically.

If this compress mode is activated, the blue PiraT2 switches automatically to the normal mode, if the traffic at the recorded busses is too high.

In this case, the trace data on the data logger are mixed in zipped and normal data. If you convert the data by the client, it has no effect.

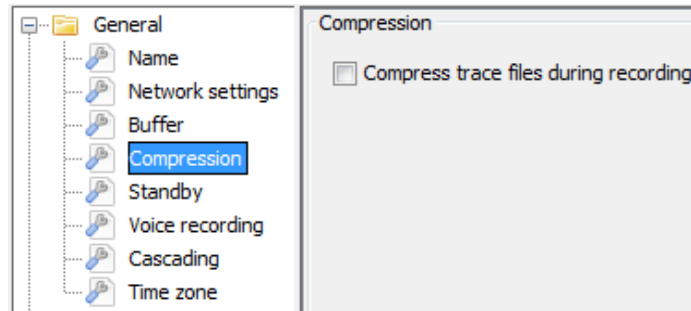

**Figure 8.4: Configuration – General – Compression**

**Note:**

**This option is not available for blue PiraT Min and Blue PiraT Remote because these devices have an integrated compression in their data system.**

### 8.1.6 Standby


The Standby setting provides the setup of the shutdown condition of the data logger. It is possible to deactivate the automatic standby with **Deactivate automatic standby** but this must be ticked only if the logger is connected to a sufficient power supply.

If the data logger is not connected to a network at the front Ethernet port and does not receive any data during the timeout entered in the upper text field, then it shuts down and enters standby mode.

If the data logger is connected to a network at the front Ethernet port with active link and does not receive any data during the timeout entered in the lower text field, then it shuts down and enters standby mode.

**Hints:**


1. **If the Client is connected to the logger (e.g., during the configuration), the logger never enters the standby mode.**
2. **A TSL compound is handled as one device, so there are the same rules for the standby conditions.**

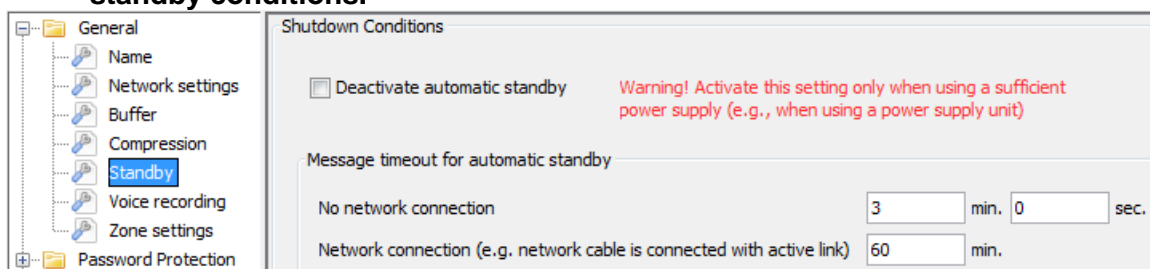

**Figure 8.5: Configuration – General – Standby**

### 8.1.7 Voice recording

Voice recording settings allow adjusting the maximum length for each entry recorded by the **blue PiraT Remote** (bPR) as well as with the optional devices **Remote Control Voice** (RCV) and **Remote Control Touch** (RTC).

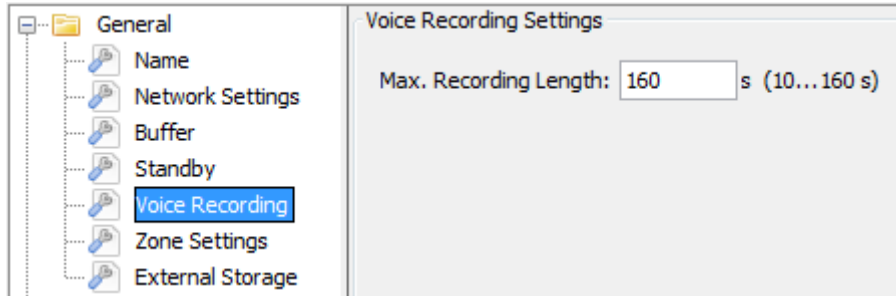


**Figure 8.6: Configuration – General – Voice recording Settings**

### 8.1.8 Zone settings


After choosing [**Zone settings**] in the configuration tree, the settings regarding the internal clock of the data logger appear. These settings regard the time zone of the data logger and enabling the automatic daylight savings adjustment.

If the checkbox **Adjustment for daylight savings** is selected, the data logger automatically switches between summer and winter time, without the need to adjusting the clock manually.

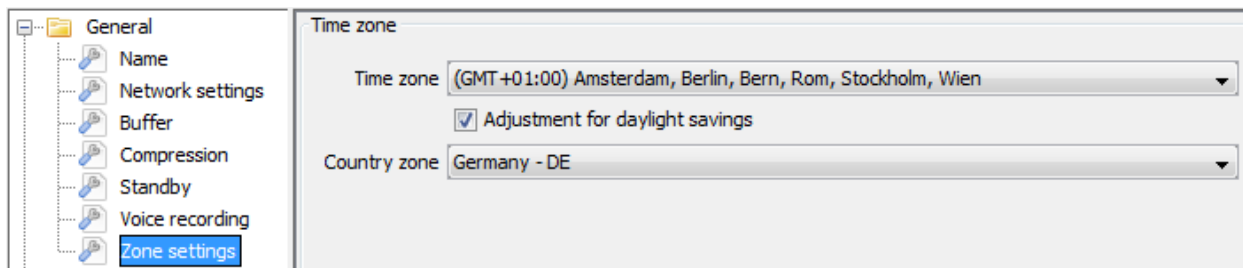

**Figure 8.7: Configuration – General – Zone settings**

The time can be set in the client toolbar in every module.

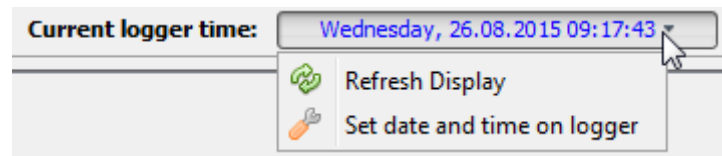

**Figure 8.8: Current logger time on toolbar**

**Important note:**

**If you need to change the time zone of your computer system you MUST restart the TSC to take effect to these changing, e.g., for setting the time on the data logger.**

The <Country zone> is ONLY needed if your logger has a Wi-Fi module.

By changing the <Country zone> you can set the frequency and transmission power which should be used in the country where you want to use the logger.

## 8.1.9 Parallel logging to External Storage

Parallel logging to External storage, offers the possibility of gathering and handing over the logged data after a test drive in an easy way without connecting the logger to a system and download the data by the client.

In this mode the tacedata will be saved internal on the logger first and when a block was saved completely it will be copied additional to the external storage.

### Supported Media

**blue PiraT2 / 5E:** CF card or USB Memory


**blue PiraT Mini:** SD card or USB Memory

**blue PiraT Remote:** SD card or USB Memory

Detailed information can be found in the User Guide of the used data logger.


### Note:

**Telemotive AG recommends the testing of every external storage before using it in a measurement. We suggest that especially USB devices with USB 3.0 are sometimes not recognized by the system.**

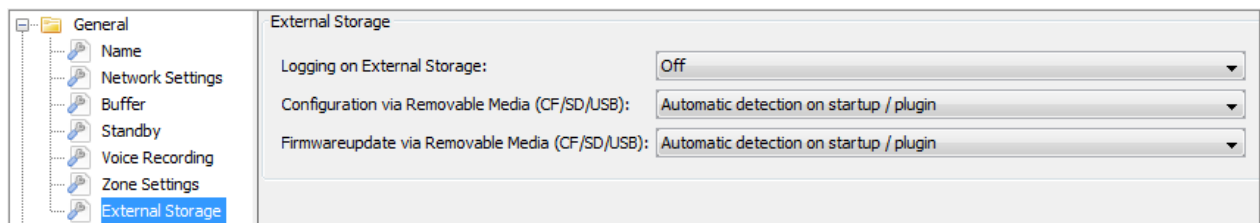

**Figure 8.9: Configuration of External Storage**

Additional to recording trace data on the internal hard disk only (default), you can select to record **[Parallel on internal storage and removable medium ...]** at the first dropdown menu.

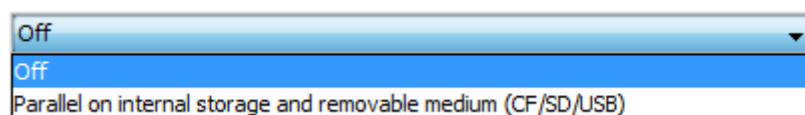

The removable medium can be plugged in during the start of the logger or while it's working.

If **[Parallel on internal storage and removal medium ...]** is selected and the medium is identified, all data will be stored additional to the external medium.

Selecting the active mode is only possible via the client. If the recording mode is selected, recording starts immediately after identification of the first storage medium. If two media are plugged in at power on, the CF/SD card is preferred prior to USB media.

A selection of the medium by using the configuration is not possible – the first plugged storage medium it is always active. For activating the other medium, you have to remove both media and plug in the second medium again.

**Attention:**

To prevent data loss the **External Storage** should only be removed in the idle state of the logger.


**Note:**

While using **Parallel logging to External storage** the trace files will be stored to the internal storage first and when a trace block is closed and saved internal it additional will be copied to the removable media.

**8.1.9.1 Configuration via external storage**

To configure the logger via a configuration file on an external storage media, a folder named **\*configuration\*** must be created on the external media in the root directory. In this folder the zipped configuration file has to be saved. It's only allowed to have one configuration in this folder.

The menu item **[Configuration via Removable Media]** offers four or three options, depending on the used device:

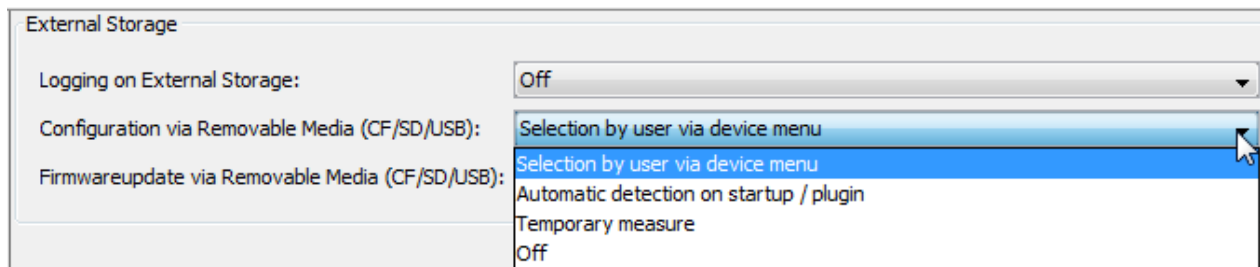

**Figure 8.10: Configuration via Removable Media**

**Selection by user via device menu**

This selection (only available for blue PiraT2 /5E) allows to use the configuration by using the display menu of the logger. You'll find a detailed description in the manual of blue PiraT2

**Automatic detection on startup / plugin**

After the startup or while the device is running, the configuration will be updated when the medium is plugged in and prepared correctly.

**Temporaty measure**

The configuration from the removable medium will be copied to the logger and used until the logger restarts or was shut down.

- ⇒ Setting a new configuration and flashing a firmware to the logger are disabled when [Temporary measure] is active!

**Off**


This setting deactivates the option **[Configuration via Removable Media...]**



### 8.1.9.2 Firmwareupdate via external storage

To use the option **[Firmwareupdate via external storage]** there must be a folder called **\*update\*** in the root directory of the external storage. Then you have to copy the firmware file into this folder. It must be only one firmware package in this folder. This firmware must have a higher or lower version number as the installed one. A firmware package with the same version will be ignored.

The menu item **[Firmwareupdate via external storage]** offers three or two options, depending on the used device:

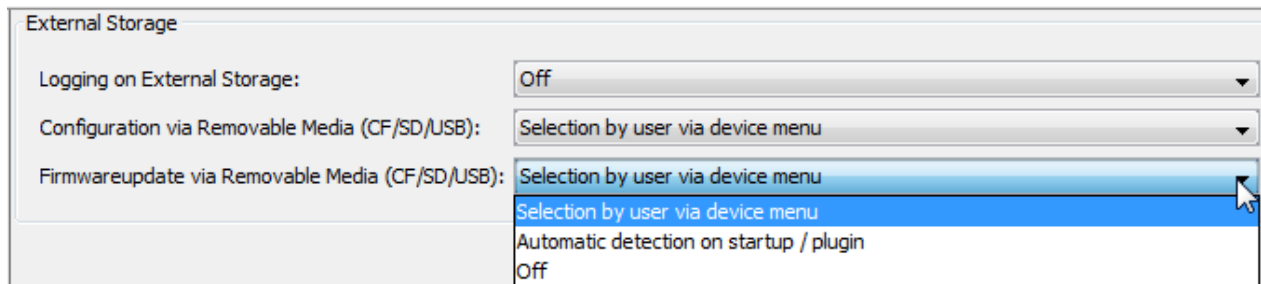

**Figure 8.11: Configuration via Removable Media**

#### **Selection by user via device menu**

This selection (only available for blue PiraT2 /5E) allows to perform the firmwareupdate by using the display menu of the logger. You'll find a detailed description in the manual of blue PiraT2.

#### **Automatic detection on startup / plugin**

After the startup or while the device is running, the firmware will be updated when the medium is plugged in and prepared correctly.

#### **Off**

This setting deactivates the option **[Firmwareupdate via external storage]**.

#### **Note:**

**When a valid folder for configuration as well as one for firmware update exists, the firmware will be flashed at first and afterwards the configuration will be transferred.**

### 8.1.9.3 Stopping Parallel logging

There are several possibilities for stopping parallel logging:

#### **Shutting down the device**

Shutting down the device will close all active trace files which will be saved to the device as well as to the removable media.

After that the media can be pulled out.

#### **Pulling out the media**

At blue PiraT2 / 5E it must happen by using the option [5] Memory Device => [5] Safely remove ext. Mem on the display.

**If the External Storage is removed while the logger is just working, data loss may happen probably!**

When a valid External Storage with data is connected with a computer system it can be used like an offline data set.


## 8.2 Password Protection

The **[Password Protection]** gives the customer the possibility to protect selected functions of the logger to be sure that these settings can't be modified by unauthorized persons.

**Note:**

**The password protection can be configured for a single logger only. It is not possible to configure it for a complete TSL-network.**

You can create user who are only able to change defined settings.

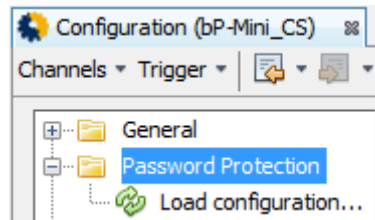

**Figure 8.12: Configuration – Password Protection**

These functions can be protected:

- Set date and time
- Delete data
- Reset marker counter
- Change password protection
- Change configuration (without password)
- Change configuration (Signal based filters only)
- Uploading Wine DLLs (seed & Key only)
- Resetting to default configuration
- Update firmware
- Deleting or installing licenses

Functions that just read from the logger like data download and Live View can't be restricted.

At blue PiraT2 these functions are protected to be modified by the rotary knob on the front side too.

The existing administrator with the user name "admin" can't be deleted and basically possesses all permissions.

**Note:**


**The default password for the administrator is "admin" and should be changed at the first usage.**

The Administrator can create user / accounts and give them different rights for configuring the data logger.

[Index](#)


## 8.2.1 Activating password protection

To activate the password protection please open the folder **[Password Protection]** and click on **[Load configuration...]**.

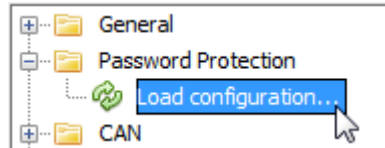


**Figure 8.13: Configuration – Password Protection – Load configuration...**

By activating the checkbox **[x] Password Protection Active** at the sub-category **[General]** the feature will be enabled.

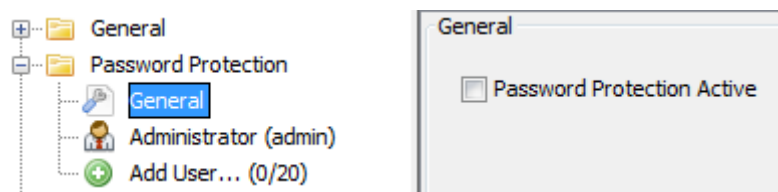


**Figure 8.14: Configuration – Password Protection – General**

At first you should change the password for the administrator at the sub-category **[Administrator (admin)]**. By clicking the button **[Change Password...]** a new window is opening where you can set the new password. Enter the new password in both text fields to confirm it and click **[OK]**.

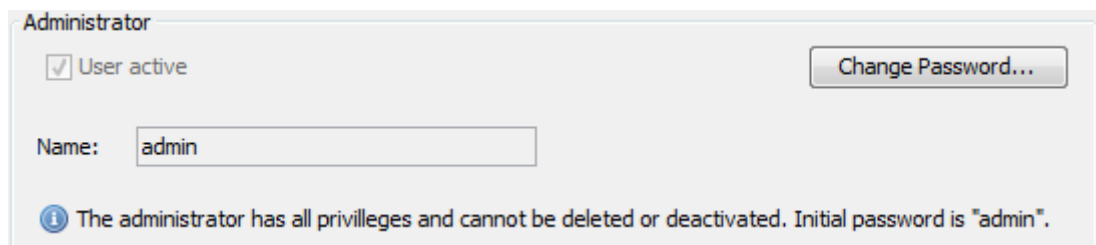

**Figure 8.15: Configuration – Password Protection – Administrator (admin)**

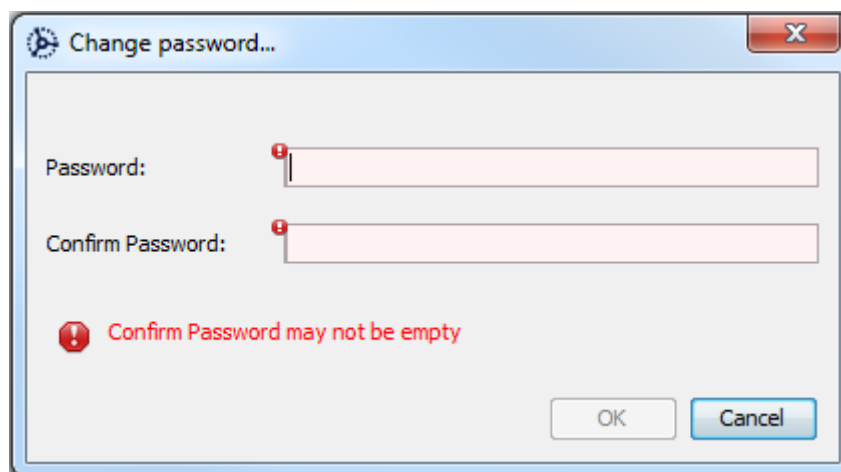


**Figure 8.16: Changing password**

## 8.2.2 Adding new user

The administrator can create up to 20 additional users and give them the needed rights. The number at the end shows how many users are created yet.

Click on **[Add User... (.../20)]**. A new dialog will be opened.

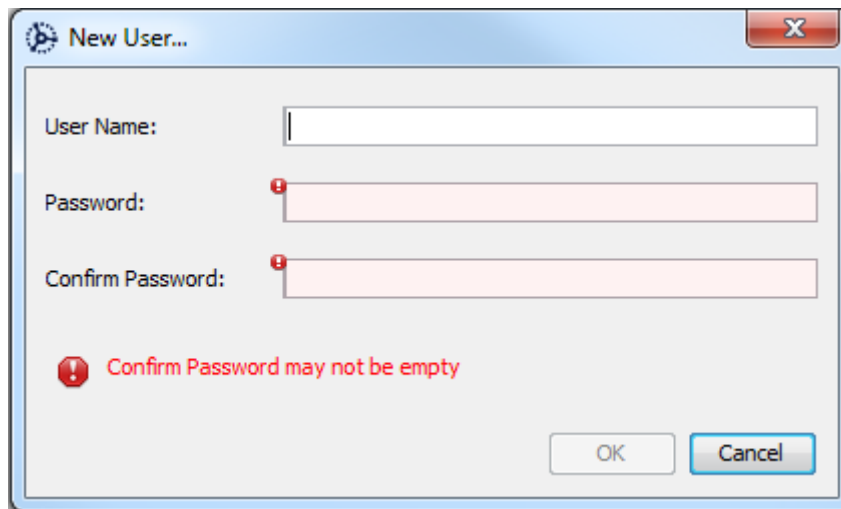


The screenshot shows a dialog box titled "New User...". It has three input fields: "User Name:", "Password:", and "Confirm Password:". The "Confirm Password:" field has a red error icon and a message: "Confirm Password may not be empty". There are "OK" and "Cancel" buttons at the bottom right.

**Figure 8.17: Configuration – Password Protection – Add User...**


The username must be unique and can't be used more than once. The password confirmation will be checked and by clicking **[OK]** the new user is applied.

On the user settings side the user can be configured. In this window the user as well can be activated, deactivated, renamed or his password can be changed.

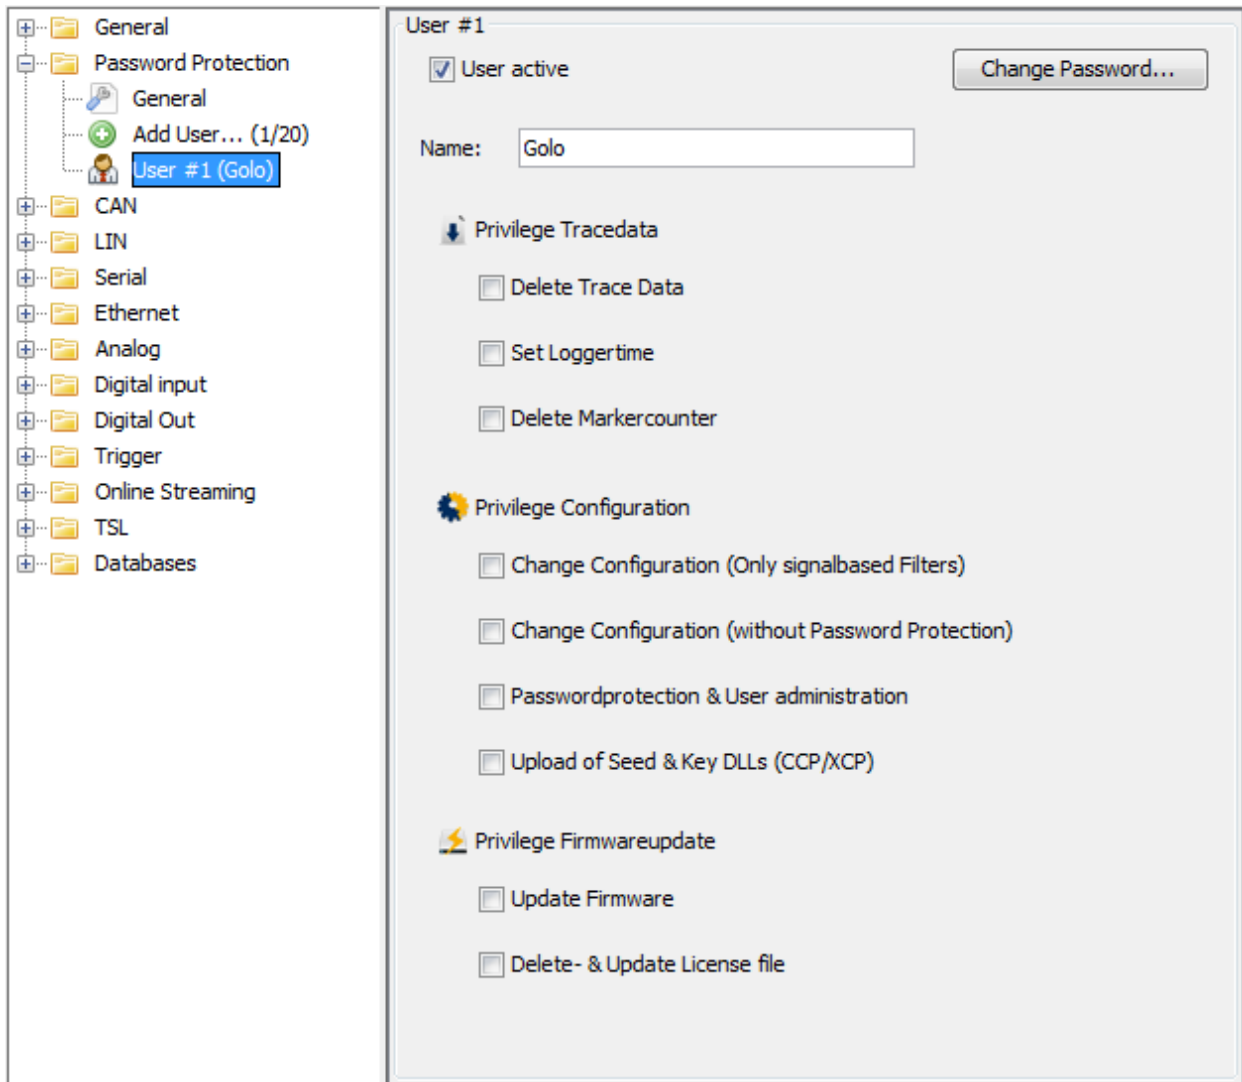


**Figure 8.18: Configuration – Password Protection – User**

The password protection takes effect when data should be sent or loaded from the logger. The request will be stopped and a confirmation window for login will be shown.

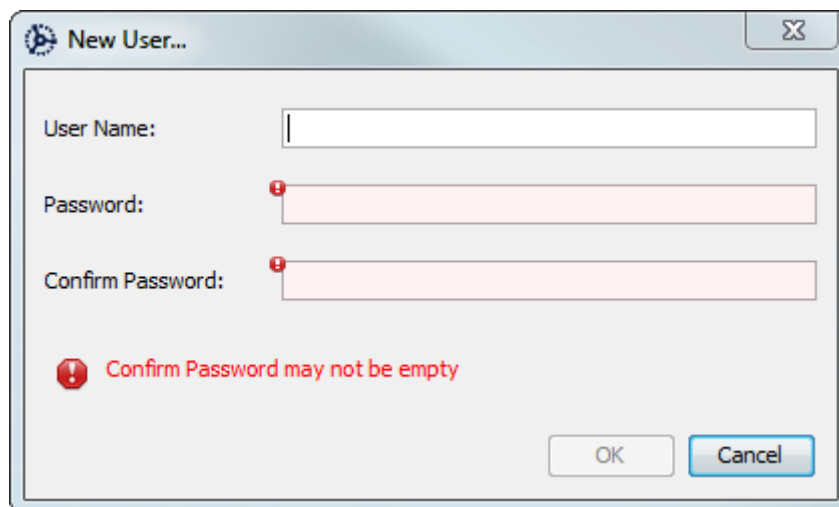

**Figure 8.19: Device login**

When the user has not the right to do this operation he gets an error message.

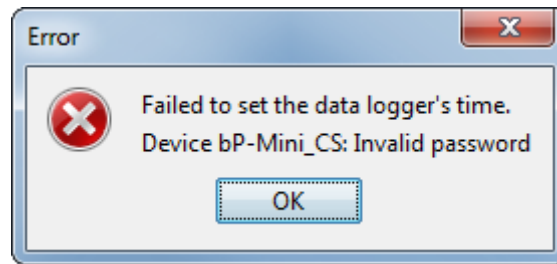


**Figure 8.20: Error message due to lack of authorization**

When the user has the right for this operation the operation will continue without error.


### 8.2.3 Visibility of the Password Protection sub-categories

When the configuration of the logger is called the next time, only the folder **[Password Protection]** and the sub-category **[Load configuration...]** is shown.

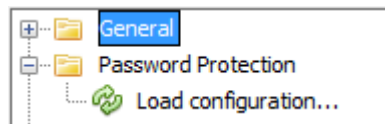

**Figure 8.21: Password Protection not visible**

After loading the password configuration the whole **[Password Protection]** is visible, if the current user has the right to see this point.

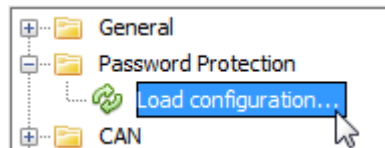

**Figure 8.22: Load configuration**




**Figure 8.23: Password Protection visible**


## 8.2.4 The userlist

When new users are created you'll see an overview of the existing users and their rights by clicking on **[Password Protection]**.

Userlist	Active	Privilege Tracedata	Privilege Configuration	Privilege Firmware
martin	<input checked="" type="checkbox"/>	Active: (3/3) ...	Active: (3/4) ...	Active: (0/2) ...
robert	<input checked="" type="checkbox"/>	Active: (3/3) ...	Active: (3/4) ...	Active: (2/2) ...
dominik	<input checked="" type="checkbox"/>	Active: (0/3) ...	Active: (2/4) ...	Active: (0/2) ...

**Figure 8.24: Configuration – Password Protection: Userlist**


In this overview all the privileges can be easily modified with the  buttons at the “Privilege ...” columns, when the current user has the right to do that.

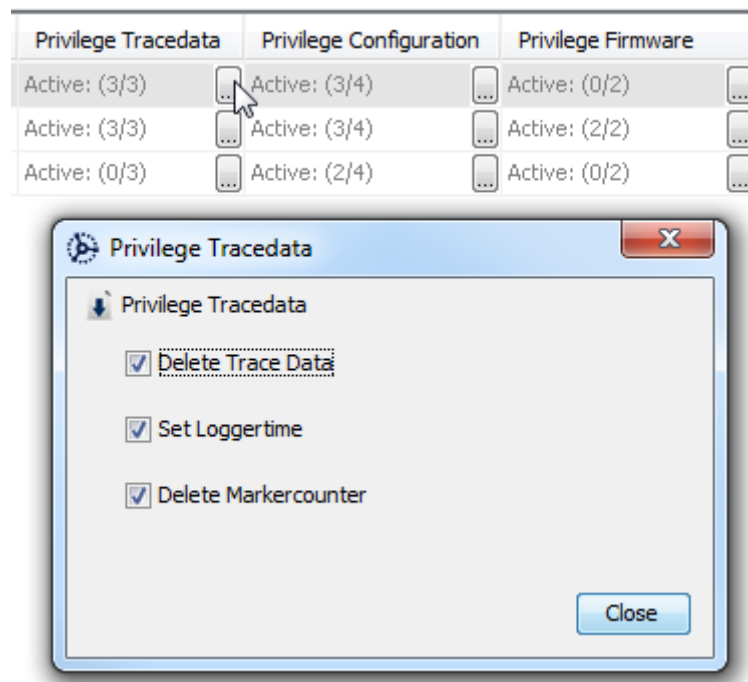

**Figure 8.25: Changing users privileges**


### 8.3 General settings of the further ports

Some settings are common to more than one bus or feature. This section will provide an overview for these settings.

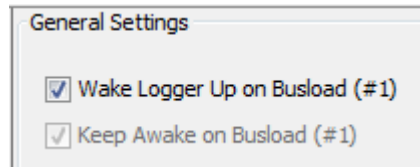


**Figure 8.26: General settings – Wakeup system**

This setting affects one or several (the affected channels are listed in brackets) channels and, if checked, allows the channel(s) to wake the system from standby mode.

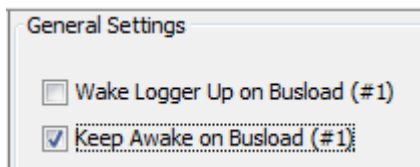


**Figure 8.27: General settings – Keep awake on busload**

This setting affects one or several (the affected channels are listed in brackets) channels and, if unchecked, allows the standby check to ignore this channel, meaning that the system may enter standby mode even though a channel is still receiving data. **Keep awake on busload (...)** is only available if **Wakeup system (...)** is enabled.

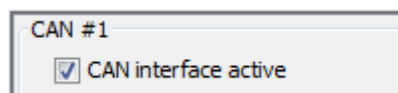

**Figure 8.28: \*port\* – \*port\* interface active**

Unchecking this setting disables the channel completely. It will not be logged or considered for standby checks (wakeup, keep awake).

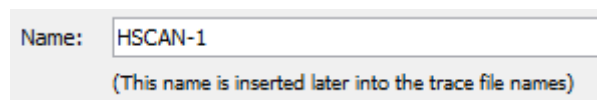


**Figure 8.29: \*port\* – Name**

This setting assigns a name to the channel. This name will be used in log files to easily identify the channel.



## 8.4 CAN

CAN settings are accessible by opening the **[CAN]** folder. In the right window you see an overview of all channels and can modify some general settings of the CAN bus.

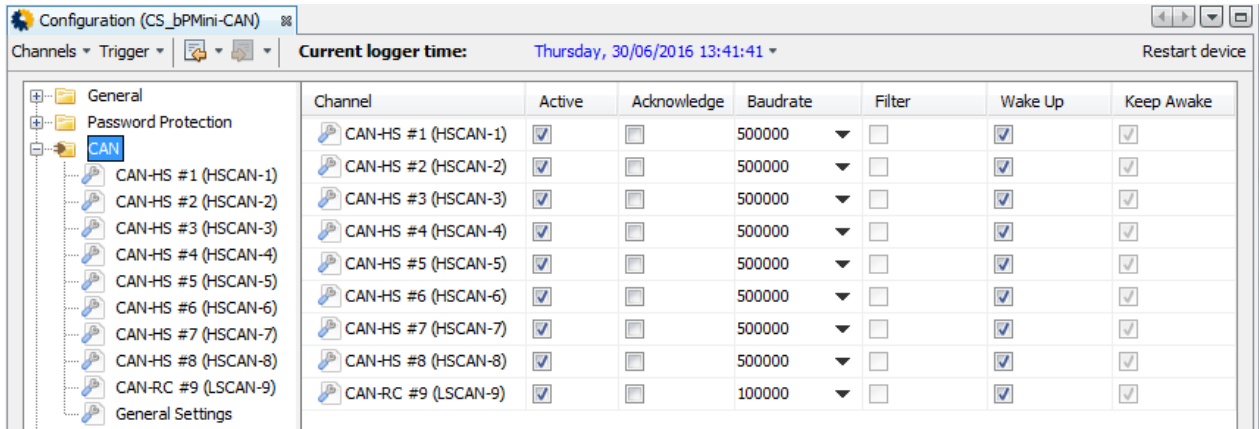


**Figure 8.30: Configuration – CAN: Channel (overview)**

### 8.4.1 CAN-HS-/LS

All CAN interfaces are listed in the configuration tree. Selecting an interface will open its configuration form.


Each CAN interface, High Speed CAN (CAN-HS) or Low Speed CAN (CAN-LS), can be activated or deactivated separately.

The checkbox **Acknowledge ON** must be activated for CAN channels which are used to send CAN messages.

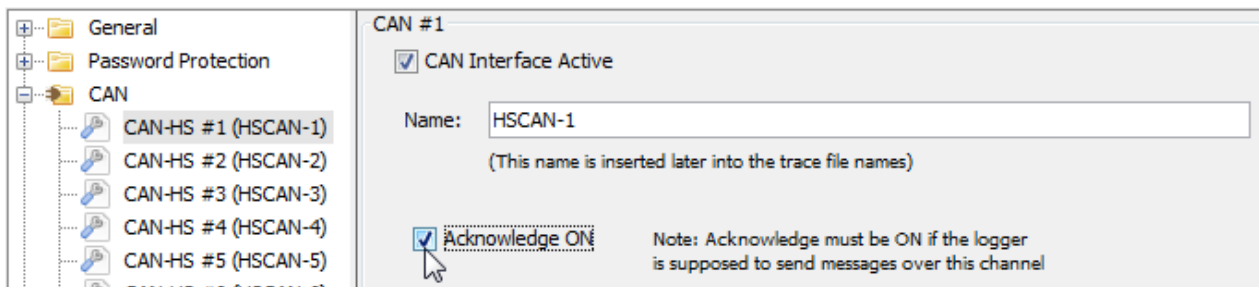


**Figure 8.31: Configuration – CAN – CAN-HS #...**

The <Timing> can be configured by specifying the baud rate or by configuring directly the chip parameters.

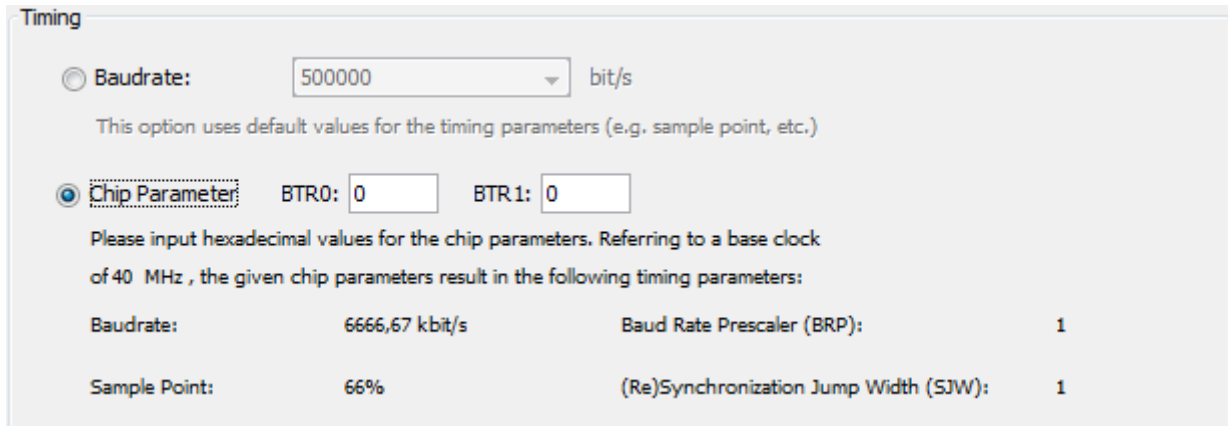

**Figure 8.32: Configuration – CAN – CAN-HS #... <Timing>**

The chip parameters are given by two Bytes.

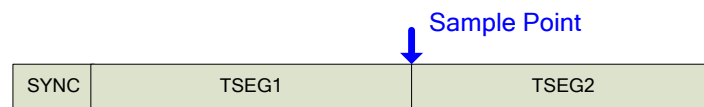


BTR1							
7	6	5	4	3	2	1	0
0	TSEG2			TSEG1			

BTR0							
7	6	5	4	3	2	1	0
SJW				BRP			

Parameter	Range	Bedeutung
<b>BRP</b>	0...63	Baud rate prescaler The base clock is divided by $2 * (BRP + 1)$ , resulting in the base unit for the timing, the so-called "time quantum" TQ
<b>TSEG1</b>	2...15	$(TSEG1 + 1)$ is the number of TQs before the sample point
<b>TSEG2</b>	1...7	$(TSEG2 + 1)$ is the number of TQs after the sample point
<b>SJW</b>	0...3	(Re-)Synchronization Jump Width Adjust the bit time by maximum $(SJW + 1)$

**Table 8.1: CAN-Bit-Timing-Parameter**

The <CAN Filter> allows to reduce the amount of recorded data. It can be activated or deactivated with the checkbox.

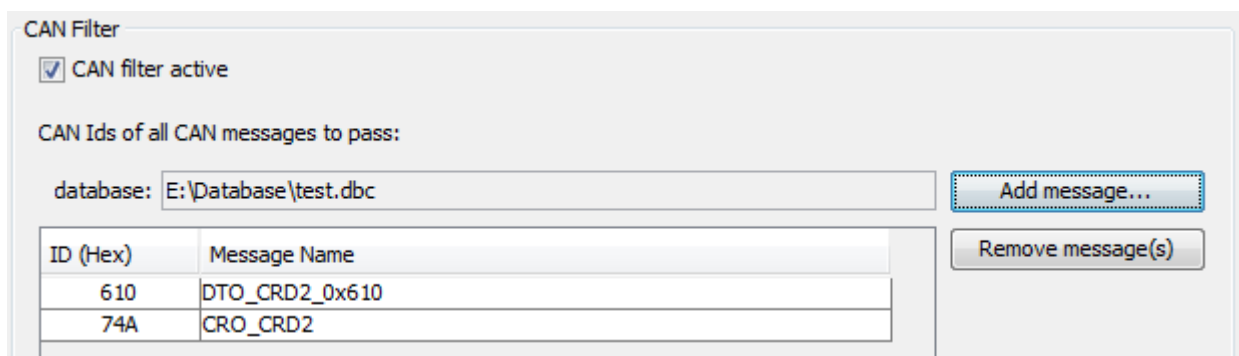


**Figure 8.33: Configuration – CAN – CAN-HS #... <CAN Filter>**

In the database settings databases for CAN signals can be configured or CAN signals added by their ID.

The list contains all CAN message identifiers (in hexadecimal format) that can be recorded (message IDs which are not listed will be ignored).

If a CAN database is provided the associated message name is shown for each ID.

Clicking on **[Add message...]** opens the following dialog.

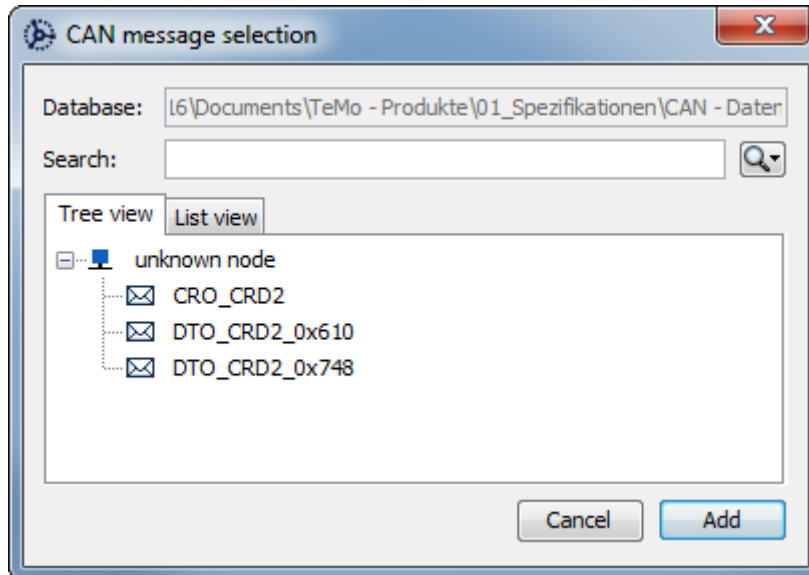

**Figure 8.34: Adding CAN message**


The database is the one selected in the database settings (see section 8.13). A click on the branches of the tree and then **[Add]** closes the dialog and the message appears in the list.

To remove a message from the list, select the message and click **[Remove message(s)]**.

## 8.4.2 General settings

The general settings for CAN are separated into High Speed (HS) and Low Speed (LS) interfaces. Both general configuration pages allow setup of standby behavior. At blue PiraT2 some channels are combined and can't be set separately as at blue PiraT2 5E and blue PiraT Mini wher you can set every single channel.


More about general settings see section 8.3.

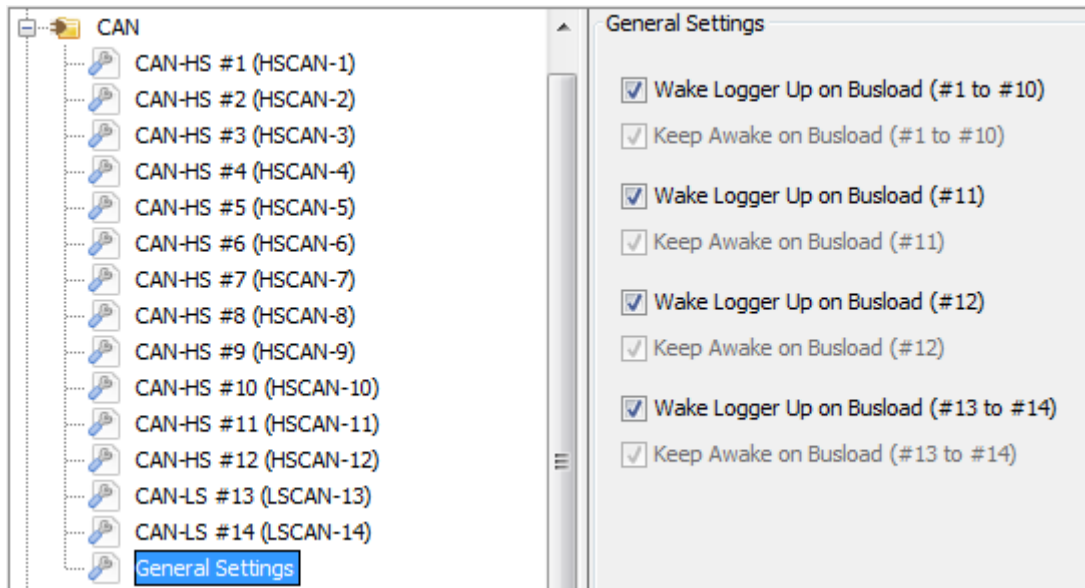

**Figure 8.35: Configuration – CAN – General settings**

## 8.5 LIN

LIN settings are accessible by opening the **[LIN]** folder. In the right window you see an overview of all channels and can modify some general settings of the LIN bus.

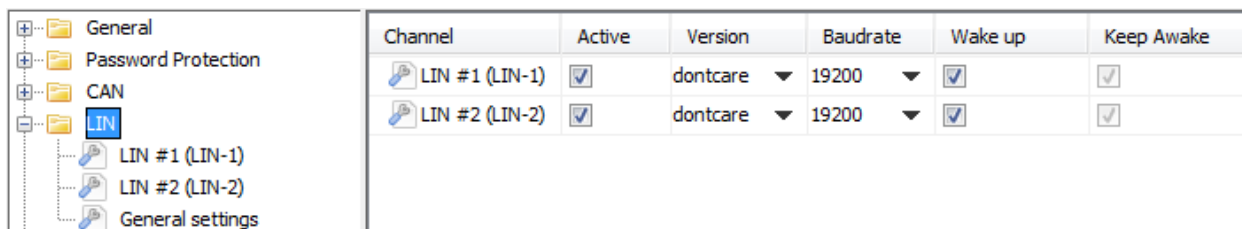

**Figure 8.36: Configuration – LIN: Channel (overview)**

### 8.5.1 LIN


All LIN interfaces are listed in the configuration tree. Selecting an interface will open its configuration form.

Each LIN interface can be activated or deactivated separately.

The following parameters must be set:

- <Baudrate> Set the baud rate of your LIN interface.
- <Version> Version 1.3, 2.0 and 2.1 are available.
- <Sample-Position> Select the sample position.


(The LIN bus is sampled with a rate which is 16 x higher than the baud rate. The sample position defines which bit will be used for interpretation, see LIN buss spec.)

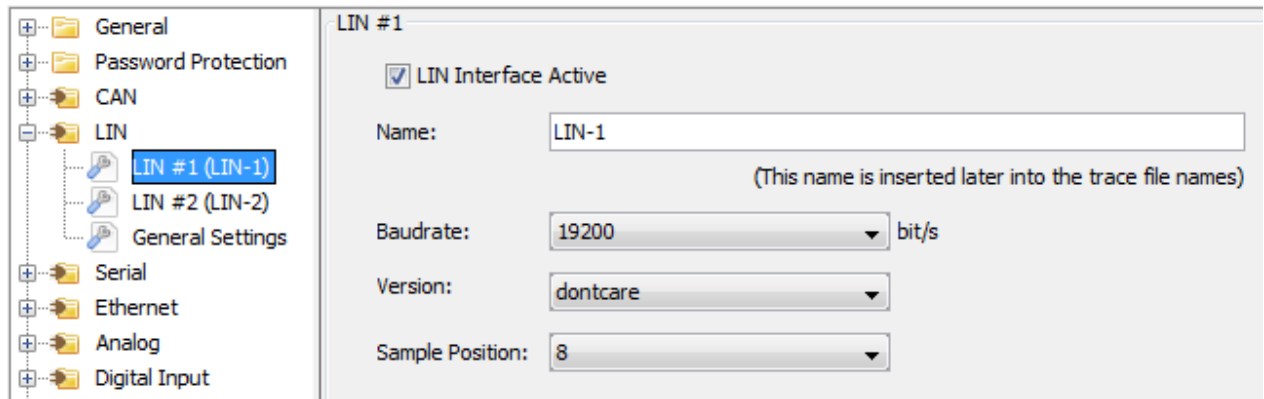

**Figure 8.37: Configuration – LIN – LIN #...**

## 8.5.2 General settings


More about general settings see section 8.3.

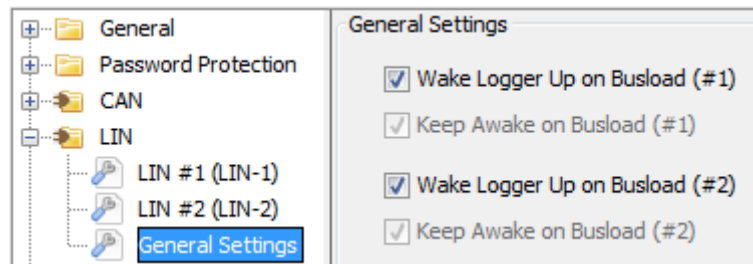

**Figure 8.38: Configuration – LIN – General settings**

## 8.6 Serial

Serial settings are accessible by opening the **[Serial]** folder. In the right window you see an overview of all channels and can modify some general settings of the serial bus.




Channel	Active	Databits	Stopbits	Parity	Protocol	Baudrate	Wake up	Keep Aw...
Serial #1 (Serial-1)	<input checked="" type="checkbox"/>	8	1	none	none	115...	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Serial #2 (Serial-2)	<input checked="" type="checkbox"/>	8	1	none	none	115...	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Serial #3 (Serial-3)	<input checked="" type="checkbox"/>	8	1	none	none	115...	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Serial #4 (Serial-4)	<input checked="" type="checkbox"/>	8	1	none	none	115...	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Serial #5 (Serial-5)	<input checked="" type="checkbox"/>	8	1	none	none	115...	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

**Figure 8.39: Configuration – Serial: Channel (overview)**

### 8.6.1 Serial

All serial interfaces are listed in the configuration tree. Selecting an interface will open its configuration form.

Each serial interface can be activated or deactivated separately.

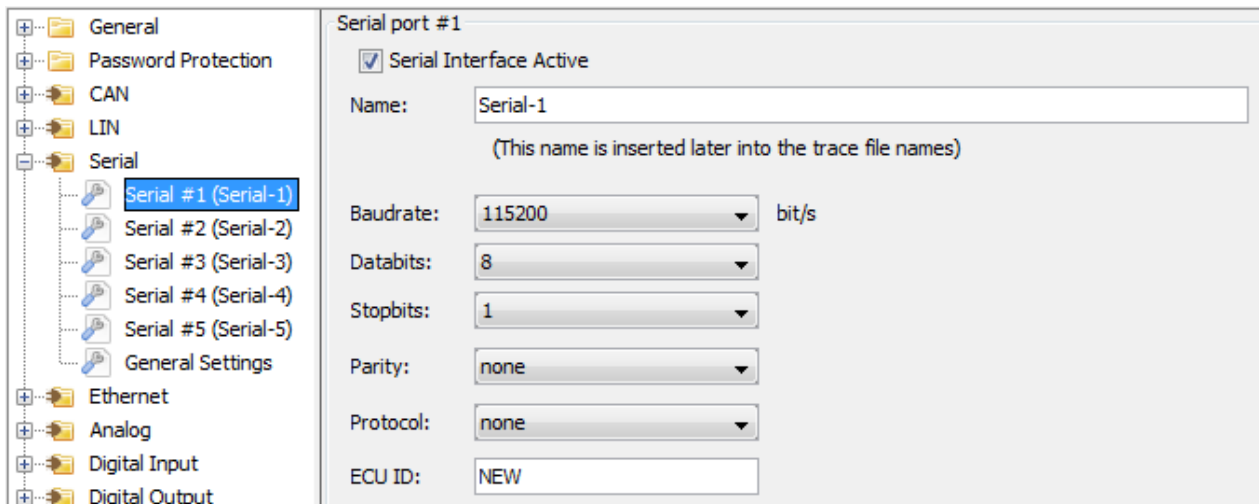

**Serial port #1**

Serial Interface Active

Name:   
(This name is inserted later into the trace file names)

Baudrate:  bit/s

Databits:

Stopbits:

Parity:


Protocol:

ECU ID:

**Figure 8.40: Configuration – Serial – Serial #...**

### 8.6.2 General settings

More about general settings see section 8.3.

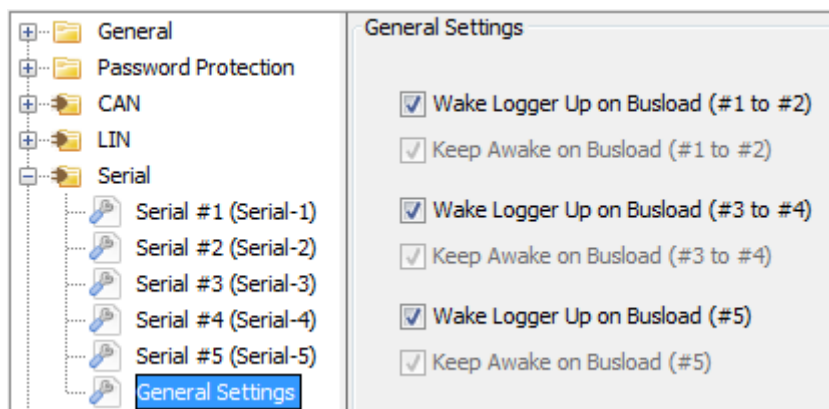

**General Settings**

Wake Logger Up on Busload (#1 to #2)

Keep Awake on Busload (#1 to #2)

Wake Logger Up on Busload (#3 to #4)

Keep Awake on Busload (#3 to #4)

Wake Logger Up on Busload (#5)

Keep Awake on Busload (#5)

**Figure 8.41: Configuration – Serial – General settings**


## 8.7 MOST

### 8.7.1 MOST

MOST settings allow setup of standby behavior, basic channel configuration (see section 8.3), and MOST specific settings.


These MOST specific settings may vary based on the version of MOST (25/150) used.

These options can place limits on message length or filter specific messages based on addresses.

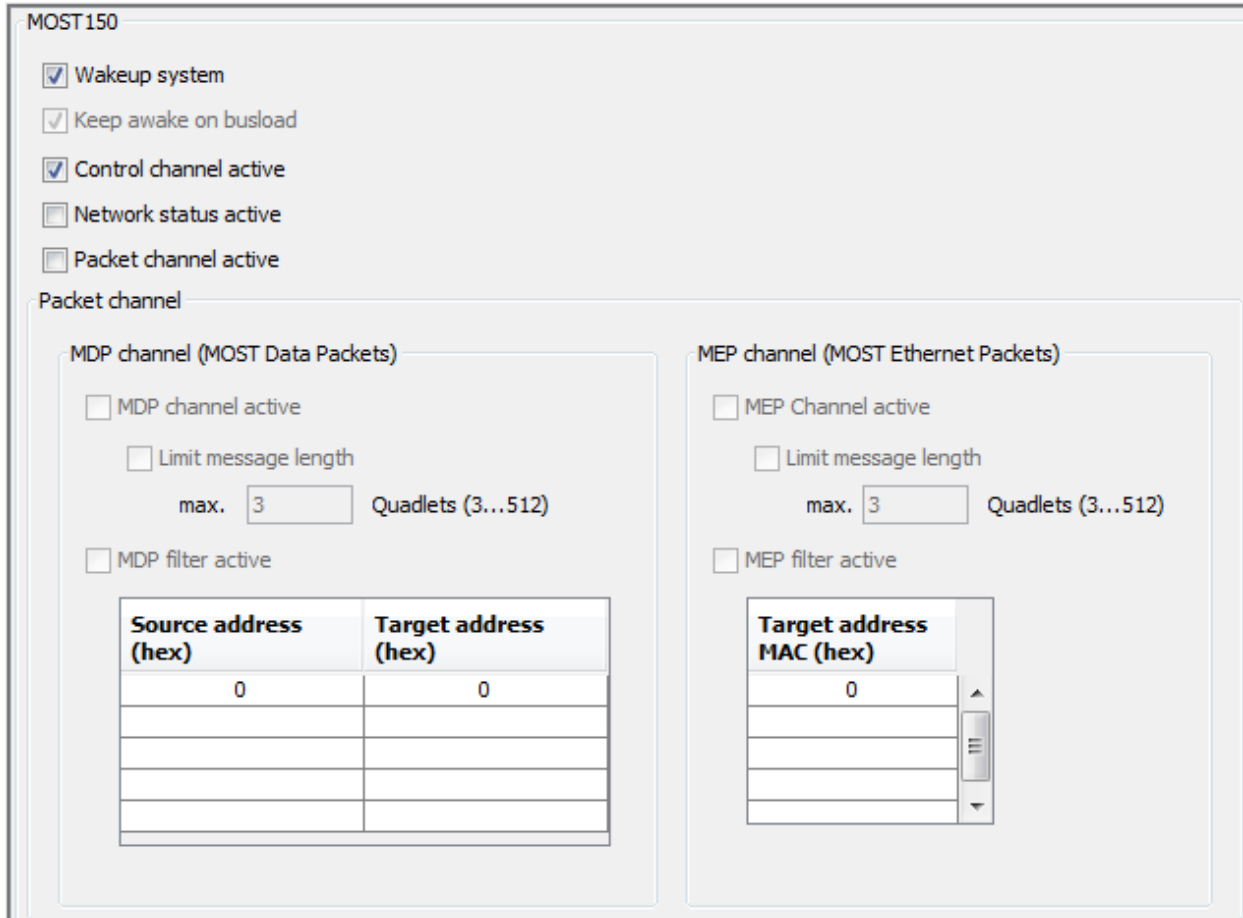

**Figure 8.42: Configuration – MOST – MOST...**

[MEP/ECL] is only available for MOST150.

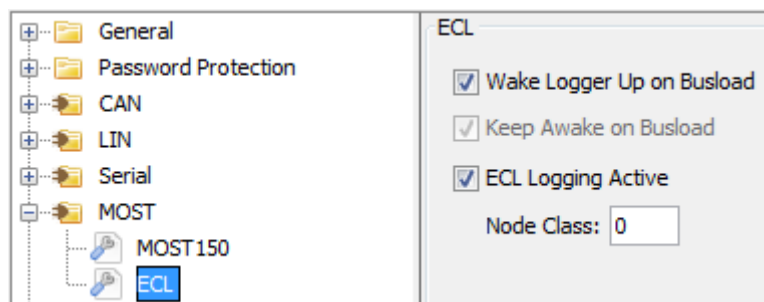

**Figure 8.43: Configuration – MOST – ECL**

## 8.8 FlexRay

FlexRay settings are accessible by opening the **[FlexRay]** folder. In the right window you see an overview of all channels and can modify some general settings of the FlexRay bus.

Channel	Active	Record static frames	Record dynamic frames	Record symbols	Wake Up	Keep Awake
FlexRay 1A (FlexRay-1A)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FlexRay 1B (FlexRay-1B)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FlexRay 2A (FlexRay-2A)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FlexRay 2B (FlexRay-2B)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>


**Figure 8.44: Configuration – FlexRay: Channel (overview)**

### 8.8.1 FlexRay

All FlexRay interfaces are listed in the configuration tree. Selecting an interface will open its configuration form.

Each FlexRay interface can be activated or deactivated separately.

FlexRay channel settings provide basic channel configuration (see section 8.3) as well as additional options to reduce recorded data.

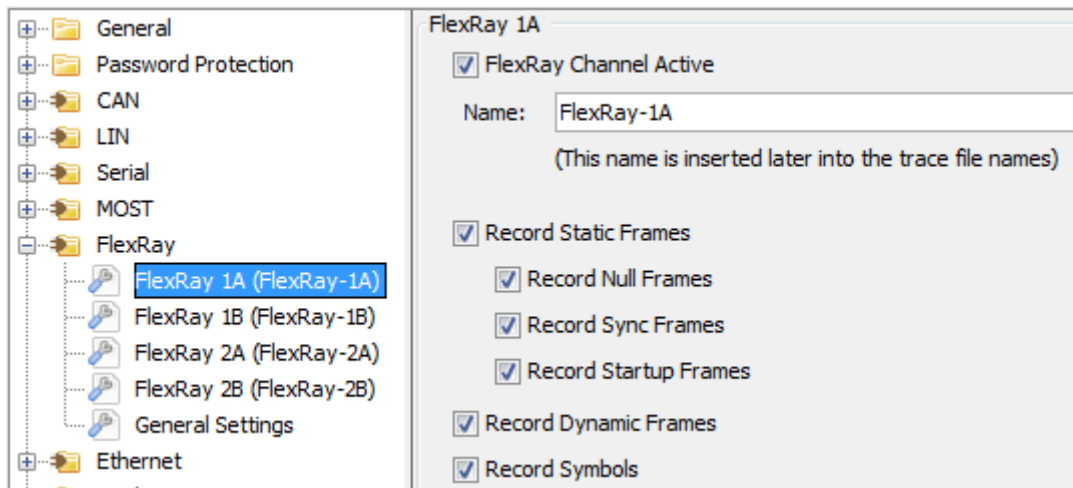


**Figure 8.45: Configuration – FlexRay – FlexRay ...**

### 8.8.2 General settings

FlexRay general settings allow setup of standby behavior (see section 8.3) and <Baudrate>. Baud rates are set for a pair (e.g., 1A and 1B) of FlexRay channels.



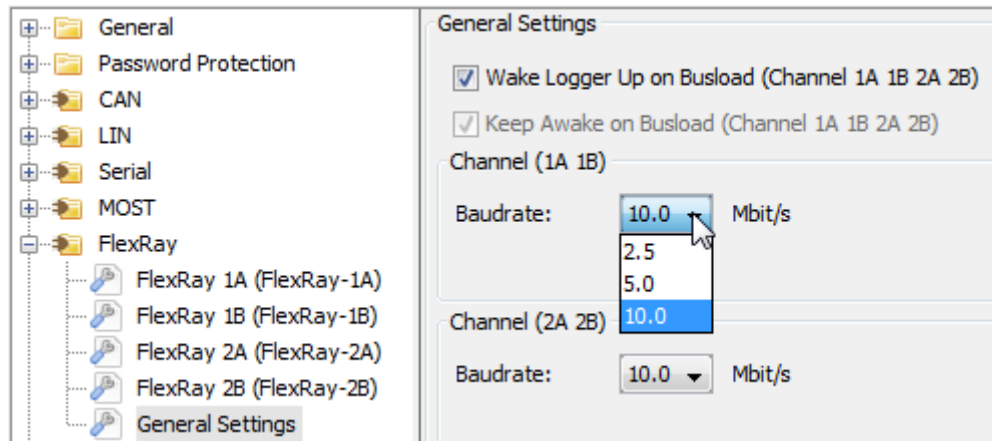

**Figure 8.46: Configuration – FlexRay – General settings**

[Index](#)

## 8.9 Ethernet

Ethernet settings are accessible by opening the **[Ethernet]** folder. In the right window you see an overview of all channels and can modify some general settings of the Ethernet ports.

Channel	Active	Connector	Protocol:	Target IP	Logger IP	Keep...
Ethernet #1 (Ethernet-1)	<input checked="" type="checkbox"/>	Back	GNLogger	192.168.1.101:851	192.168.1.233	<input checked="" type="checkbox"/>
Ethernet #2 (Ethernet-2)	<input checked="" type="checkbox"/>	Back	GNLogger	192.168.1.101:851	192.168.1.233	<input checked="" type="checkbox"/>
Ethernet #3 (Ethernet-3) -- inactive	<input type="checkbox"/>	Back	GNLogger	192.168.1.101:851	192.168.1.233	<input checked="" type="checkbox"/>
Ethernet #4 (Ethernet-4) -- inactive	<input type="checkbox"/>	Back	GNLogger	192.168.1.101:851	192.168.1.233	<input checked="" type="checkbox"/>

**Figure 8.47: Configuration – Ethernet: Channel (overview)**

### 8.9.1 Ethernet

All Ethernet interfaces are listed in the configuration tree. Selecting an interface will open its configuration form.


Each of the 16 logical Ethernet interfaces can be activated or deactivated separately.

**Note:**

**Ethernet #1 to #16 do not relate to the physical Ethernet ports on the blue PiraT2 or the blue PiraT Mini but are logical recording channels.**


**Figure 8.48: Configuration – Ethernet – Ethernet #...**

At blue PiraT2 / blue PiraT2 5E / blue PiraT Mini as <Connector> for the recording can be selected “Front” or “Back”.

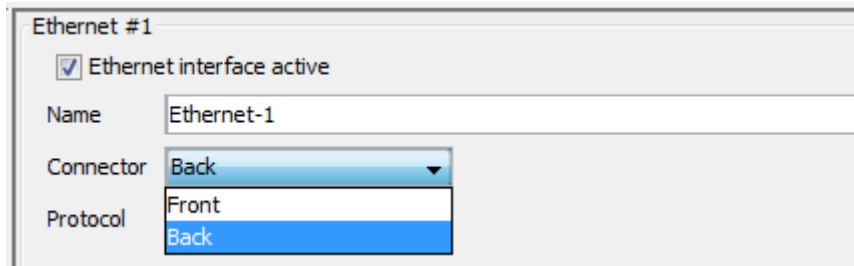

**Figure 8.49: Configuration – Ethernet – Ethernet #... <Connector>**

For each of the logical channels, the desired Ethernet <Protocol> can be selected.

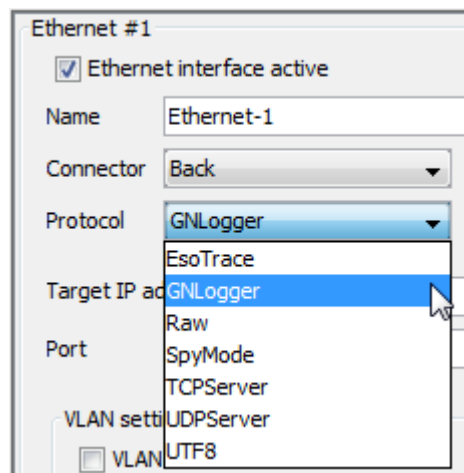

**Figure 8.50: Configuration – Ethernet – Ethernet #... <Protocol>**

Under <Target IP address> the IP address of the controller is specified. The default value here is 192.168.1.101.

**There are the following restrictions on the IP configuration.**

- Logical Ethernet channels #1 to #16: The IP address of the controller unit (Default: 192.168.1.101) must be in the same subnet as the additional IP-alias of the data logger.
- If a client connection via the front Ethernet interface exists and data is recorded at the same time via the rear Ethernet port, the subnet of the front PC interface of the data logger and the subnet of the logical Ethernet channels #1 to #16 must be different.
- The combination of IP address and port number must not be used by another device.
- Under <IP-address of data logger> and <Subnet mask> the IP-addressing of the recording interface from the logger is entered. These must be in the same subnet as the target address.

Target IP address:  .  .  .  Port:

IP Address of Data Logger:  .  .  .

Subnet Mask:  .  .  .

**Figure 8.51: Configuration – Ethernet – Ethernet #... <Target IP address> and <Port>**

VLAN settings

VLAN interface active

VLAN ID   dec  hex

**Figure 8.52: Configuration – Ethernet – Ethernet #... <VLAN settings>**

**Note:**

If you activate the checkbox **VLAN interface active** and enter a **<VLAN ID>**, you need an appropriate remote site with the same **<VLAN ID>**.  
By activating multiple Ethernet channels with different VLAN IDs, each channel must be located on a different subnet.

With the **<Timeout>** settings you can define the time after which the logger will close the connection and reconnect to the target when there's no communication on the bus.

Timeout  s (0 = no Timeout)

**Figure 8.53: Configuration – Ethernet – Ethernet #... <Timeout>**

**Note:**

If **<Timeout>** is "0" seconds, the connection remains.

When the **<Protocol>** "GNLogger" is selected, you can choose between four different **<Debug level>**s.

Debug level	Output
0	no debug output
1	maximum debug output
2	normal debug output
3	minimal debug output

**Table 8.2: Debug level**


Debug level

**Figure 8.54: Configuration – Ethernet – Ethernet #... <Debug level>**


### 8.9.2 Differing settings at blue PiraT Mini / blue PiraT2 5E

At **blue PiraT Mini** and **blue PiraT2 5E** there are some more possibilities available for configuring the settings of the Ethernet ports at the rear side.

### 8.9.3 Settings of the rear ports – blue PiraT Mini

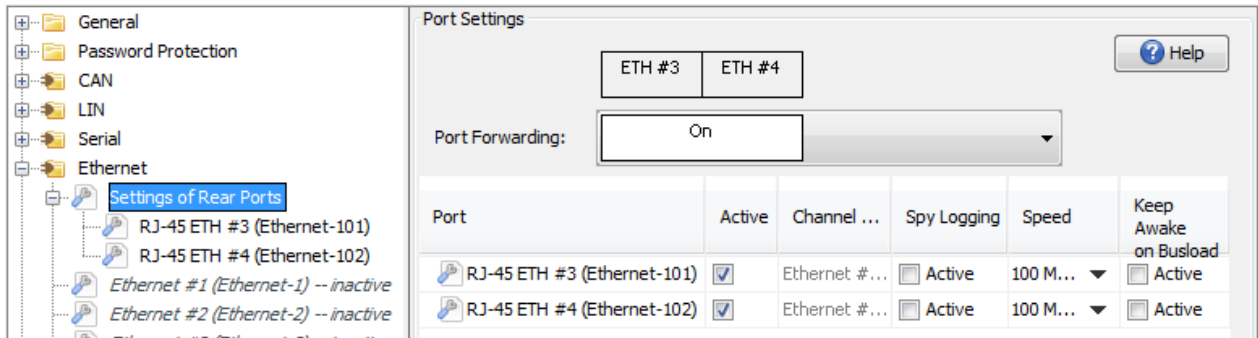

**Figure 8.55: Configuration – Ethernet – Port Settings**

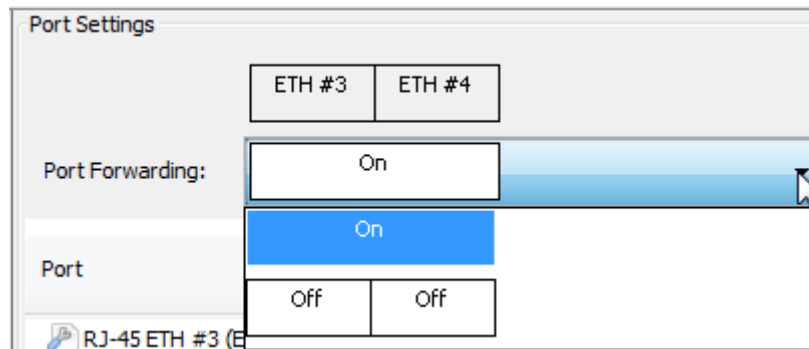

**Figure 8.56: Port modes of blue PiraT Mini**


In blue PiraT Mini there's a feature implemented called Port forwarding which works like a Tap mode but additionally allows to log high level protocols like GNLog, DLT, TCP usw., which have to send requests to the ECU.

Port forwarding can only be activated together for both rear ports.

### 8.9.3.1 Bridging front / back ethernet ports

Normally the front and rear ethernet ports of blue PiraT Mini must use different subnet masks.

At blue PiraT Mini this limitation can be set aside under [Ethernet] => [General Settings] by activating the option [Bridge front / back ethernet ports]

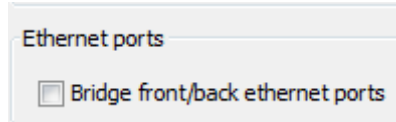


**Figure 8.57: Bridging front / back ethernet ports**

If it is necessary that 4 ECU's have to be logged in the same subnet, it can be realized by activating the option [Bridge front / back ethernet ports]. Here all 4 ethernet ports are bridged and can be configured as one switch without this limitation.

### 8.9.3.2 Filtering options of rear ports at blue PiraT Mini

The rear Ethernet ports of **blue PiraT Mini** are serving more settings and filters for the logging.

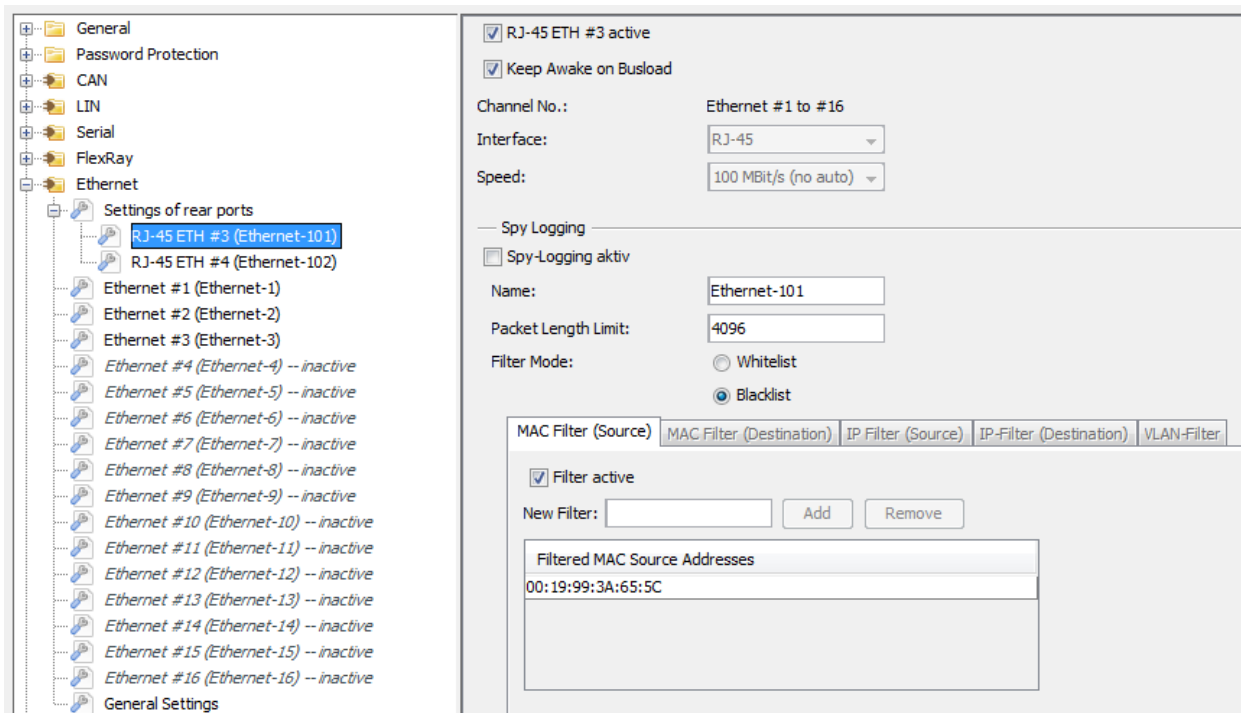

**Figure 8.58: Configuration options of rear ports (of blue PiraT Mini)**

In order to enter a filter first you have to activate the checkbox **Filter active**.

One of these special features of ETH #3 & ETH #4 is the possibility to work in “Spy” mode and log only filtered messages.

**Figure 8.59: Choosing Filter Mode**

You can select between Whitelist and Blacklist for configuring these filters. When you define a **Whitelist** only the filtered messages will be logged. When you choose the **Blacklist** all these messages will be dropped.

These filters are available:


- MAC Filter (Source)
- MAC Filter (Destination)
- IP Filter (Source)
- IP Filter (Destination)
- VLAN-Filter

**Figure 8.60: MAC address filter**

**Note:**

**When entering the MAC address, please enter the individual bytes separated by colons.**

## 8.9.4 Port settings of the rear ports – blue PiraT2

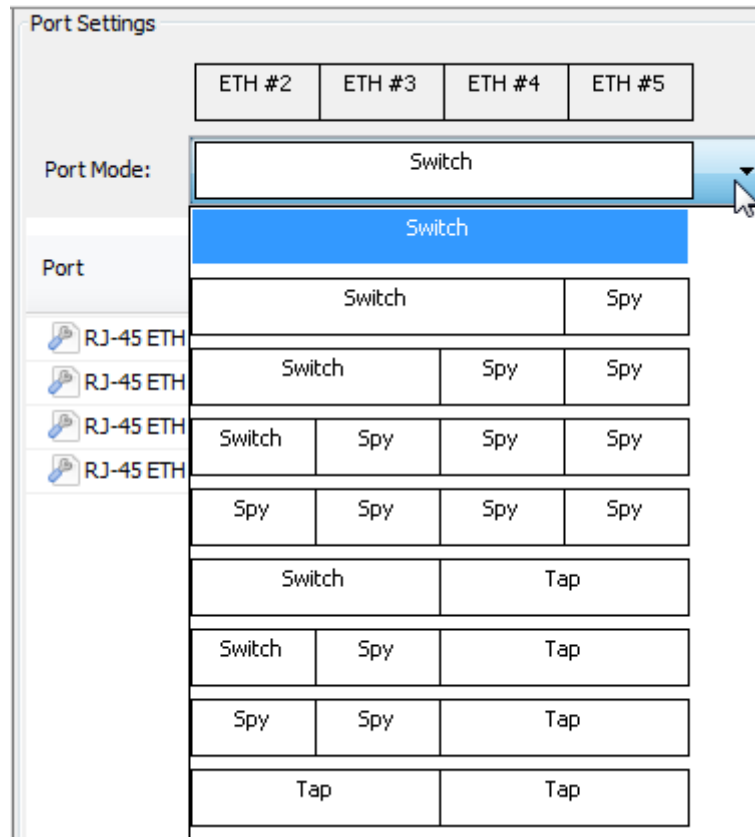

**Figure 8.61: Port modes of blue PiraT2**

### 8.9.4.1 Port mode \*Switch\*

For Logging of high-level protocols (GNLog, DLT, TCP etc.) over Ethernet, as well as Camera and XCP over Ethernet, use the <Port Mode> \*Switch\*.

The ports, which are configured as \*Switch\* are ready for operation, after the logger has started up. In default mode, all ports are configured as \*Switch\*. In this mode it is not possible to change the speed like at "Spy" mode. It is set to 100 Mbit/s.

The ports can communicate with each other. Incoming messages will be forwarded by a routing table to the correspondend port. This routing table is created by using the SRC MAC of the incoming messages with relevant port numbers.

In \*Switch\* mode, the Spy Logging can be activated separate for every port to log all incoming messages.



### 8.9.4.2 Port mode **\*Spy\***

In **\*Spy\*** mode the Ethernet data are recorded on the Data Link Layer (→ OSI layer 2). This recording mode is independent of the protocol used (TCP, IP, UDP etc. → OSI layer 3/4).

Ports which are configured as **\*Spy\*** just listen on the line and log all transferred messages.


### 8.9.4.3 Port mode **\*Tap\***

In **\*Tap\*** mode the Ethernet data are recorded on the Data Link Layer (→ OSI layer 2). This recording mode is independent of the protocol used (TCP, IP, UDP etc. → OSI layer 3/4).

The **\*Tap\*** mode has the same functionality as two **\*Spy\*** ports and additionally routes all incoming data from one port to another (in both directions). This routing is also optimized for low latency.

The data logger is in this way integrated into the line and receives all incoming and outgoing data. But only the incoming data will be recorded.

This routing is also optimized for low latency.

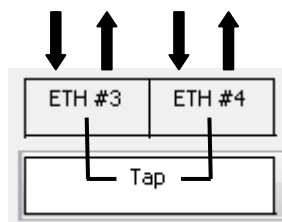


**Figure 8.62: Data recording in “Tap” mode**

**Note:**

In **\*Tap\*** mode the feature **\*Spy logging\*** is automatically activated.

## 8.9.5 Spy logging

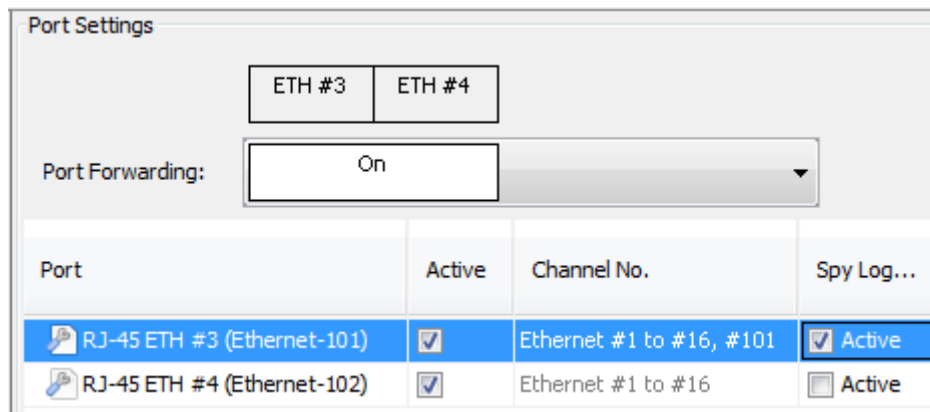

**Figure 8.63: Spy Logging**

### **blue PiraT Mini:**

A port where \*Spy Logging\* is activated, is ready for operation after very short latency and can log incoming data even when the logger has not started up yet.

The trace files for **Spy Logging** are recorded with a separate range of channel numbers (101 and 102 in blue PiraT Mini).

### **blue PiraT2 5E:**

A port where \*Spy Logging\* is activated, is ready for operation after very short latency and can log incoming data even when the logger has not started up yet.

At ports where “Spy” or \*Tap\* is configured, no protocol logging is possible. It acts only on ports which are configured on \*Switch\*.

The trace files for **Spy Logging** are recorded with a separate range of channel numbers (101 - 104 in blue PiraT2 5E).

### **Note:**

**As the behavior of the ports can be configured flexibly, the port configuration must be considered while plugging the cables. Look out which cable is connected to which port.**

[Index](#)

## 8.9.6 Available port speeds

The following speed-configurations are possible and can be set separately for every port.

Logger	Remote site
Auto	Auto, 100 MBit/s (Full duplex), 100 MBit/s (Half duplex), 10 MBit/s (Full duplex), 10 MBit/s (Half duplex)
100 MBit/s	Auto, 100 Mbit/s (Full duplex), 100 MBit/s (Half duplex)
1 GBit/s (Auto)	Auto, 1 GBit/s

**Table 8.3: Available port speeds and allowed remote sites configuration**


**Note:**

**1 GBit (Auto) setting at the logger is needed to ensure that 1 GBit/s is used. If the other party does not offer 1 GBit in this mode, there is no connection.**

### 8.9.7 Protocol “EsoTrace”

In the client the co

nfiguration of the logger must be opened to configure the **[EsoTrace]** function. The configuration tree shows the entries Ethernet #1 to #16. In the dropdown menu at <Protocol> you can select the entry **[EsoTrace]**.

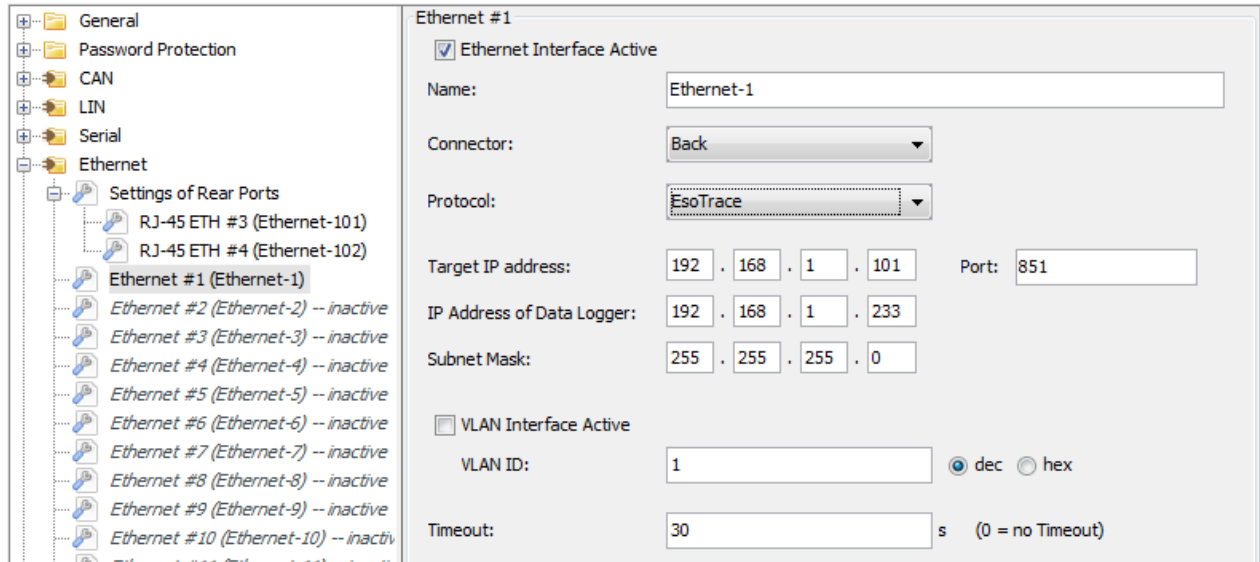


**Figure 8.64: Choosing protocol “EsoTrace”**

Each Ethernet channel can be configured for logging EsoTrace data.

### 8.9.8 Protocol “GNLogger”

To record traces in GNLogger format you just have to configure the <Protocol> of the needed Ethernet port of the blue PiraT2 / blue PiraT Mini to **[GNLogger]** and set the general settings to fit to your source device.

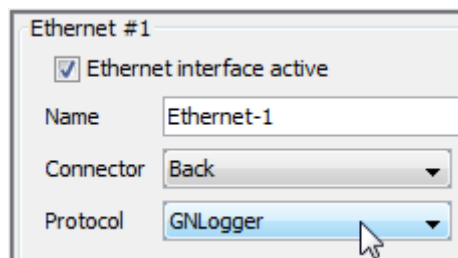

**Figure 8.65: Choosing protocol “GNLogger”**

During conversion these data can be converted into GNLogger format but only when they are really recorded as GNLogger data.

### 8.9.9 Protocol “Raw”


When using the raw data transmission over TCP the blue PiraT Mini / blue PiraT2 will be a TCP-slave device. Therefore the data logger will initiate a TCP connection to a TCP server by using an open socket connection (you can configure IP/Port of server via client software).

When using raw data transmission, every data package up to 40 kBytes is getting a time stamp and will be written on the logger. If the connection is getting lost, it will take about 5 seconds to build up a new connection for logging data again.

### 8.9.10 Protocol “SpyMode”

To record traces in Ethernet SpyMode you just have to configure the <Protocol> of the needed Ethernet port of the blue PiraT2 / blue PiraT Mini to **[SpyMode]** and set the general settings to fit to your source device.

**Note:** This function is only available for the front ports.

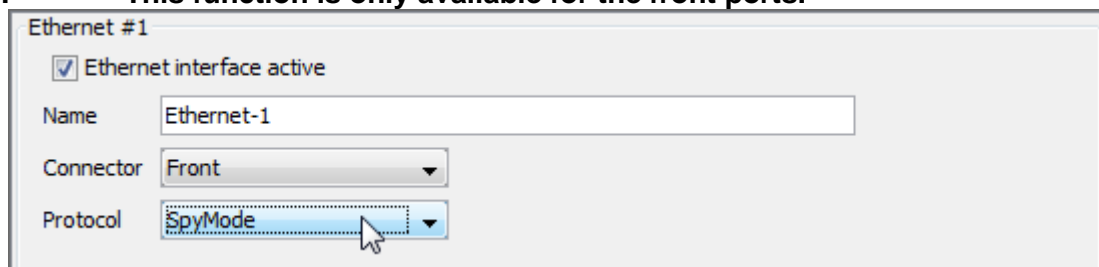

**Figure 8.66: Choosing protocol “SpyMode”**

Every Ethernet channel can be configured for logging in SpyMode but only one per connector.

#### 8.9.10.1 Filter configuration in SpyMode


For each Ethernet channel three types of filters can be configured. All filters are independent and can be used coincident. Nested or associated filters cannot be used.

##### IP Filter

You can define a set of IP addresses that should be recorded. There are only Ethernet data packets recorded that are sent from / to the defined IP addresses.

To add IP addresses to the filter activate the checkbox **IP Filter active** and click the **[Add]** button. To conclude the entry press the **[Enter]** key on your keyboard.

For deleting an IP address mark the IP address in the list and press the **[Remove]** button.

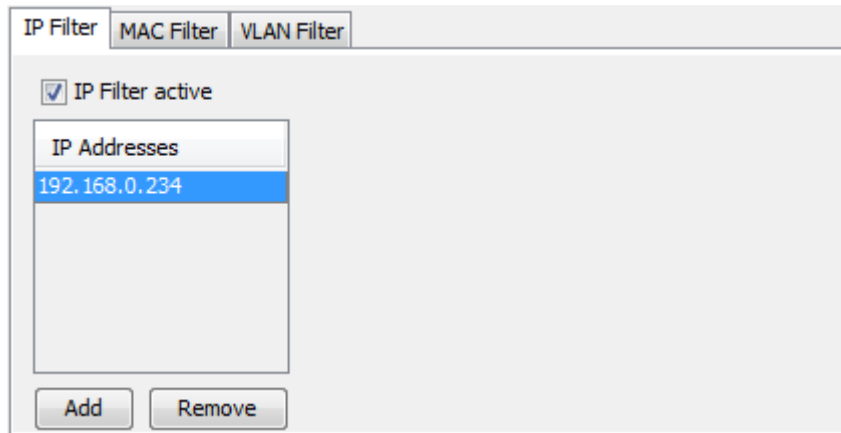

**Figure 8.67: Setting an IP Filter**


### MAC Filter

You can define a set of MAC addresses that should be recorded. There are only Ethernet data packets recorded that are sent from / to the defined MAC addresses.

To add MAC addresses to the filter activate the checkbox **MAC Filter active** and click the **[Add]** button. To conclude the entry press the **[Enter]** key on your keyboard.

For deleting an MAC address mark the MAC address in the list and press the **[Remove]** button.

MAC addresses have the following scheme: "xx:xx:xx:xx:xx:xx" where xx got a hexadecimal value from 00 to FF.

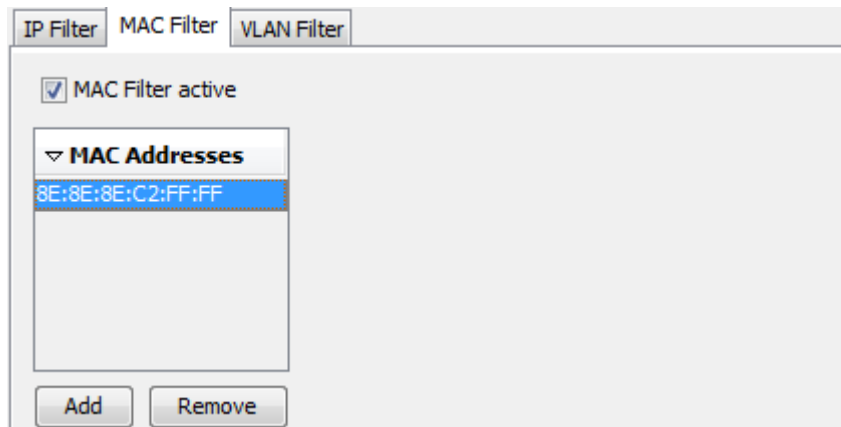

**Figure 8.68: Setting a MAC Filter**


## VLAN Filter

You can define a set of VLAN IDs that should be recorded. There are only Ethernet data packets recorded that are sent from / to the defined VLAN IDs.

To add VLAN IDs to the filter activate the checkbox **VLAN Filter active** and click the **[Add]** button. To conclude the entry press the **[Enter]** key on your keyboard.

For deleting a VLAN ID mark the VLAN ID in the list and press the **[Remove]** button.

A VLAN ID got to be a number between 1 and 4094.

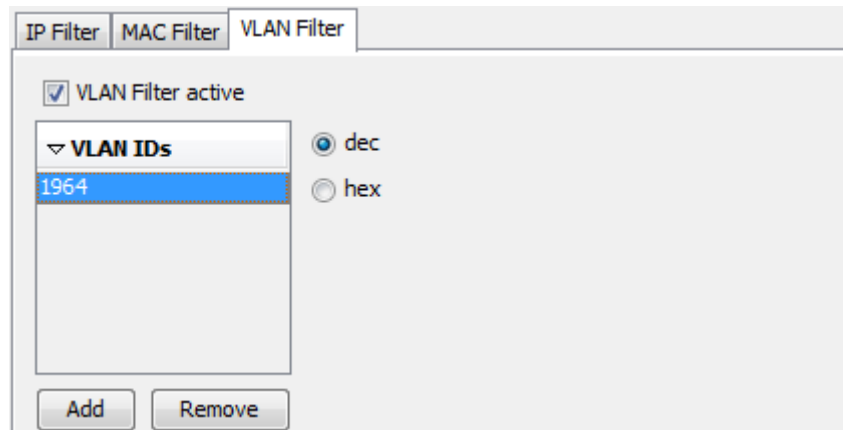

**Figure 8.69: Setting a VLAN Filter**

### 8.9.11 Protocol “TCPServer”

When using the TCPServer data transmission the blue PiraT Mini / blue PiraT2 will be a TCP-server. Therefore the target device will initiate a TCP connection to the data logger by using an open socket connection.

Every data package up to 40 kBytes is getting a time stamp and will be written on the logger.

### 8.9.12 Protocol “UDPServer”

The blue PiraT Mini / blue PiraT2 can be configured as an UDP server by setting up an IP address and port number.

A slave device can build up a connection to the data logger. The data logger logs raw data packages up to 40kBytes and write them with a time stamp down. There is no configurable debug level.

If the connection is getting lost, it will take about 5 seconds to build up a new connection for logging data again.

### 8.9.13 Protocol “UTF8”


When using the UTF8 data transmission over TCP, the blue PiraT Mini / blue PiraT2 will be a TCP-Slave device. Therefore the data logger will initiate a TCP connection to a TCP server by using an open socket connection (you can configure IP/Port of server via client software).

By using UTF8 data transmission the logger will write a timestamp after every detected Linefeed (LF) from the incoming data.

If the connection is getting lost, it will take about 5 seconds to build up a new connection for logging data again.

## 8.10 Analog

Analog settings are accessible by opening the **[Analog]** folder. In the right window you see an overview of all channels and can modify some general settings of the analog bus.

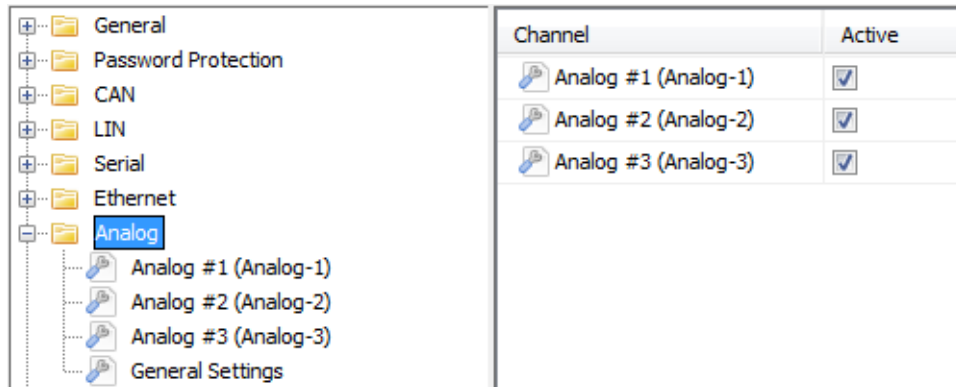


**Figure 8.70: Configuration – Analog: Channel (overview)**

### 8.10.1 Analog

All analog interfaces are listed in the configuration tree. Selecting an interface will open its configuration form. Each analog interface can be activated or deactivated separately.

**Note:**

“Analog #1” got no external input. It only can measure the input voltage of the logger.

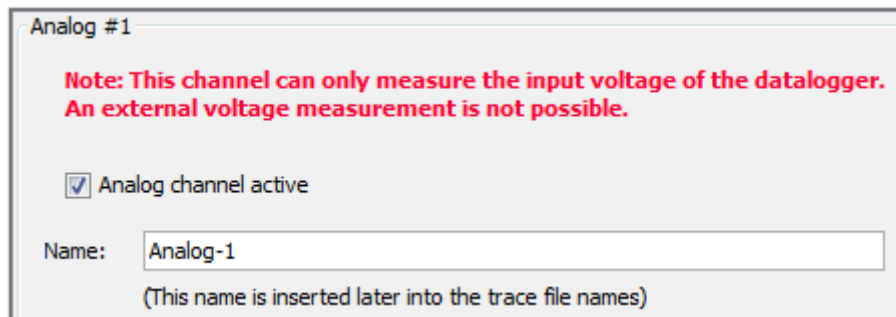


**Figure 8.71: Notification message due to lack of external input for Analog #1**

**Note:**

If you use the channel “Analog #2” or higher, please connect the ground of the corresponding analog ports to the ground clamp of the logger.

### 8.10.2 General settings

**[General Settings]** allow defining a sampling interval for all of the analog interfaces. These settings can be different depending on your logger type. In some cases these settings are combined for some channels.

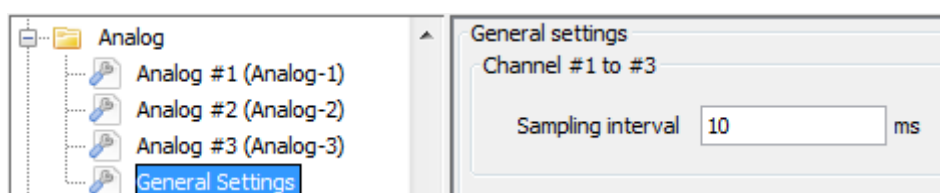


**Figure 8.72: Configuration – Analog – General settings**



## 8.11 Digital input

Digital settings are accessible by opening the **[Digital input]** folder. In the right window you see an overview of all channels and can modify some general settings of the digital bus.

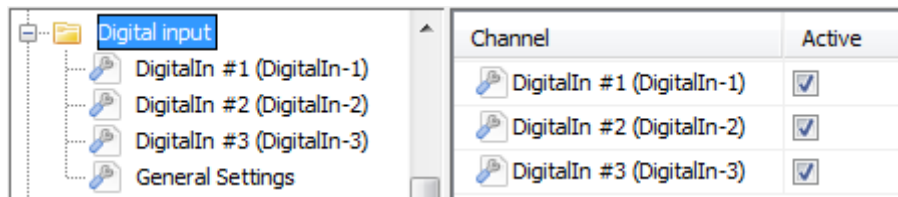


**Figure 8.73: Configuration – Digital input: Channel (overview)**

### 8.11.1 Digital In

All digital interfaces are listed in the configuration tree. Selecting an interface will open its configuration form. Each digital interface can be activated or deactivated separately.

**Note:**

**At blue PiraT Mini the analog and digital interface are combined so even Digital In #1 can only be used for internal measurements.**

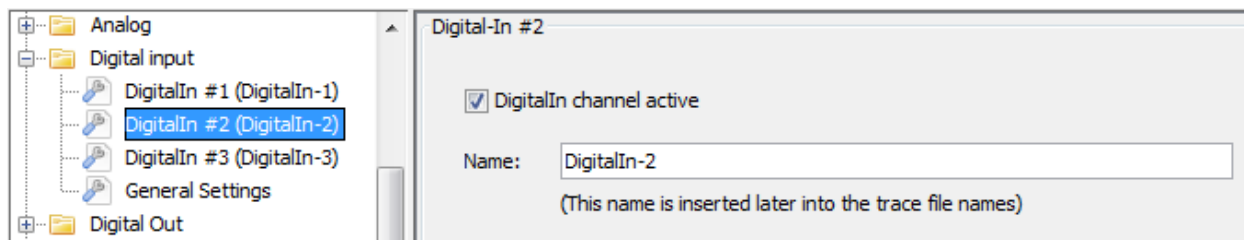

**Figure 8.74: Configuration – Digital input – DigitalIn #...**


### 8.11.2 General settings

The blue PiraT2 and blue PiraT2 5E has the possibility to configure channel #1 and #2 for wakeup. The blue PiraT Mini as well as blue PiraT Remote hasn't this option.

General settings allow setup of <Mode> and <Sampling interval>.

Two logging modes are currently available:

- **Edge Detection:** It will be recorded a sample on a detected signal change, either rising, falling or both.
- **Timing Mode:** It will be recorded a sample after each interval. Intervals are specified in milliseconds (between 1 ms and 100000 ms).

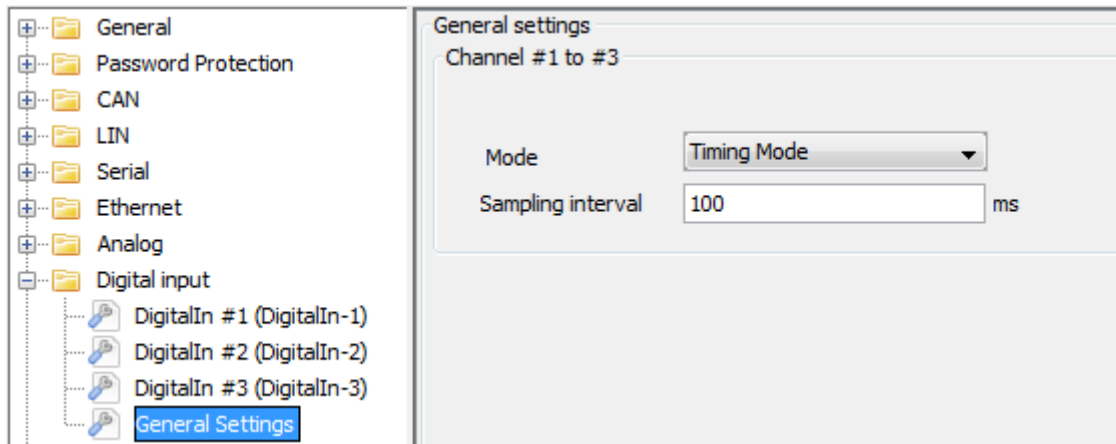

**Figure 8.75: Configuration – Digital input – General settings (of blue PiraT Mini)**


### 8.11.3 Threshold

The Threshold voltage of the digital inputs is written at the blue PiraT2 / blue PiraT Mini User Guide.

[https://sc.telemotive.de/4/uploads/media/blue\\_PiraT2\\_UserManual.pdf](https://sc.telemotive.de/4/uploads/media/blue_PiraT2_UserManual.pdf)


[https://sc.telemotive.de/4/uploads/media/blue\\_PiraT\\_Mini\\_UserManual.pdf](https://sc.telemotive.de/4/uploads/media/blue_PiraT_Mini_UserManual.pdf)

Here the threshold voltage and hysteresis can be specified.

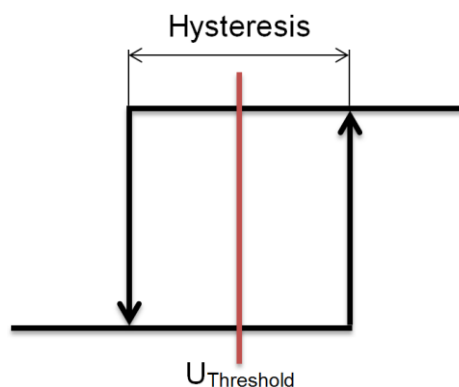

**Figure 8.76: Hysteresis curve**


At the blue PiraT2 the threshold voltage could be configured at DigitalIn #2 to #5.

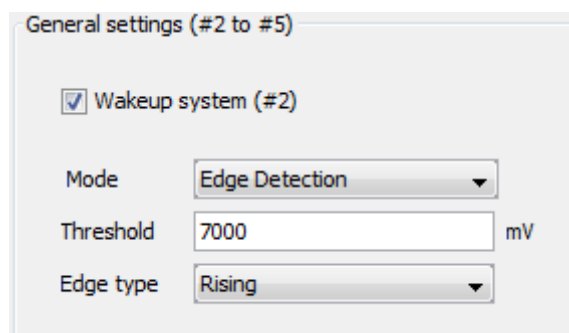

**Figure 8.77: Configuration – Digital input – General settings (of blue PiraT2)**

## 8.12 Digital Out

The initial default value of the digital output channels could be set here to "0" or "1" and the current value can be modified by complex triggers later.

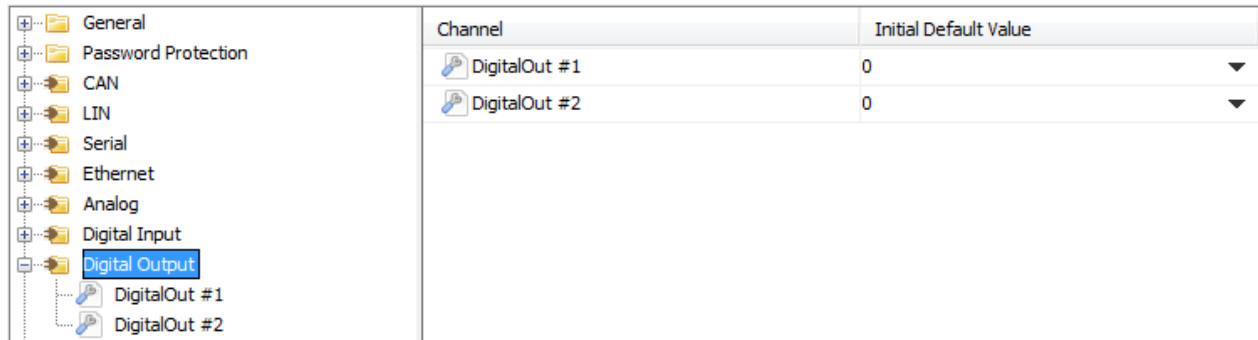

**Figure 8.78: Digital output settings**

## 8.13 Trigger


With the function **Complex Triggers** of the blue PiraT2 / 5E / Mini / Remote the following functions are available:

- Supporting CCP/XCP events (requires CCP or XCP license)
- Configuring an event that will cause an action

Event	Action
Complex event	Send CAN message
Receive CAN signal	Set marker
Receive LIN signal	Set digital output
Receive FlexRay signal	Append info entry to event overview
Key stroke	Display notification on Remote Control
Digital Input	Execute CCP/XCP action
Analog Input	Display Remote Control Monitor (with additional license)


Setting up 2 complex triggers is license free. With an additional license you can set up to 50 complex triggers.

Open the category **[Trigger]**.

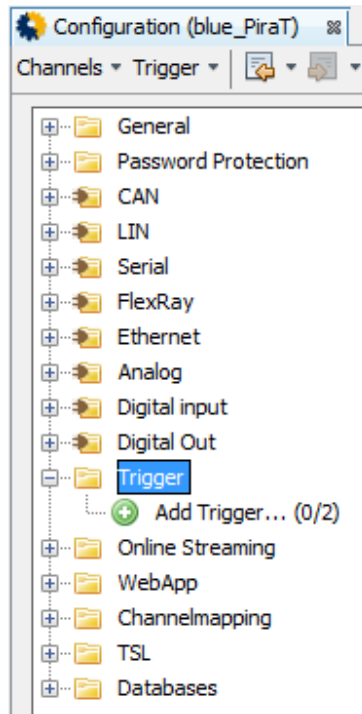

**Figure 8.79: Adding new Trigger**

By double-clicking the button **[Add Trigger... (.../2)]** a new trigger will be shown in the list (e.g., Trigger #1). The red symbol with exclamation mark reminds that the trigger is not configured yet or is not fully configured.

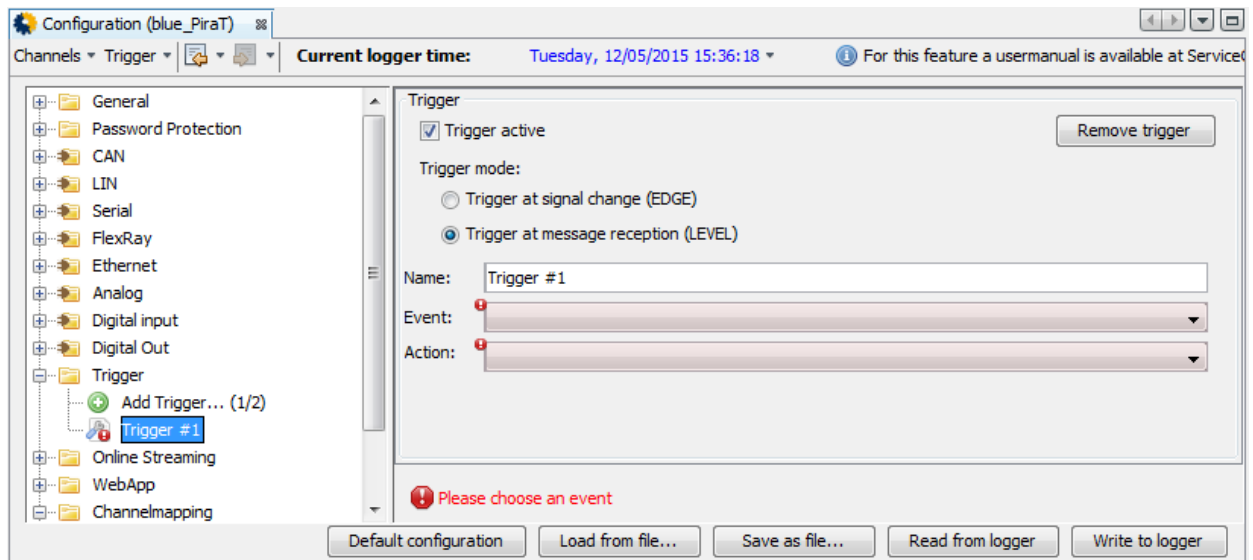

**Figure 8.80: Configuration – Trigger – Trigger #...**

When at least one trigger was added clicking the folder **[Trigger]** will open an overview of all triggers and their configurations in the right window, see section 8.13.10 Trigger overview.

Trigger	Active	Trigger mode	Event	Action
Trigger #1	<input checked="" type="checkbox"/>	Trigger at message re...	Key F1 pressed	Entry to event overvie...
Trigger #2	<input checked="" type="checkbox"/>	Trigger at message re...	DigitalIn #1 == 1 (High)	Set marker

**Figure 8.81: Configuration – Trigger: Trigger (overview)**

### 8.13.1 Status

Each trigger can be enabled or disabled by the right mouse button in the configuration tree, in the trigger overview and via the checkbox **Trigger active**.

If a trigger is inactive, its parameters are still kept in the configuration, but the data logger does not execute the trigger.


### 8.13.2 Remove trigger

The button **[Remove trigger]** deletes the marked trigger. It is also possible to remove via the right mouse button in the configuration tree or in the trigger overview.

### 8.13.3 Mode

Each trigger has two different modes of evaluating the trigger condition:

- Trigger at signal change (EDGE): The trigger occurs only if signal value changes and the event condition are “true”. This trigger condition mode is applicable for periodic signals (e.g., CAN signals), where only one trigger is required for the first time the event condition is true.
- Trigger at message reception (LEVEL): The trigger occurs every time a signal message was received and the event conditions are corresponding. This trigger mode is applicable if every reception of a message should cause a new trigger (Default trigger mode).

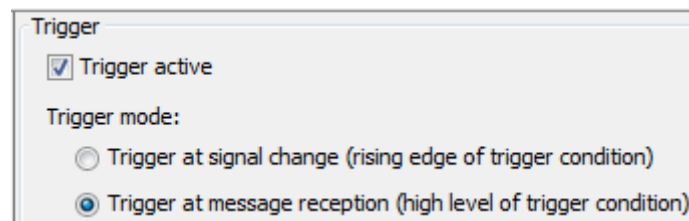

**Figure 8.82: Selecting the trigger mode**

### 8.13.4 Name

The name of the trigger can be changed by the user. The new trigger name is displayed in the configuration tree on the left hand side. The number of characters for the trigger name is limited to 50.

### 8.13.5 Event and action

The trigger function is defined by an event and a following action. Events and actions can be defined and changed by the user in any sequence.

### 8.13.6 Selecting an event

Name: Trigger #1

Event:  

Action: Complex event  
Receive CAN signal  
Received LIN signal  
Receive FlexRay signal  
Key stroke  
Digital Input  
Analog Input

! Please choose an event

**Figure 8.83: Selecting an event**

#### 8.13.6.1 Event: Complex event

The event [**Complex event**] offers the possibility to combine different single events with logical expressions to one event. One complex trigger can start only one <Action>. Different complex events can be configured to realize different actions.

The user has to select the [**Complex event**] in the first configuration step. Afterwards, the empty input field <Expression> appears. The user can now insert different event conditions by the button [**Insert element...**]. It is also possible to generate only one event condition for a complex event.

Trigger

Trigger active Remove trigger

Trigger mode:

Trigger at signal change (rising edge of trigger condition)

Trigger at message reception (high level of trigger condition)

Name: Trigger #1

Event: Complex event

Expression   !

Insert element...


Action:  

**Figure 8.84: Selecting the event \*Complex event\***


### 8.13.6.1.1 Inserting an Expression

A new expression is inserted at the current location of the cursor. Inserted items are displayed in blue text color. Error messages and warnings about items are displayed in **red text color**. If an element has been inserted, it can be deleted from the expression but not changed.

The different events are selected with the **[Insert element...]** button.

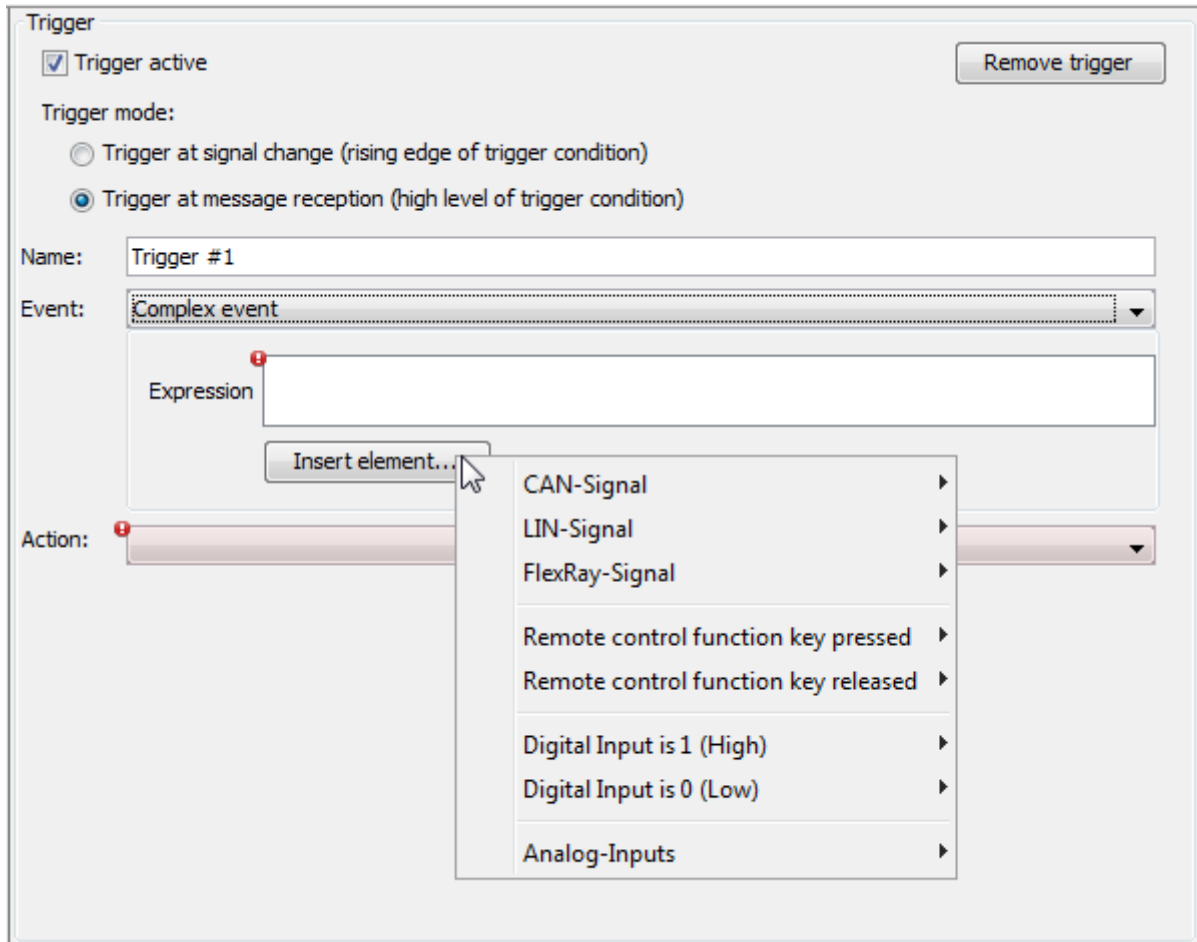


**Figure 8.85: Inserting an expression**

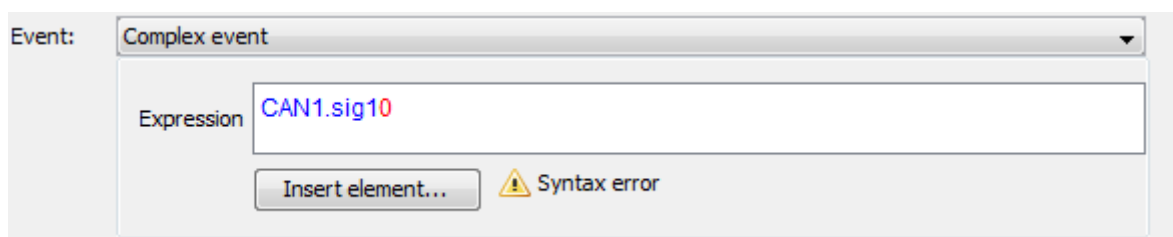

**Figure 8.86: Part of a complex event**


### 8.13.6.1.2 Expression: CAN-/LIN-/FlexRay-Signal

The corresponding CAN/LIN/FlexRay signal can be selected after clicking **[Insert element...]** in the shortcut menu.

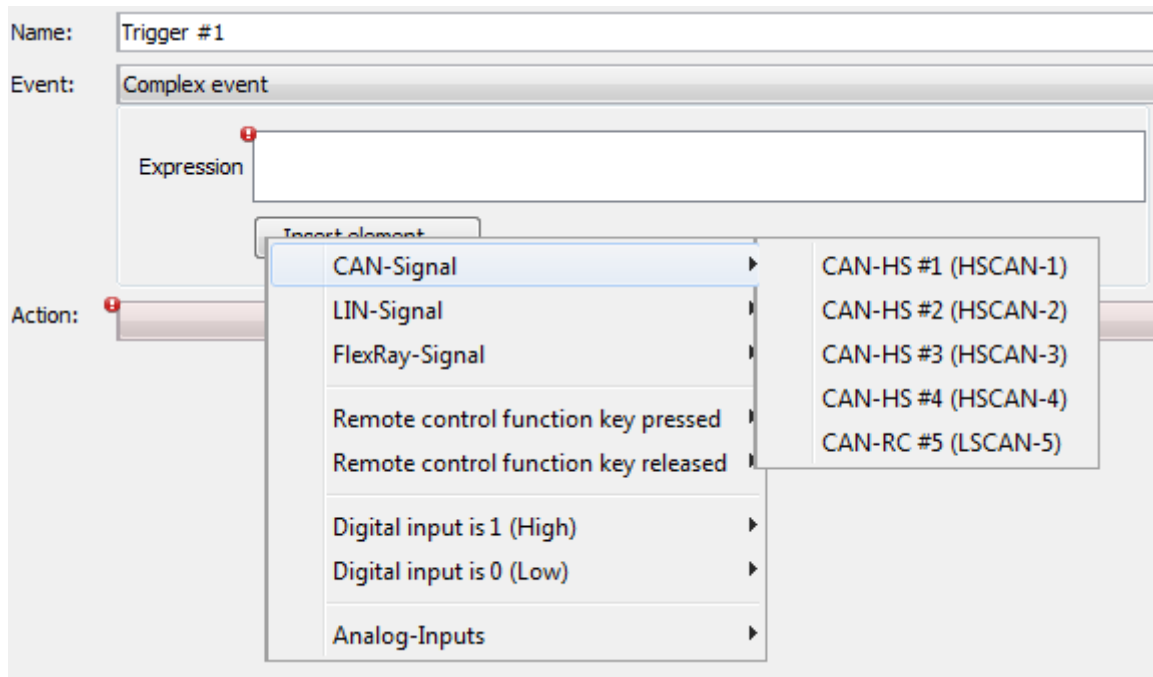

**Figure 8.87: Selecting expression “CAN-Signal”**

A dialog is opening. Here you can select the signal from a database.

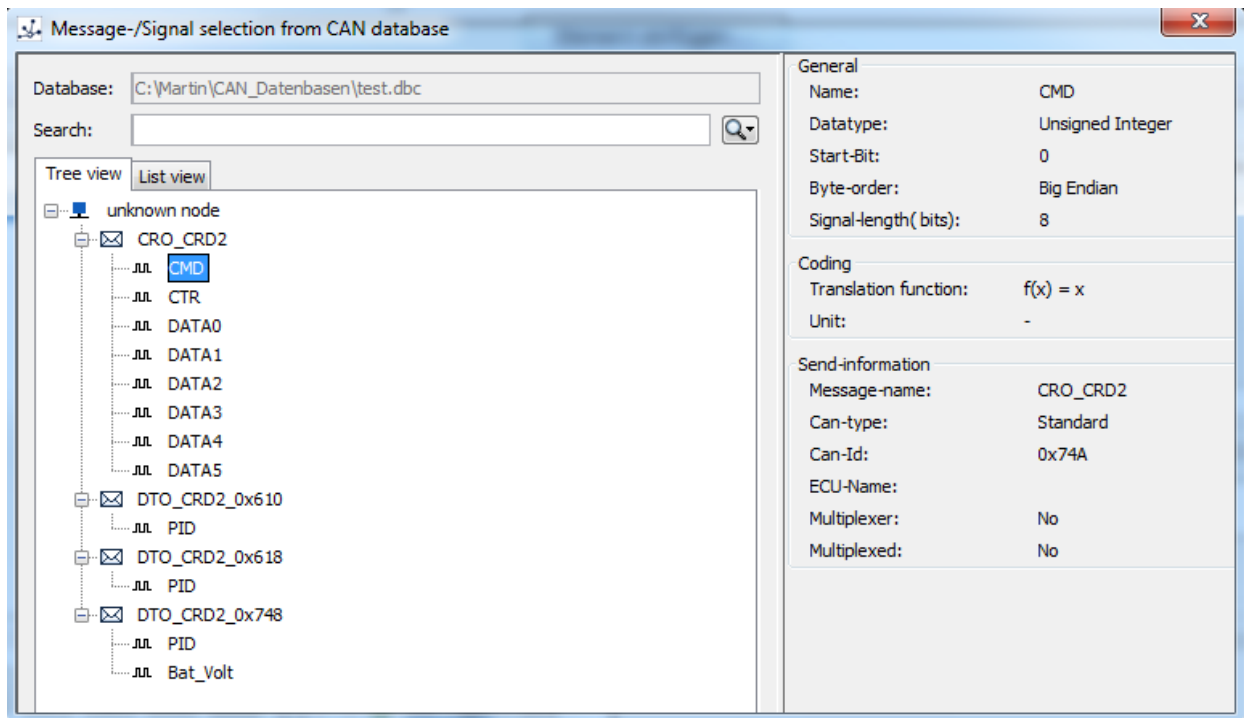

**Figure 8.88: Selecting signal from CAN database**


After selecting the signal the expression is displayed in the following format in the expression field:



\*bus\*\*channel number\*. \*signal name\*

It is not possible to edit the signal name or channel number.

To complete the condition, the user has to insert 1. an operator and 2. a reference value (i.e., a scaled decimal value) by the PC keyboard. It is not possible to change this order.

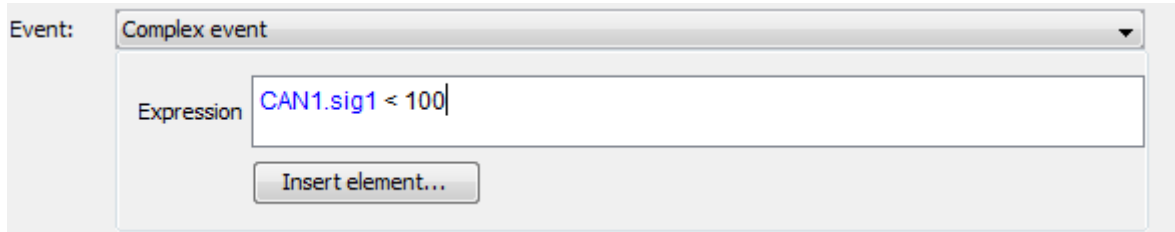


**Figure 8.89: CAN expression**

### 8.13.6.1.3 Expression: Remote control function key

Two options are available for the Remote Control (Voice) function keys [F1] to [F10]:

- Remote control function key pressed → F\*key number\*
- Remote control function key released → F\*key number\*

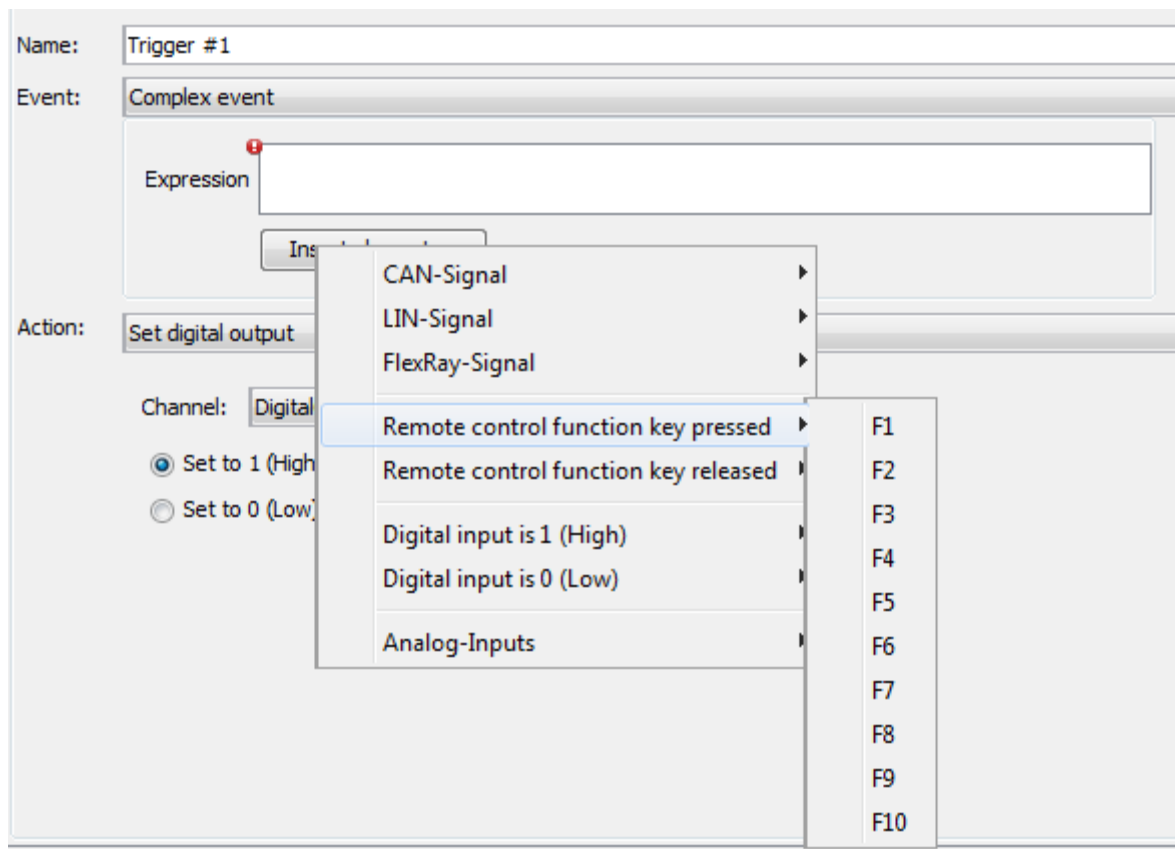


**Figure 8.90: Selecting expression “Remote control function key pressed/released”**

The event conditions are automatically generated and displayed in the expression field. There is no additional user input required.

pressed            Function will be done by pressing the key.  
released          Function will be done by releasing the key.

The event conditions are displayed in the expression field as followed:  
RC.F\*key number\* = PRESSED  
RC.F\*key number\* = RELEASED

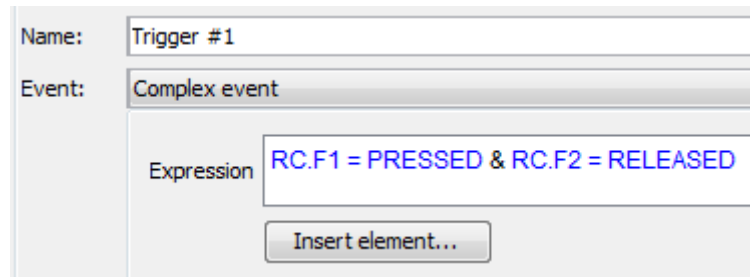


**Figure 8.91: Remote Control function key expression**

It is not possible to edit the digital input event in the expression field after it has been added.

#### 8.13.6.1.4 Expression: Digital input


Two options are available for the digital input signals:  
Digital input is 1 (High)  
Digital input is 0 (Low)

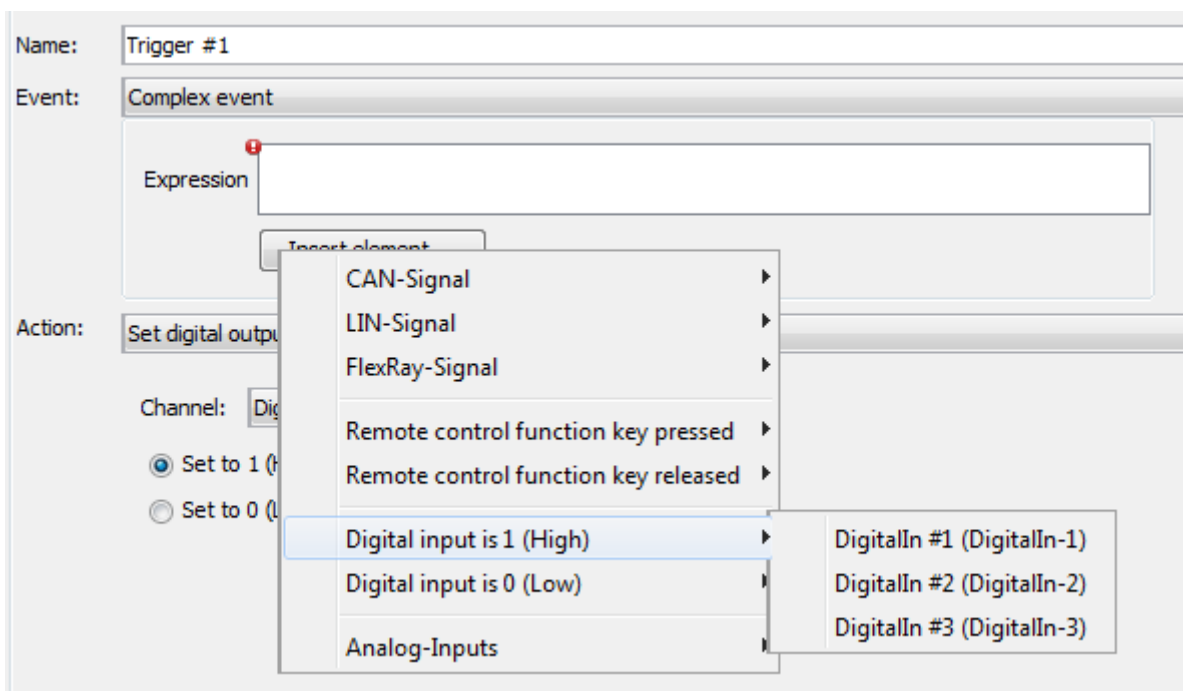

**Figure 8.92: Selecting expression “Digital input is 1 (High)/0 (Low)”**

The event conditions are automatically generated and displayed in the expression field. There is no additional user input required. The event conditions are displayed in the expression field as followed:


DIGIN#\*channel number\* = 1  
DIGIN#\*channel number\* = 0

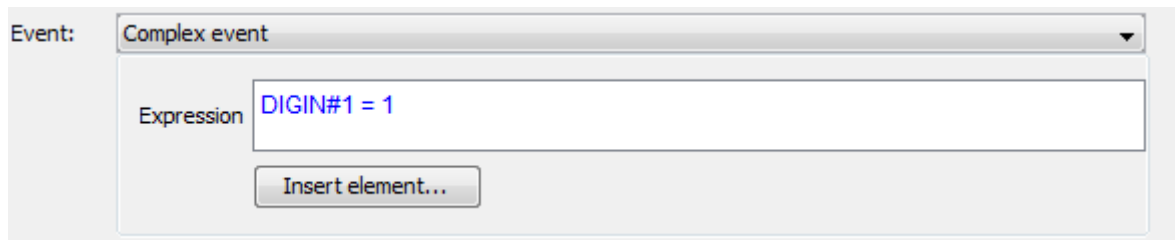

**Figure 8.93: Digital input expression**

It is not possible to edit the digital input event in the expression field after it has been added.

### 8.13.6.1.5 Expression: Analog input

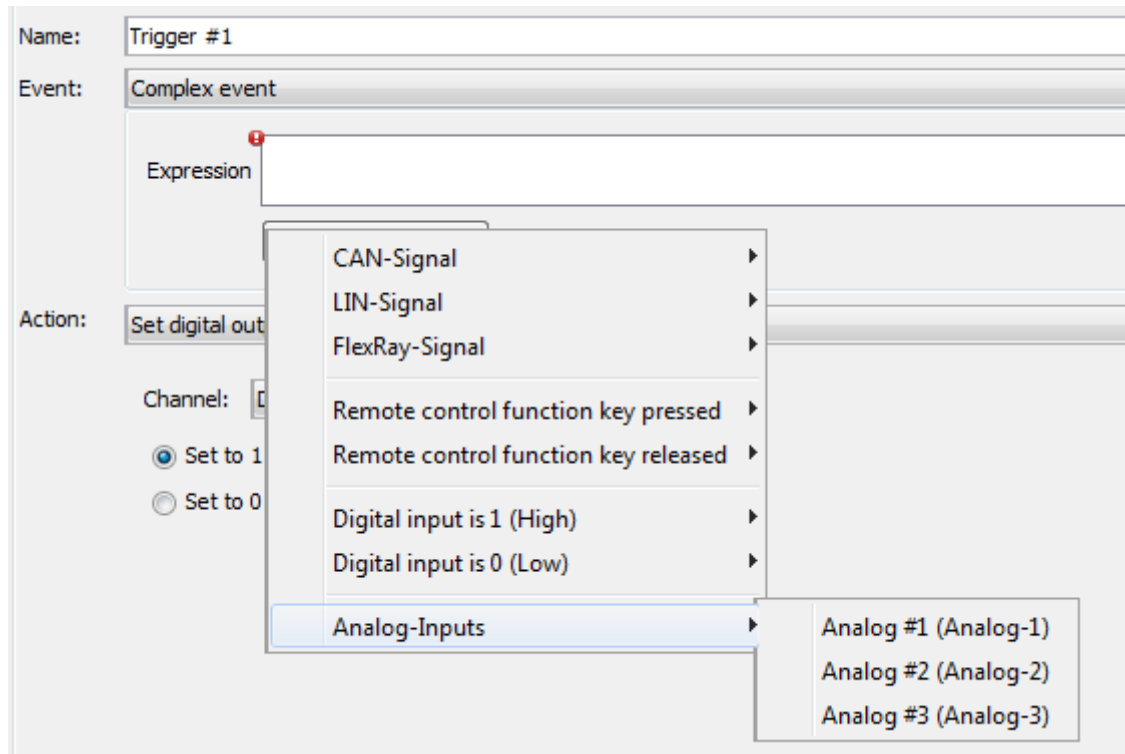

**Figure 8.94: Selecting expression “Analog input”**

After selecting the analog signal the signal is displayed in the following format in the expression field:

AI\*channel number\*

**Figure 8.95: Analog input expression**

It is not possible to edit the signal name or channel number.

To complete the condition, the user has to insert 1. an operator and 2. a reference value (i.e., a scaled decimal value) by the PC keyboard. It is not possible to change this order.

### 8.13.6.1.6 Overview of operators

The following compare operations, logical operations and numerical characters are available to combine different single events to a valid complex event expression.

<b>Logical Operators</b>	&	logical AND combination
		logical OR combination
	!	negation of events expressions
<b>Compare operations / inequalities</b>	<	less than
	<=	less than or equal
	>	greater than
	>=	greater than or equal
	=	equal
	!=	not equal
<b>Alphanumerical characters</b>	0 to 9	compare values
<b>Characters</b>	" ( " resp. " ) "	Brackets for event expressions
	". " resp. ", "	Dot and comma for floating point expressions will be processed equivalent. The presentation depends on the language settings chosen during the client installation.

**Table 8.4: Operators (overview)**

The user has to enter the compare operators, logical operators and characters by the keyboard into the expression field. The configuration can be changed any time by the user.


**Note:**

**It is not possible for the user to insert a space character. Space characters are inserted automatically to improve the readability.**

The single event conditions of a complex event expression are processed by a defined priority list:

Operator	Description	Priority
( )	Brackets	1 (high)
!	NOT	2
< , <= , > , >= , = , !=	Comparisons	3
& ,	Logical AND, OR	4 (low)

**Table 8.5: Priority order of the operators**

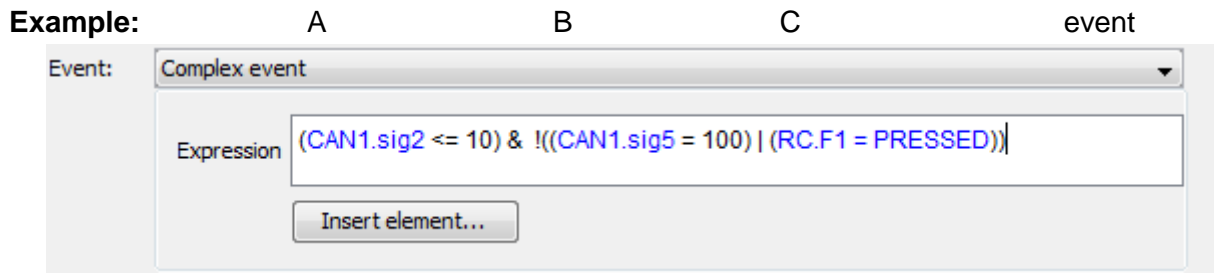

**Figure 8.96: Valid expression of complex event**


**Process order:**

1. Determination of results from the bracket terms of the event expressions A, B and C
2. Determination of result from event expression B and C combined with logical OR; Negation of the result
3. Logical AND is applied to the result of step 2 and the result of event condition A

The NOT operator always applies to the subsequent bracket expression.

**8.13.6.1.7 Verification of input parameter**

The complex event expression is validated immediately after each user input. Error and warning messages, if applicable, are displayed in the expression field in **red** and described below.

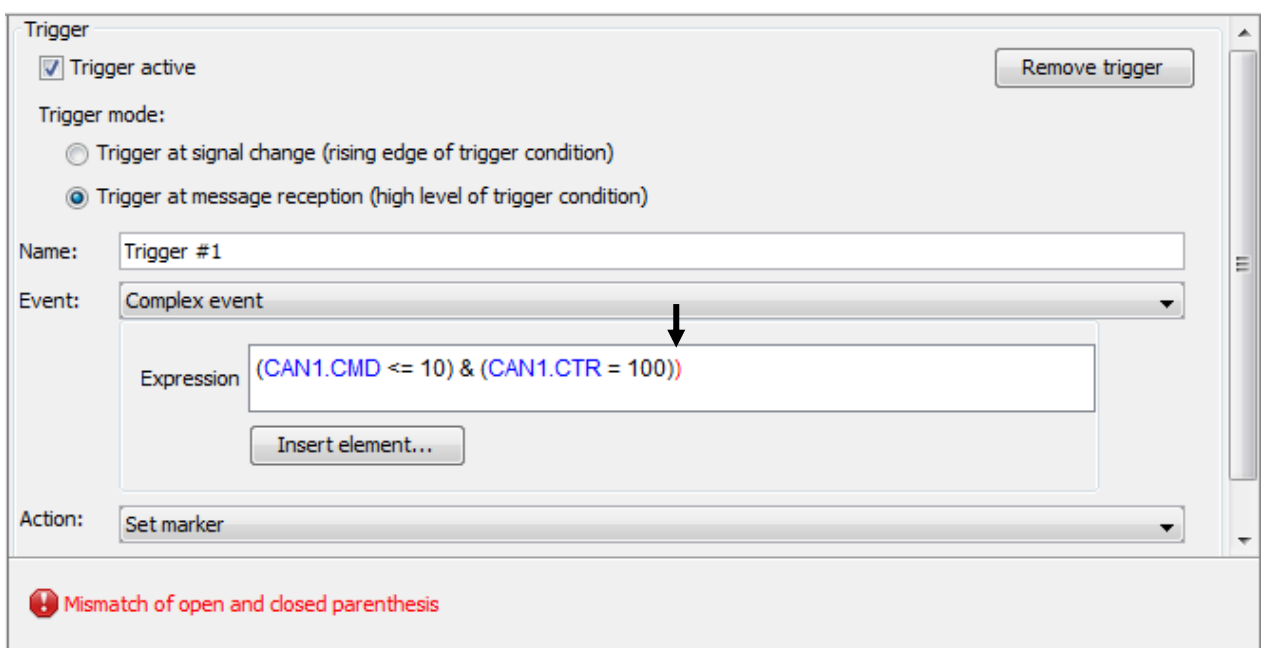

**Figure 8.97: Verification of input parameter**

The following error and warning messages are displayed:

**Mismatch of open and closed parenthesis**

The number of opened brackets is not equal to the number of closed brackets.

**CAN signal parameter doesn't match the selected CAN data base**


After the CAN database has been changed, the selected CAN signals are not available in the new database.

**Syntax error**

Compare operators or logical operators are missing or event conditions are used not correctly.

**Moving Cursor**

The cursor can be moved by the user either with the arrow keys of the PC keyboard or with the PC mouse. Inserted elements are skipped by the cursor because they can't be edited.

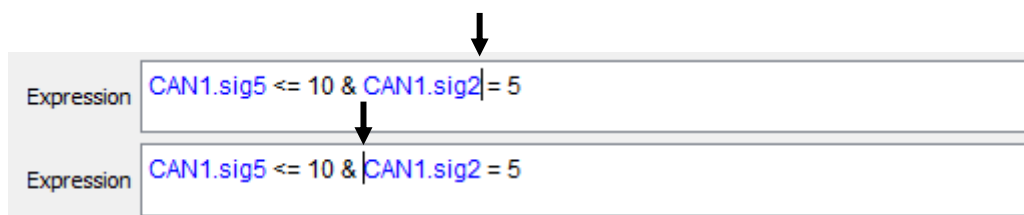


**Figure 8.98: Moving cursor**

**8.13.6.1.8 Deleting events, characters and operators**

Events, characters and operators can be marked and/or deleted as followed:

<b>backspace button</b>	Marked event, character or operator on the left hand side of the cursor is deleted.
<b>delete button</b>	Marked event, character or operator on the right hand side of the cursor is deleted.
<b>PC mouse</b>	Event, character or operator is marked with the pressed left mouse button.

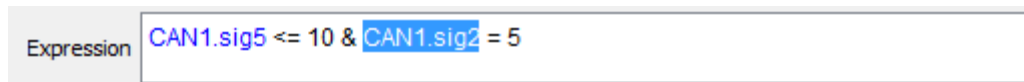

**Figure 8.99: Deleting event/character/operator**

All elements of a complex event expression can be marked and deleted individually or altogether. A single event (CAN signal, function key and digital input) can be deleted only at once.

### 8.13.6.1.9 Changing CAN databases

If the CAN database is changed before loading the configuration or during configuration of the trigger parameter, the display in the expression field is updated automatically. The signal name of the new CAN database is displayed. The old signal name is kept in case the CAN signal is not listed in the new CAN database or the CAN database was deactivated. In this case, the CAN signal is displayed in **red**.

#### Example:

- The expression field contains “CAN1.clampstatus = 3”. It is a CAN signal from the database with the CAN ID 0x480 and the data bit 0-7, which was used during CAN signal configuration.
- The user switches to a new CAN database.
- In the new database the CAN signal with the CAN ID 0x480 and the data bit 0-7 is named “clampstatus\_new”.
- In the expression field the new signal name is automatically updated to “CAN1.clampstatus\_new = 3”.
- Now the user deactivates the CAN database in the configurator.
- In the expression field the signal name changes to “CAN1.clampstatus\_new = 3”.
- The signal name changes to “CAN1.clampstatus\_new = 3”.

### 8.13.6.2 Event: Receive CAN/LIN/FlexRay signal

With the event **[Receive CAN/LIN/FlexRay signal]** it is possible to define a signal as a trigger.

It is possible to check the whole message or a single signal.

Here you can enter the signal manually or load it from a database. To **[Load from Database...]** you must select a database for the corresponding channel in the category **[Databases]**.

The screenshot shows a 'Trigger' configuration window. At the top, there is a 'Trigger active' checkbox which is checked, and a 'Remove trigger' button. Below this, the 'Trigger mode' is set to 'Trigger at message reception (high level of trigger condition)'. The 'Name' field contains 'Trigger #1'. The 'Event' dropdown menu is open, showing 'Received CAN signal' selected. Underneath, the 'Channel' is set to 'CAN-HS #1 (HSCAN-1)'. The 'CAN ID (Hex)' is '00', and the 'Startbit' is '0'. The 'Length (in Bit)' is '8'. The 'Value (Hex)' is '00'. The 'Byte Order' is 'Big Endian'. The 'Data Field' is represented by a horizontal bar with '00000000' at the start and 'Bit 0' to 'Bit 63' labels. A 'Load from Database...' button is located at the bottom left. At the very bottom, there is an 'Action:' field with a red error icon.

**Figure 8.100: Selecting event \*Receive CAN signal\***

### 8.13.6.3 Event: Key stroke

The event **[Key stroke]** is defined by clicking the **[Trigger]** button of the logger / the Remote Control or function keys **[F1]** to **[F10]**.

The screenshot shows a configuration window titled "Trigger". At the top, there is a checkbox for "Trigger active" which is checked, and a "Remove trigger" button. Below this, the "Trigger mode:" section has two radio buttons: "Trigger at signal change (rising edge of trigger condition)" and "Trigger at message reception (high level of trigger condition)", with the latter selected. The "Name:" field contains "Trigger #1". The "Event:" dropdown menu is set to "Key stroke". The "Key:" dropdown menu is open, showing a list of options: "Trigger (Remote Control or Logger)", "F1 (Remote Control)", "F2 (Remote Control)", "F3 (Remote Control)", "F4 (Remote Control)", "F5 (Remote Control)", "F6 (Remote Control)", "F7 (Remote Control)", "F8 (Remote Control)", "F9 (Remote Control)", and "F10 (Remote Control)". The "Action:" field is empty. At the bottom of the window, a red error message with an exclamation mark icon reads "Please choose a key".

**Figure 8.101: Selecting triggering key**

This screenshot shows the same configuration window as Figure 8.101, but with the "Key:" dropdown menu closed and set to "Trigger (Remote Control or Logger)". Below the "Key:" field, there are two radio buttons for key status: "pressed" (which is selected) and "released".

**Figure 8.102: Selecting key status**

The key status can be **pressed** or **released**. These parameters have to be selected by the user.

The associated action is executed, e.g., when you have selected **pressed**, by pressing the key.

A connected Remote Control (RC) / Remote Control Voice (RCV) / Remote Control Touch (RCT) / blue PiraT Remote (bPR) is required for using the function keys **[F1]** to **[F10]**.



### 8.13.6.4 Event: Digital Input

The event **[Digital Input]** is defined by selecting the channel and the signal status **[1 (High)]** or **[0 (Low)]**. This parameter has to be selected by the user.

The screenshot shows a configuration window for a trigger. At the top, it says 'Trigger' and has a 'Remove trigger' button. Below that, 'Trigger active' is checked. Under 'Trigger mode:', there are two radio buttons: 'Trigger at signal change (rising edge of trigger condition)' and 'Trigger at message reception (high level of trigger condition)', with the second one selected. The 'Name:' field contains 'Trigger #1'. The 'Event:' dropdown menu is set to 'Digital Input'. Below that, the 'Channel:' dropdown is set to 'DigitalIn #1 (DigitalIn-1)', with a 'Go to channel settings' link. There are two radio buttons for signal status: '1 (High)' (selected) and '0 (Low)'. A 'Go to DigitalIn general' link is also present. At the bottom, the 'Action:' dropdown is empty.

**Figure 8.103: Selecting event \*Digital Input\***

The switching threshold depends on the used digital input (see also section 8.11 Digital input ).

**Note:**

**Signal evaluation corresponding to the used digital input. Depending on the application the trigger must be configured compatible to the digital input.**

The number of available digital input channels depends on the used device type. To define the exact number, please look at the hardware manual.

### 8.13.6.5 Event: Analog Input

The event **[Analog Input]** is defined by the comparison of the analog input and the selected voltage value. The value must be set in mV.


**Hint:**

**The voltage must exactly correspond to the set value. If this is not the case, no action is triggered. To define an interval, the complex events can be used, see section Expression: Analog input.**

**Figure 8.104: Selecting event \*Analog Input\***

### 8.13.7 Selecting an action

After the configuration of the trigger event, the selection of the trigger action is required. Some of the shown points are only available with additional licenses!

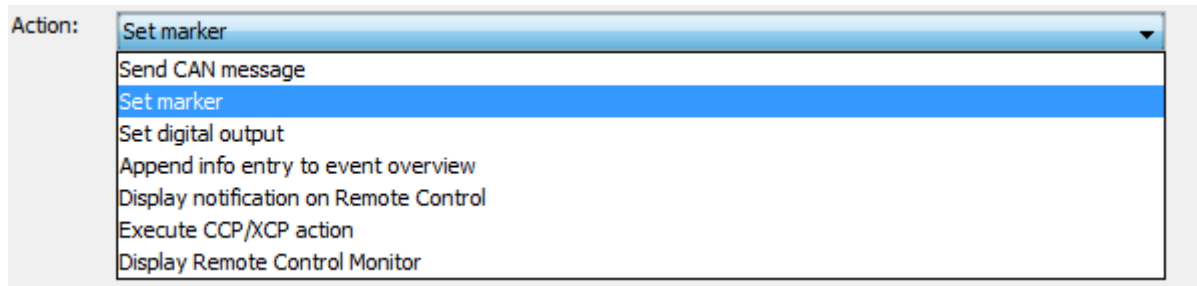


**Figure 8.105: Selecting an action**

The required trigger action can be selected in the dropdown menu <Action>.

#### 8.13.7.1 Action: Send CAN message

After selecting the trigger action [**Send CAN message**] additional parameters have to be set by the user.

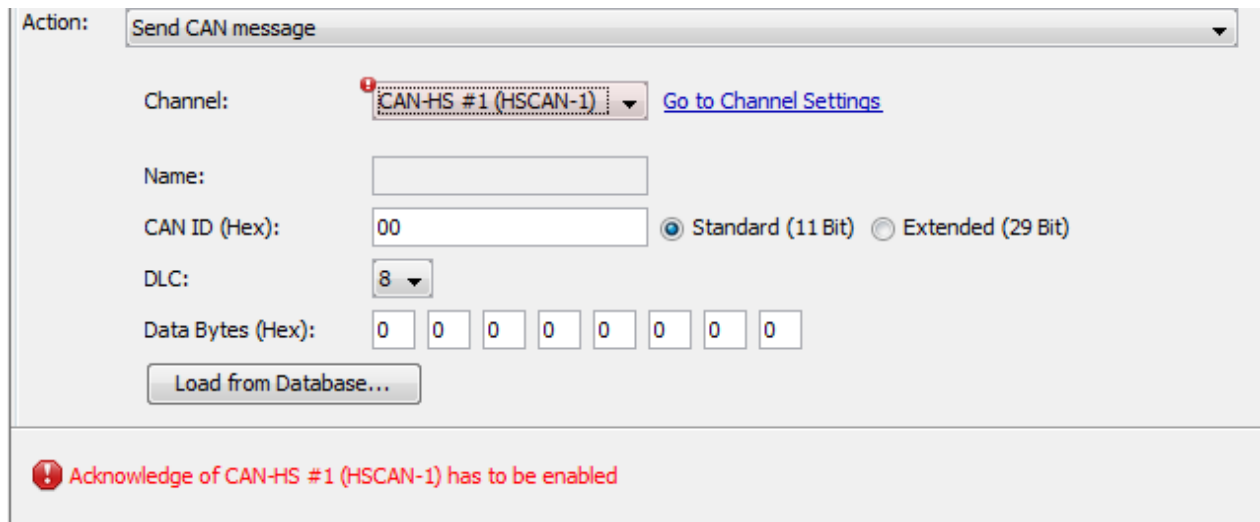

**Figure 8.106: Selecting action \*Send CAN message\***


The CAN message parameters can be selected manually or automatically by using the CAN database. You can also choose between 11 bit and extended 29 bit CAN identifier length.

**Warning:**

**Using this function can influence the vehicle network significantly. When using this function a person must be aware of the consequences sending the specified CAN messages.**

### 8.13.7.2 Action: Set marker

The behavior of the action **[Set marker]** is identical to the behavior when the user pushes the **[Trigger]** button on front panel of the device or on the remote control.

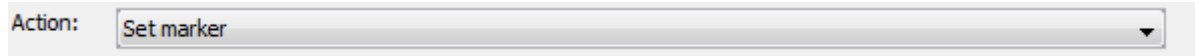

**Figure 8.107: Selecting action \*Set marker\***

There is no additional user input required for this action. The following steps are done by setting a marker:

- Recording the time stamp and the marker counter to the trace data
- Increase the marker counter by one
- Optical and acoustic feedback from the remote control
- Write marker info to the <Event overview>
- Flashing of the LED on the front panel of the device

**Hint:**

**If you select the event [Trigger] button and the action „Set marker“, at each key press two marker will be set.**

### 8.13.7.3 Action: Set digital output

It is possible to switch a digital output on with the action **[Set digital output]**. The level of the output signal then corresponds to the power supply level (KL30). The digital output has a maximal load of 100 mA.

This action also allows switching off a digital output by setting his status to 0 (Low). The off level of the output signal is 0 V (KL31).




**Figure 8.108: Selecting action \*Set digital output\***

There is no additional user configuration required for this trigger action.

### 8.13.7.4 Action: Append info entry to event overview

For the action **[Append info entry to event overview]** it is possible to configure a user defined message with included signals from the available interfaces. The message is limited to a maximum of 75 characters.

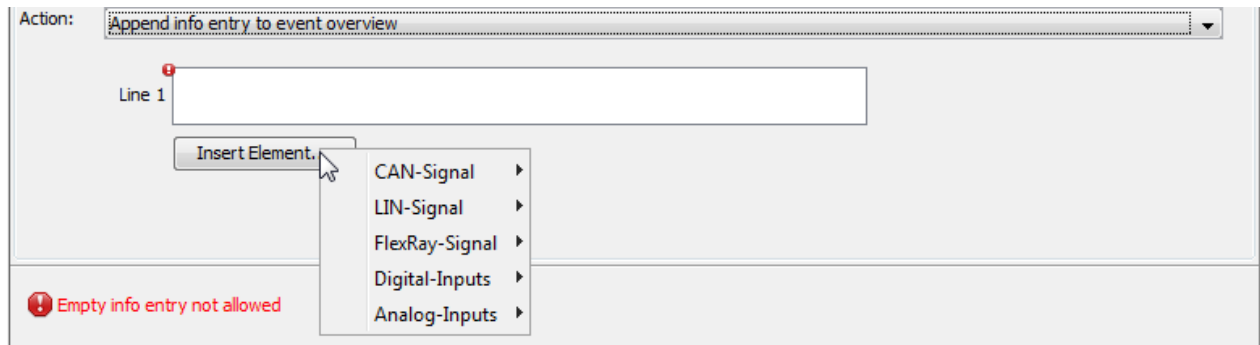


**Figure 8.109: Selecting action \*Append info entry to event overview\***

The message is displayed in the <Event overview> during the download or format conversion process of the trace data.

### 8.13.7.5 Action: Display notification on Remote Control

For the action **[Display notification on Remote Control]** it is possible to configure a user defined message with included CAN signals. For the info display there are 20 characters per line and total four lines available.

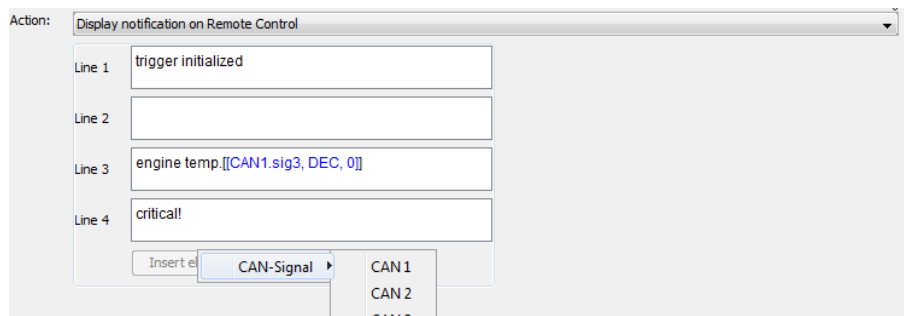

**Figure 8.110: Selecting action \*Display notification on Remote Control\***


The message is displayed for four seconds. The previous remote control screen is displayed after this time has passed. If an additional complex trigger or a marker is executed during this, the current message is overwritten by the new one.

```
trigger initialized
engine temp.[200.0]
critical !
```

**Figure 8.111: Notification on Remote Control**

### 8.13.7.6 Action: Execute CCP/XCP action (with add. License only)

It is possible to define a CCP/XCP action. If you define an action with the Name, e.g., “CCP Trigger” you can use this action in the CCP/XCP menu as “Start or Stop Event”. For further information please have a look at the CCP/XCP user guide.

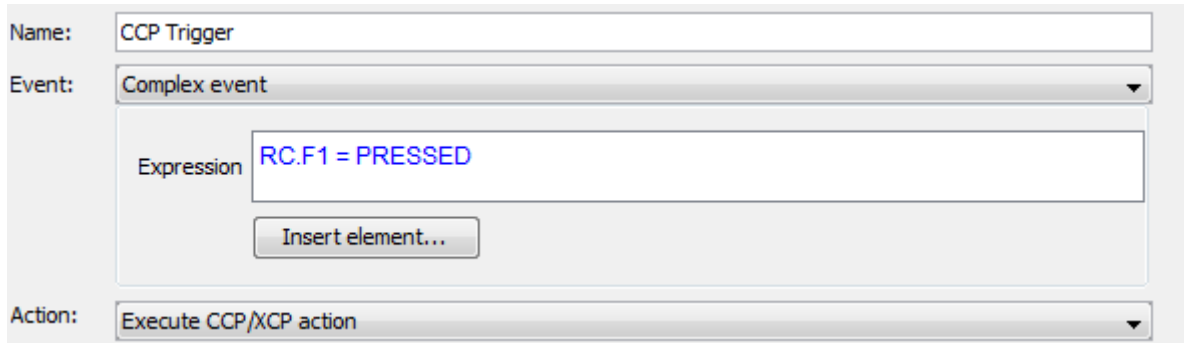

The screenshot shows a configuration window for a CCP/XCP action. It contains the following fields and controls:

- Name:** A text input field containing "CCP Trigger".
- Event:** A dropdown menu currently set to "Complex event".
- Expression:** A text input field containing "RC.F1 = PRESSED".
- Insert element...:** A button located below the expression field.
- Action:** A dropdown menu currently set to "Execute CCP/XCP action".

**Figure 8.112: Selecting action \*Execute CCP/XCP action\***

### 8.13.7.7 Action: Display Remote Control Monitor (with add. License only)

Selected signals can be displayed by the Remote Control with the trigger action [**Display Remote Control Monitor**]. This trigger action is only available if the license **Remote Control Monitor** is installed. The user guide Remote Control Monitor describes the configuration and the functionality of this license.

[Index](#)

### 8.13.8 Setting a marker via an external button

It is possible to set a Marker via a button and a digital input of the logger. Important is to activate the digital input with the **Timing Mode** (100 ms), see 8.11.2 General settings .

**Figure 8.113: Setting a marker via an external button**

By these settings the bouncing of the switch is repressed. The button is connected to the board voltage of the car and to the digital input of the data logger.


**Note:**

The analog and digital inputs of the blue PiraT Mini are summarized to one wire. Here it is also necessary to connect the ground for the analog inputs.

### 8.13.9 Event management

**Note:**

This function is only available with a valid license for Complex Triggers.

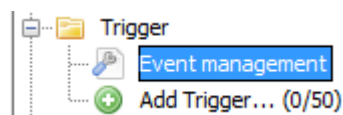

**Figure 8.114: Configuration – Trigger – Event management**

With the **[Event management]** you can manage the list of created events. You can define new events by clicking **[New event]** and delete existing events by clicking **[Delete event]**.

Name	Expression
Trigger	RC.F1 = PRESSED
Trigger Event 2	RC.F1 = RELEASED

Name:

Event:

Expression:

**Figure 8.115: Event management**

**Workflow:**

1. Click **[New event]**.
2. Give this event a name, e.g., "Trigger Event 2".
3. Define an <Expression> using the **[Insert element...]** button.
4. Add a new trigger to the configuration tree by clicking **[Add Trigger... (.../50)]**.
5. For the <Event> choose **[Complex event]**. Now you can insert the newly defined event.

Name:

Event:

Expression:

Action:


- CAN-Signal
- Remote control function key pressed
- Remote control function key released
- Digital input #1 active
- Digital input #1 inactive
- Custom event
  - Trigger
  - Trigger Event 2

**Figure 8.116: Selecting "Custom event"**



## 8.13.10 Trigger overview

To manage your trigger as fast as possible we included the trigger overview. You can reach the trigger overview by clicking the category **[Trigger]**.

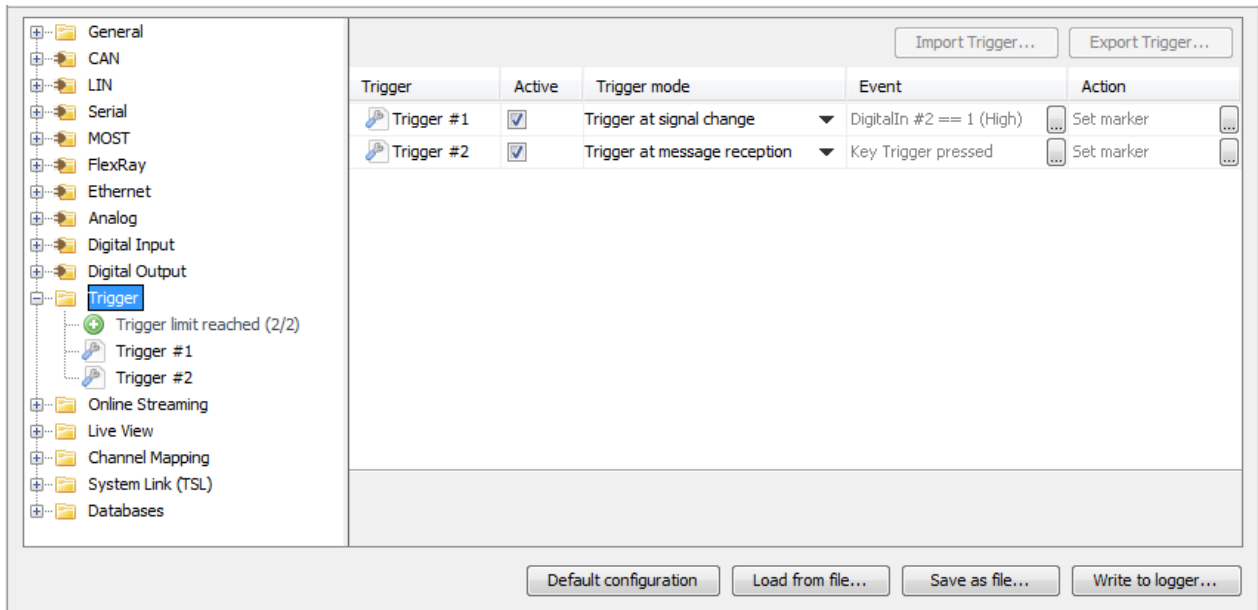

**Figure 8.117: Configuration – Trigger: Trigger (overview)**

The trigger overview contains the important information about the trigger settings.

To select every trigger press **[Strg]** und **[A]** simultaneously.

To select only multiple trigger you have two possibilities.

- Press **[Strg]** and hold it while marking single triggers. or
- Select a group of triggers one below the other by selecting the trigger on top resp. bottom of the group, pressing and holding Shift **[ ↑ ]** and finally selecting the trigger on bottom resp. top of the group.

For the selected triggers the following options are available:

- Import / export Trigger
- Duplicate Trigger
- Delete Trigger
- Activate / deactivate Trigger

### 8.13.10.1 Im- or export trigger

The import and export function perform any tasks needed to process load and store external trigger to transfer created triggers to another blue PiraT2 / blue PiraT Mini logger or configuration.

The button bar on the right above the overview contains the following buttons.

Button	Effect
Import Trigger...	imports trigger by converting from external *.zip archive to the internal format
Export Trigger...	exports trigger by converting from the internal format to the external *.zip archive

**Table 8.6: Buttons in the trigger overview**


The rest of the logger configuration will stay untouched. Import trigger from offline configurations is working as well.

**Note:**

**If you import a trigger with a trigger name (e.g., Trigger-001) that is already used from another trigger in the overview, you should delete or rename one of them. Otherwise you have no chance to filter the trigger in the traces.**

### 8.13.10.2 Duplicate trigger


By the function **[Duplicate Trigger]** in the shortcut menu of each trigger you can make an exact duplicate of a trigger with the same properties like the source trigger.

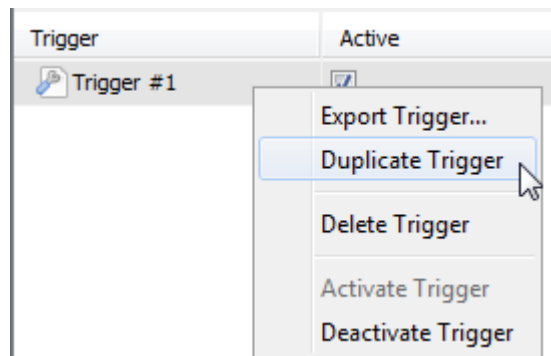

**Figure 8.118: Duplicate trigger**

To identify a duplicated trigger the name of the duplicated trigger will look like this:

**Sample:** \*name of source trigger\*\_Copy\*ID\*

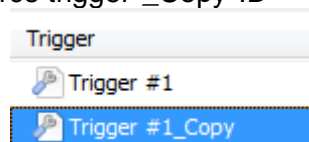

**Figure 8.119: Duplicated trigger**

### 8.13.11 Automatically eliminated trigger

The following points should be considered with regard to the trigger function execution.

- The trigger function is only available after the data logger startup is complete.
- In certain disadvantageous cases, it is possible that there is a maximum time delay of 200 milliseconds between event and action, caused by a high bus- and system-load.
- The user can configure up to 50 independent trigger events and trigger actions. Such a configuration can cause a high system load in the trigger system of the data logger. This could result in a data processing problem and possibly in partially loss of the data recording.

To avoid this situation, a trigger debouncing mechanism is implemented. The trigger debouncing is able to handle temporary high trigger load inside a limited time period with the condition "maximum number of triggers within the defined time". The trigger debouncing condition is different for each trigger action and is not changeable.

Action	Debouncing condition (max. values)
Send CAN message	10 CAN messages per 1 millisecond
Set marker	10 marker per 2 seconds
Set digital output	10 switching operations per 1 millisecond
Append info entry to event overview	100 entries per 10 minutes
Display notification on Remote Control	1 display messages per 400 milliseconds
Display Remote Control Monitor	update of the CAN signal values in 1 second

Triggers are eliminated if the number of triggers exceeds the debouncing level inside the measurement time. In this case a warning message is appended to the <Event overview>. The warning messages are created in an interval of 60 seconds. The warning message contains the name of the causing trigger action and the number of the missing triggers.

#### Example of warning message in the tab sheet "Event overview":

Warning: `\*trigger action name\*` trigger action skipped \*n\* times

n: number of skipped trigger actions of this name


The counter for missing triggers is reset to zero after each startup of the data logger.

#### Trigger action name:

- Send CAN message
- Set marker
- Set digital output
- Append info entry to event overview
- Display notification on Remote Control
- Display Remote Control Monitor

## 8.14 Online Streaming

With the checkbox **Online Streaming active** you can send the recorded data directly over the Ethernet port at the front. These data can be displayed by the internal Online Monitor too (see chapter 10 Online Monitor).

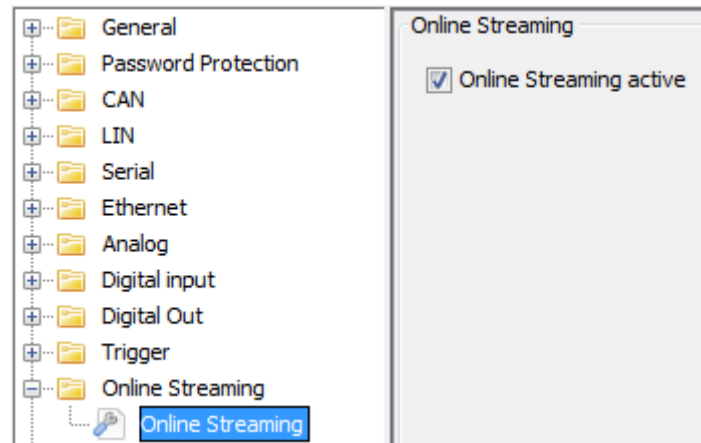

**Figure 8.120: Configuration – Online Streaming – Online Streaming**


For implementing these data into an own monitoring tool Telemotive offers an online streaming library. You can find a detailed manual in our ServiceCenter at:

**blue PiraT2 → Software Downloads → blue PiraT2 - Online Streaming Library**

This Library could also be used for the blue PiraT Mini.

## 8.15 Channelmapping

By using the channelmapping, the channel order of the logging buses can be changed, if you need other channel numbers.

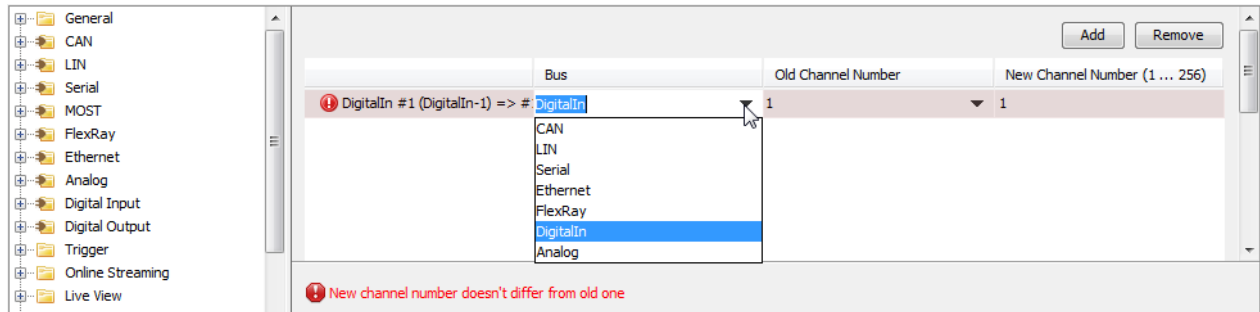

**Figure 8.121: Configuration – Channelmapping – Channelmapping**

The configured channel numbers are shown at the configuration and at the conversion. The channel numbers must be unique. There are channels from 1 to 256 possible.


### Attention:

**The channelmapping is stored on the logger and will be included by conversion and creation of a sorted offline data set. While creating an unsorted offline data set this information will be stored to the data set but not in the data itself!**

**While converting these data with another tool as the Telemotive System Client, these information about channel mapping will not be included!**

## 8.16 System Link (TSL)

The TSL allows combining several data logger to a TSL network and using them as one huge device with all combined interfaces.

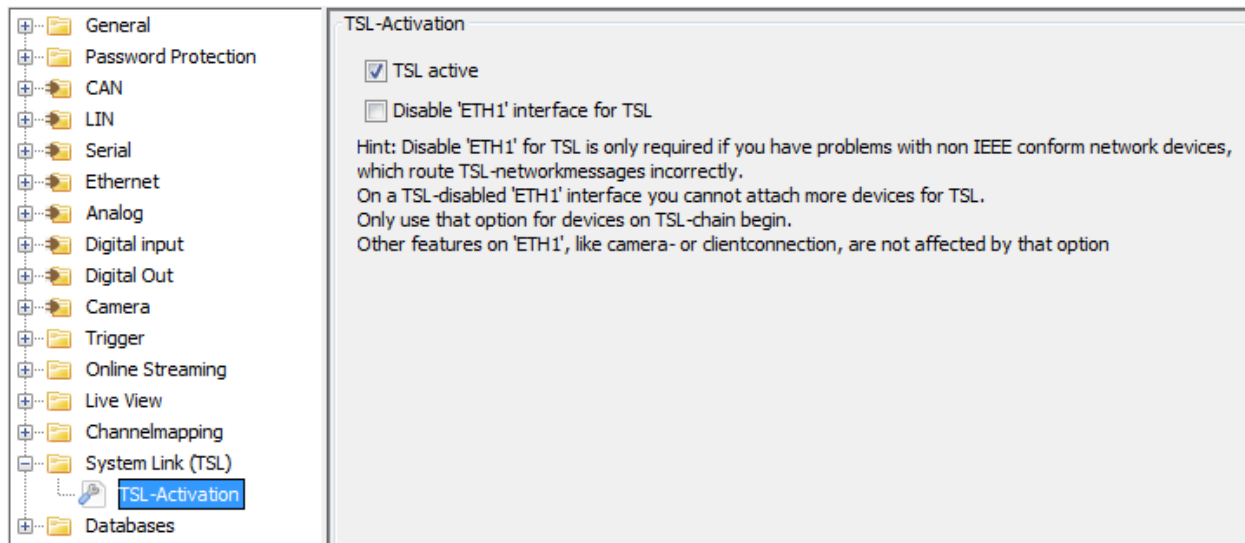


**Figure 8.122: Configuration – System Link (TSL) – TSL-Activation**

You'll find the complete manual for TSL in chapter 9 Establishing and configuring a TSL network.

## 8.17 Databases


Databases settings are accessible by opening the category **[Databases]**. The sub-categories allow configuring a database for each CAN, LIN and FlexRay channel.

Databases contain readable names and organization for bus signals which allows easier configuration of filters or triggers.

Via the combo box of a channel it is possible to quickly select previously used databases or to disable the use of databases for this channel. The file icon  on the right side of the combo box opens a file selector to choose a database from the file system.

Bus	Database
CAN	Fibex versions 3.1.1 / 4.0.0 / 4.1.0 / 4.1.1, AUTOSAR System Template 3.2.x Vektor DBC-File,
FlexRay	Fibex versions 3.1.1 / 4.0.0 / 4.1.0 / 4.1.1, AUTOSAR System Template 3.2.x
LIN	Fibex versions 3.1.1 / 4.0.0 / 4.1.0 / 4.1.1, LDF version 2.1 and 2.2

**Table 8.7: Busses and compatible databases**

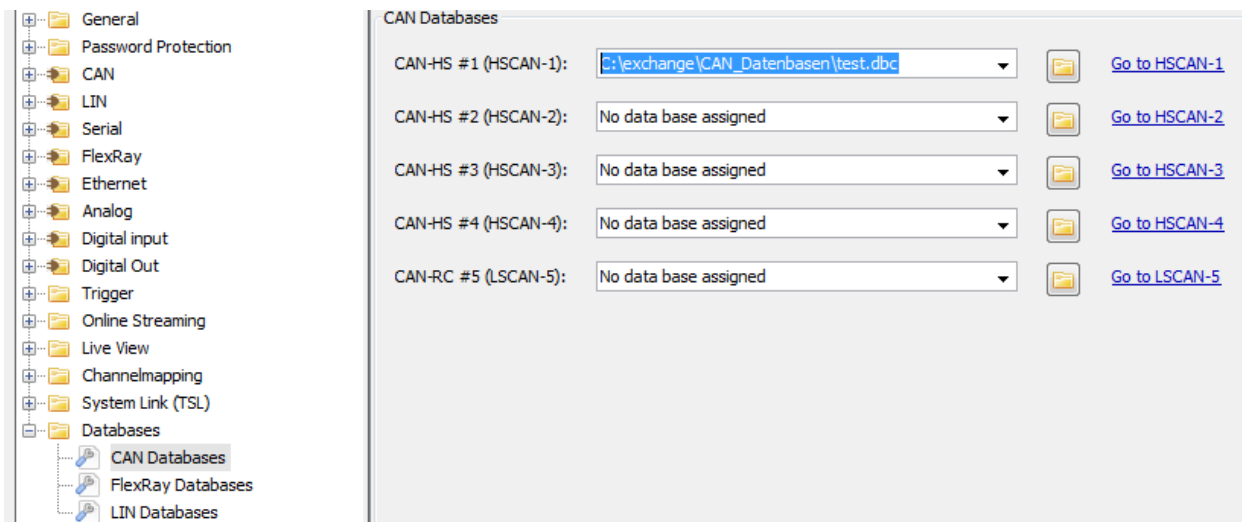

**Figure 8.123: Configuration – Databases – CAN Databases**

## 9 Establishing and configuring a TSL network

This chapter describes the special setting for using a TSL network (Telemotive System Link) of a bunch of Telemotive data loggers. Due to the fact that there are a lot of settings for the TSL, only the differences to the standard application are shown in this chapter.

**Please read this chapter carefully if you want to use a TSL network.**


### 9.1 Requirements

Only one blue PiraT2 can take place in a TSL network.

To combine several loggers to one TSL network you have to set all devices to **TSL active**. This option can be activated in category **[System Link (TSL)]** in sub-category **[TSL-Activation]**.

In the network settings please be aware that only one DHCP server can be configured for each TSL network. If the TSL network should be connected to a network with external DHCP server all devices have to be configured as DHCP client.

If there is more than one DHCP server you will get following error message while opening the TSL configuration:

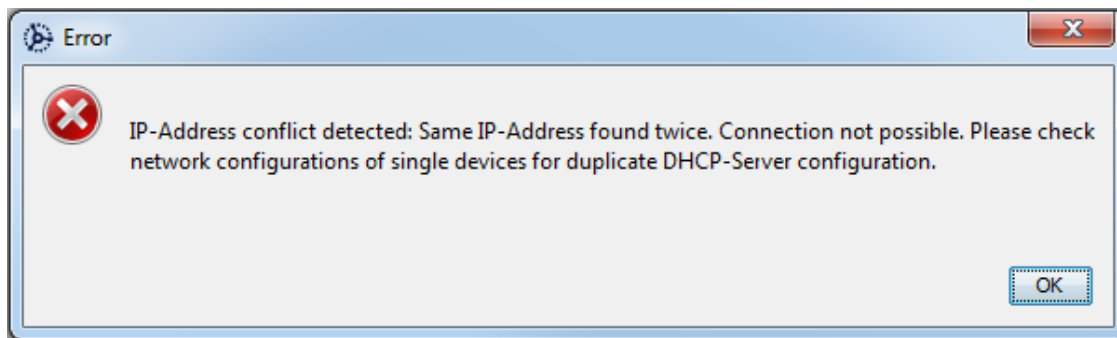

**Figure 9.1: Error message with two DHCP-Server**

If the connection of the TSL network does not work instantly please reboot all loggers to set the new network configurations as active.

#### **Attention:**


**While configuring a new TSL network, we recommend to setting the time and deleting all existing data and marker on all logger of the TSL network.**

This ensures a clean separation and synchronisation of the logged data in the TSL network.



## 9.2 Connections in TSL

The blue PiraT Mini will be connected only by the RJ45 ports at the front (**ETH #1 / TSL or ETH #2 / TSL**).

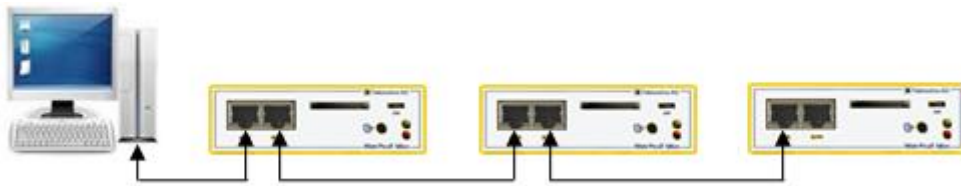

**Figure 9.2: TSL example with three blue PiraT Mini**

All data logger in a TSL network are connected as a line topology: Every device is connected to the previous and to the next device to the **ETH #1 / TSL** or **ETH #2 / TSL** port. The free ports of the first or the last device can be used to connect the TSL network to your network or directly to the client to manage the TSL network.

When you use a **blue PiraT2** or **blue PiraT2 5E** in a TSL network this device has to be the last one in the line because these devices can be connected **ONLY** by the front Ethernet port to a TSL network.


As soon as two or more TSL devices have been connected they will synchronize their time settings and when they are shown in the client they are ready to be configured.

**Note:**

**Logging with front connectors in a TSL network could lead to problems of TSL connection.**

**We suggest to use the rear ports (ETH #3 & ETH #4) for logging in a TSL network.**


## 9.3 Access to a TSL

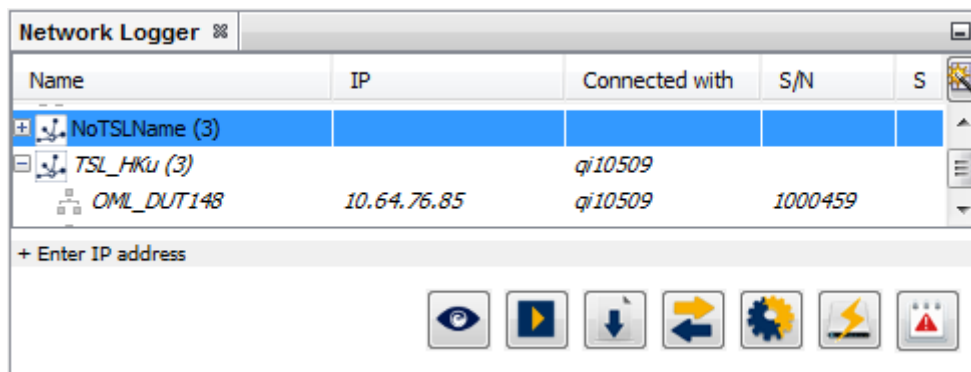

**Figure 9.3: TSL in tab “Network Logger”**

The client shows all connected TSL networks in the <Network Logger> as a knot. This knots symbol is the TSL icon and shows no IP address. In the status column the most serious status of all devices belonging to the network is shown (Error > Warning).

When you expand the knot you see the members of the TSL, slightly indented.

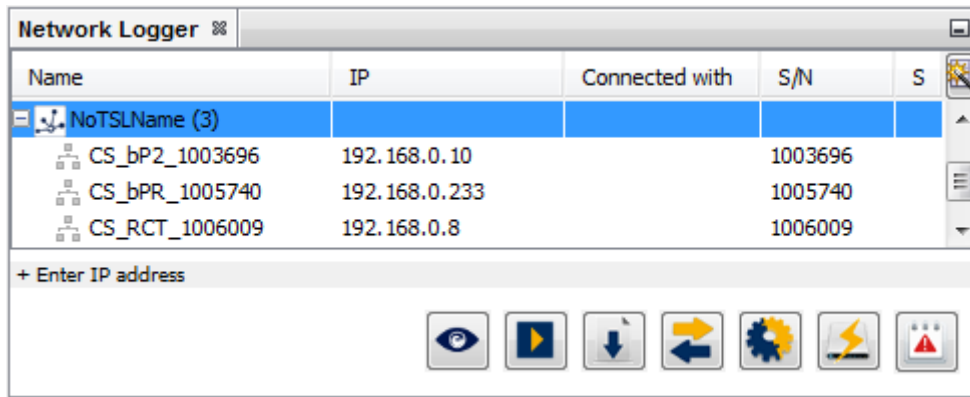

**Figure 9.4: Loggers within TSL in tab “Network Logger”**

**Available applications for TSL networks:**

- |                   |                       |
|-------------------|-----------------------|
| 1. Live View      | 5. Open configuration |
| 2. Online Monitor | 6. Update firmware    |
| 3. Download data  | 7. Open bug report    |
| 4. Convert data   |                       |

You can choose the TSL by selecting the TSL knot or one of the members. The Telemotive System Client establishes the connection to the whole TSL as well as if you use the direct IP search. Is this IP address in a TSL network the client will establish the connection to the whole TSL too.

The shortcut menu is also valid for the whole TSL network, no matter if you choose the network or the device. The only exception is the option **[Activate device LED]**. Selecting it in the shortcut menu of the TSL knot all LEDs are blinking, in the device menu only its LED blinks.

## 9.4 Marker in a TSL network


When a TSL network is established, the highest marker counter is the base for new TSL markers. If the highest marker counter is at 5, the next TSL marker has number 6 and will be synchronized to all TSL members.

## 9.5 Configuration of TSL

The TSLs configuration is the summary of the settings of all devices belonging to the network. There are consistent settings for the whole TSL.


### 9.5.1 Activating TSL

The TSL can be activated in category **[System Link (TSL)]** in sub-category **[TSL-Activation]**. On blue PiraT Mini the ETH1 port could be enabled for TSL. This is only necessary if non IEEE conform network devices are connected.

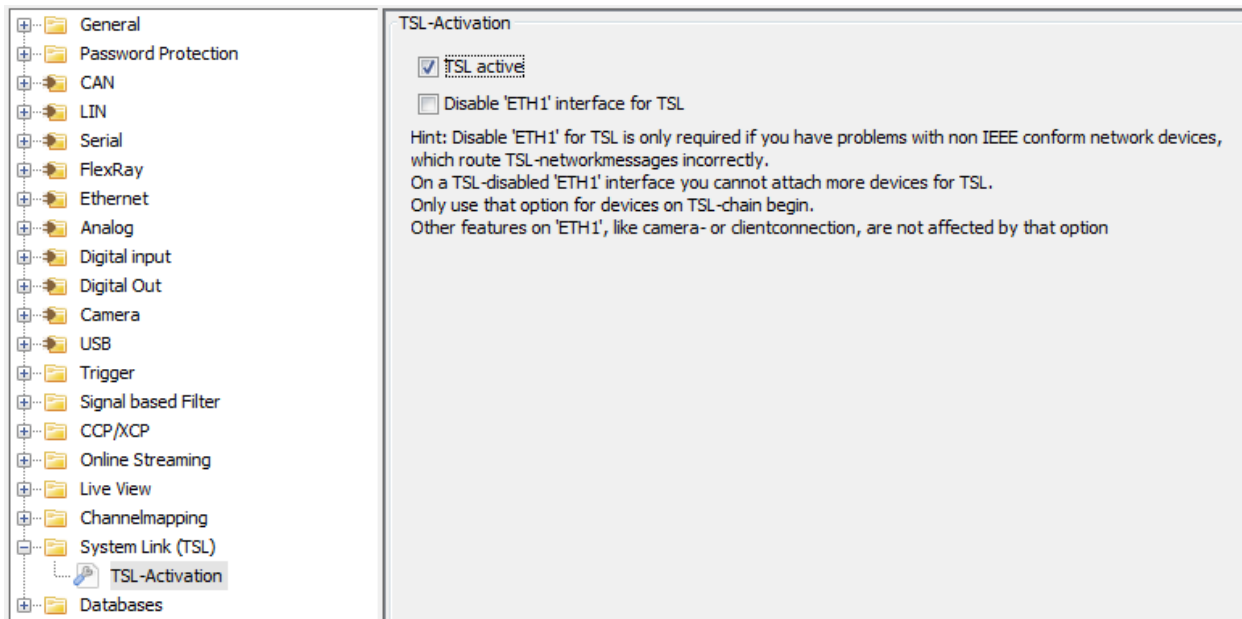

**Figure 9.5: Configuration – System Link (TSL) – TSL-Activation**

### 9.5.2 General settings – TSL

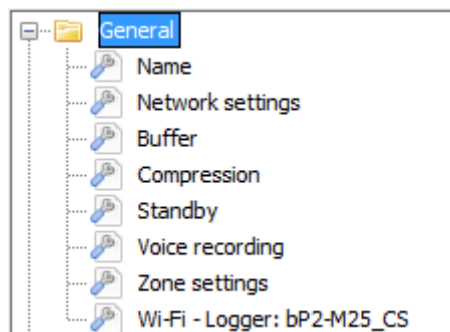

**Figure 9.6: Configuration – General**

These settings are shown separately in a sub-category:


- Name
- Network settings
- Voice recording

And these settings are valid for all TSL members:

- Buffer
- Compression (for blue PiraT2 / 5E only)
- Standby
- Zone settings


If the client detects inconsistent settings, the settings of the device with the lowest mainboard number will be used. Just the Wi-Fi settings will get separate settings because of the multiple options they offer.

Settings dedicated to only one device are grouped accordingly (group title and device name).

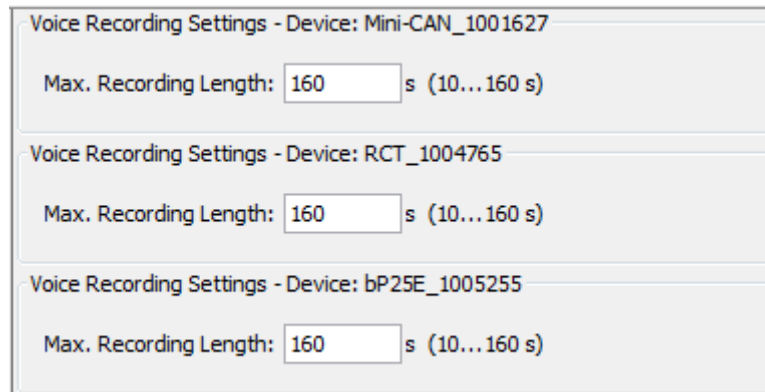

**Figure 9.7: Voice recording settings with TSL grouping**


### 9.5.3 Bus configuration – TSL

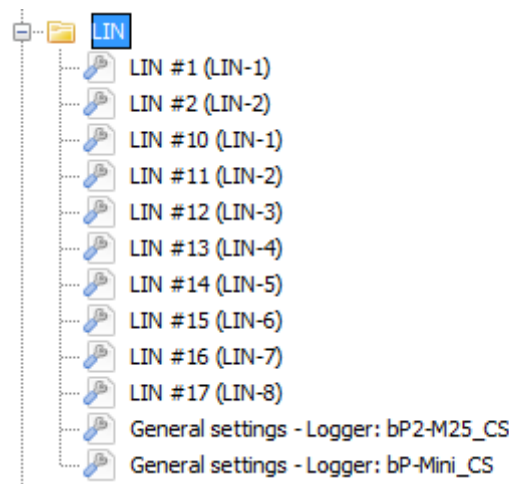

**Figure 9.8: Configuration – LIN**

All available interfaces of every bus system are listed together in the folder of the configuration tree. General settings are listed for every device separately. The number of the interface is read from the configuration and the given presets under **[System Link (TSL)] → [TSL-Cascading – Logger: ...]**. If the channel number changes during the configuration the order is not updated.

The name of the data logger is shown at the top of the sub-categories tab sheet, here: LIN #1 - Device: bP-Mini\_CS.

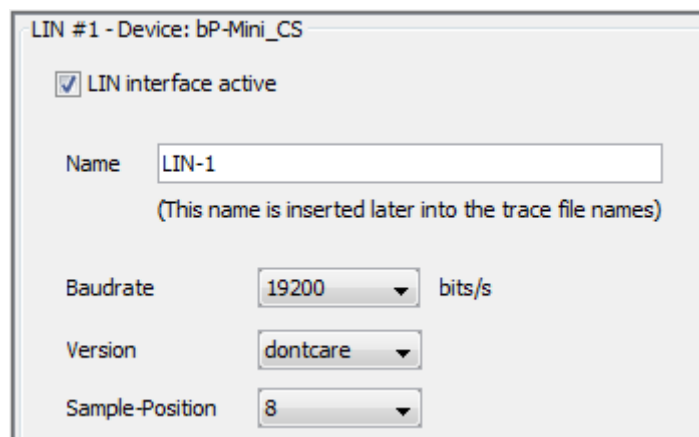


**Figure 9.9: Configuration – LIN – LIN #...**

The interface overview of a TSL network shows an additional column with the logger name and internal channel number.

Channel	Devicename (internal busid)	Active	Version	Baudrate	Wake up	Keep Awake
LIN #1 (LIN-1)	bP-Mini_CS( #1)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #2 (LIN-2)	bP-Mini_CS( #2)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #10 (LIN-1)	bP2-M25_CS( #1)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #11 (LIN-2)	bP2-M25_CS( #2)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #12 (LIN-3)	bP2-M25_CS( #3)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #13 (LIN-4)	bP2-M25_CS( #4)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #14 (LIN-5)	bP2-M25_CS( #5)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #15 (LIN-6)	bP2-M25_CS( #6)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #16 (LIN-7)	bP2-M25_CS( #7)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIN #17 (LIN-8)	bP2-M25_CS( #8)	<input checked="" type="checkbox"/>	dontcare ▼	19200 ▼	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

**Figure 9.10: Configuration – LIN: Channel (overview)**


### 9.5.4 MOST settings – TSL

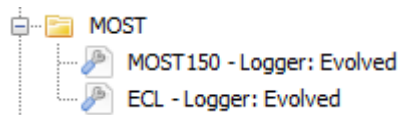

**Figure 9.11: Configuration – MOST**

The settings for all available MOST interfaces are merged into the **[MOST]** category of the configuration tree.

### 9.5.5 Ethernet port settings – TSL

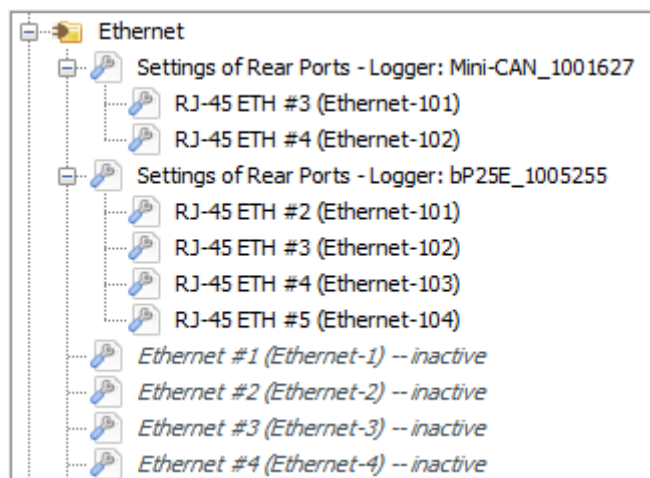

**Figure 9.12: Configuration – Ethernet – Ethernet #...**


The settings for all available Ethernet ports can be modified in the category **[Ethernet]**. Every blue PiraT Mini and blue PiraT2 HW 2.x which is member of the TSL will get an own sub-category for port settings.

The ETH port numbers are not cascaded but the numbers of the spy channels which will be written into the trace files.

### 9.5.5.1 Ethernet / camera settings – TSL

Due to the reason that the front ETH ports are needed for TSL, they are not available for camera logging when TSL is activated.

### 9.5.6 Databases – TSL

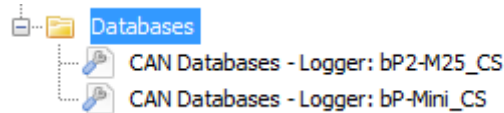


**Figure 9.13: Configuration – Databases**

The CAN databases are listed for each device separately in the category **[Databases]**. Their channel numbers are shown cascaded.


### 9.5.7 Feature configuration – TSL

Features which are available on multiple data loggers are merged to one category within each device gets a separate sub-folder.

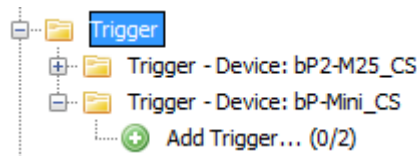

**Figure 9.14: Feature on multiple devices**

Features which are available on only one device get the logger name in the category description and no sub-folder is created.

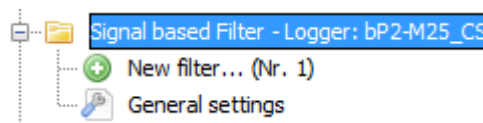

**Figure 9.15: Feature just on one device**

### 9.5.8 Password protection – TSL

Password protection can be configured for the whole TSL network or for every member. The password request will appear for every logger.



**Figure 9.16: Password configuration**


### 9.5.9 Trigger, Signal based filter, CCP/XCP, Live View – TSL

Trigger, Signal based filter, CCP/XCP and Live View can be configured for each device and will work only on this device too. The available interfaces are limited to the limit of this device. Actions for events can happen on the specific device only. There are no events which can work over the whole TSL or on another member of the TSL.

Triggers are set at all active loggers in TSL.

### 9.5.10 System Link – TSL

In the sub-category **[General]** the TSL name could be assigned. This name is shown in the Network Logger list, in offline data sets etc. (likely the logger name of single devices).

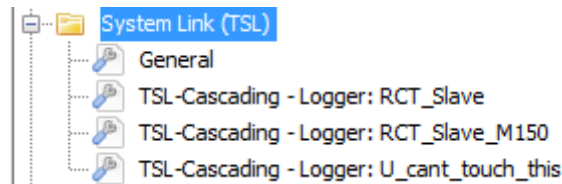

**Figure 9.17: Configuration – System Link (TSL)**

In overview tab **[System Link (TSL)]** an **[Automatic cascade]** (channel offset) is possible, i.e., the logger with the smallest mainboard number starts with channel #1. At the other loggers a channel offset will be adjusted.

The offset has to be configured so that every channel has a unique number. The display in the overview is changed immediately.

Additionally it is possible to change the start number of a channel by clicking on the interval. Please insert an integer value as start point.

Logger	CAN-C...	LIN...	Serial...	Flexr...	Ether...	Ethernet...	Analo...	DigitalIn...	Camera-Ch...	CCPXP-ECUs
TSL-Cascading - Logger: RCT_Slave	#1.. #14	#1.. #8	#1.. #6	#0.. #0	#0.. #0	#1.. #16	#1.. #2	#1.. #1	#1.. #4	#1.. #4
TSL-Cascading - Logger: RCT_Slave_M150	#15.. #16	#0.. #0	#7.. #10	#0.. #0	#0.. #0	#17.. #32	#3.. #5	#2.. #4	#5.. #8	#5.. #8
TSL-Cascading - Logger: U_cant_touch_this	#0.. #0	#0.. #0	#0.. #0	#0.. #0	#0.. #0	#34.. #49	#0.. #0	#0.. #0	#0.. #0	#0.. #0

**Figure 9.18: Configuration – System Link (TSL): Logger (overview)**

A more precise description about possible channel numbers you will find in sub-category **[System Link (TSL)]** → **[TSL-Cascading - Logger: <name>]**.

The screenshot displays the configuration window for 'TSL-Cascading'. On the left is a tree view of the system configuration, with 'System Link (TSL)' expanded to show three logger entries: 'General', 'TSL-Cascading - Logger: bP2\_M15', and 'TSL-Cascading - Logger: bPMini\_Li'. The main panel shows the configuration for the selected device 'bPMini\_Lin'. It includes several input fields for channel numbers and a checkbox for disabling the 'ETH1' interface.

Parameter	Value	Range
Device name	bPMini_Lin	
CAN channelnumber starts at	15	(1...99)
LIN channelnumber starts at	9	(1...99)
Serial channelnumber starts at	7	(1...99)
FlexRay channelnumber starts at	1	(1...99)
Ethernet-Spy channelnumber starts at	101	(101...199)
Ethernet channelnumber starts at	17	(1...90)
Analog channelnumber starts at	11	(1...99)
DigitalIn channel number starts at	6	(1...99)
Camera channelnumber starts at	5	(1...99)
CCP/XCP ECU-number starts at	5	(1...99)
Disable 'ETH1' interface for TSL	<input type="checkbox"/>	


Hint: Disable 'ETH1' for TSL is only required if you have problems with non IEEE conform network devices, which route TSL-networkmessages incorrectly. On a TSL-disabled 'ETH1' interface you cannot attach more devices for TSL. Only use that option for devices on TSL-chain begin. Other features on 'ETH1', like camera- or clientconnection, are not affected by that option

**Figure 9.19: Configuration – System Link (TSL) – TSL-Cascading - Logger: ...**



### 9.5.11 Offline configuration – TSL

If you open an Offline configuration of a TSL network the number of integrated configurations (corresponds to the number of loggers) will be shown in the tab title.

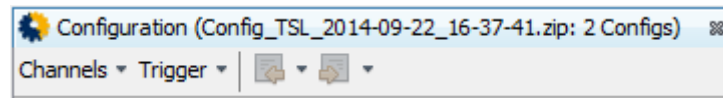


**Figure 9.20: Tab title of offline configuration**

**Attention:**

**A TSL offline configuration only can be send to a TSL network with the same number of members. Only TSL networks can be selected as target for this configuration.**


If the number of members does not match to the number of integrated configurations you will get this error message:

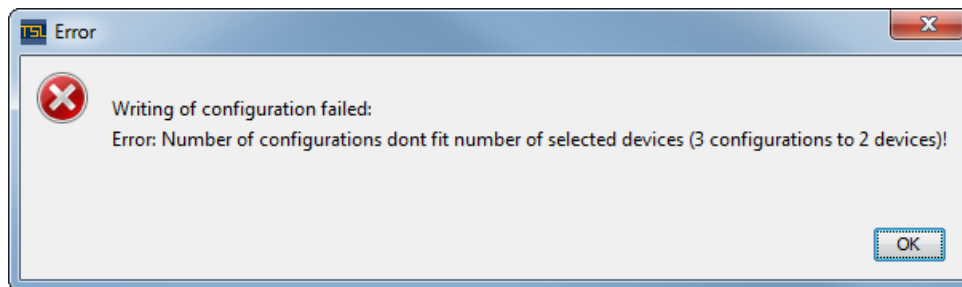

**Figure 9.21: Error message due to wrong number of devices in offline config**

When the number of members is equal, but the TSL is a different one, you have to make a “Configuration matching”. This assigns every single configuration to one of the members in the current TSL. General settings will be equalized.

For the configuration matching a dialogue for TSL-selection appears which is set automatically to the best matching possible. This matching can be accepted or changed by the user. Every configuration can be assigned to one device only. If a configuration does not match exactly to a device the missing values are filled with default settings.

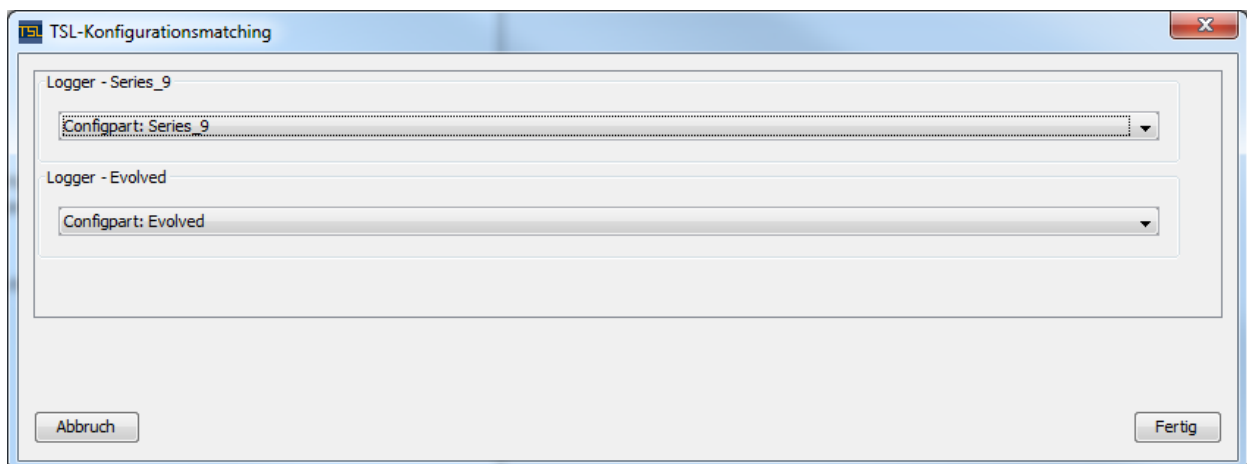


**Figure 9.22: TSL Configuration matching**

A validation is checking the configurations when you choose the matching by yourself and gives you a hint when some parts of the configuration are missing or inapplicable.



**Figure 9.23: Notification message due to incompatibility of device and configpart**

Some settings have to be equal in a TSL and will be adjusted by the client if necessary. There's a pop up window which is listing the modified settings.

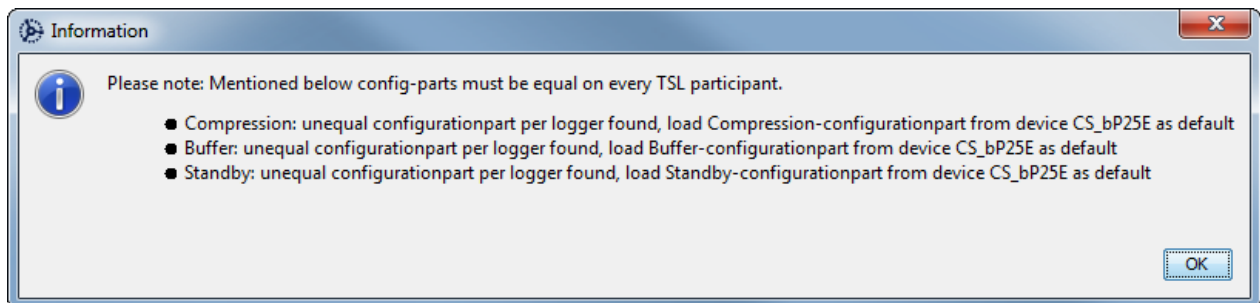


**Figure 9.24: Notification message for the adaption of configurations**

[Index](#)

## 9.6 Downloading / converting – TSL

When you try to download or convert data without a valid cascading of the channels you will get an error message. All settings which are invalid will be enumerated.

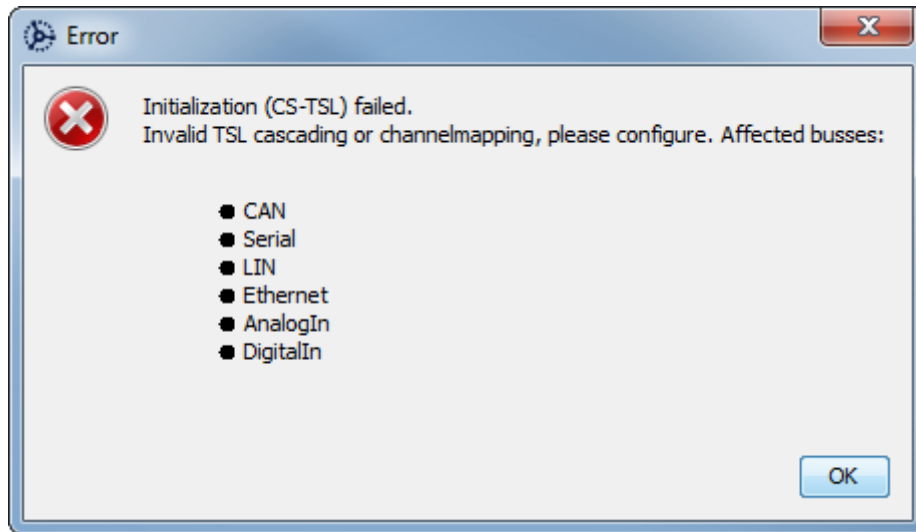

**Figure 9.25: Error message due to invalid cascading settings**

Due to the fact that all raw data will just be cascaded during the sorted download or conversion process you can change the cascading settings after recording the data without any loss of data.

## 9.7 Downloading from a TSL network


When the cascading is valid the overview for available data is shown.

The screenshot shows the 'Event overview' window in the Telemotive System Client. The window title is 'Create data set (NoTSLName)'. The current logger time is 'Thursday, 03.09.2015 13:45:00'. The 'Event overview' tab is active, showing a table of events. The table has two columns: 'Event' and 'Time'. The events listed are:

Event	Time
Thursday, 03.09.2015	
Section #1 - Startup (97MB)	12:51:42
bP2_M150: Trace data deleted	12:55:18
bP2_M150: Wakeup from Trigger (phys.)	12:56:35
bPMini_FlexRay: Trace data deleted	12:57:09
bPMini_Lin: Trace data deleted	12:57:20
bPMini_FlexRay: Wakeup from Trigger (phys.)	12:58:21
bPMini_Lin: Wakeup from Trigger (phys.)	12:58:35
bP2_M150: Wakeup from Trigger (phys.)	13:00:13
bPMini_FlexRay: Wakeup from Trigger (phys.)	13:01:55
bPMini_Lin: Wakeup from Power-On (phys.)	13:02:08
Marker #1	13:02:29
End of data	13:36:27


At the bottom of the table, there is a 'Show TSL Events' checkbox which is currently unchecked. Below the table are buttons for 'Clear selection', 'Select all marker', and 'Select all'. At the very bottom of the window, there are 'Settings...', 'Storage mode' (set to 'unsorted, ZIP'), and 'Download...' buttons.

**Figure 9.26: Download overview without TSL Events**

At <Current logger time> you find the current time of the reference data logger. By pressing the  button you can see the time of all members of the TSL.

Additional to the standard events you can mark the checkbox [ ] **Show TSL Events** to see the startup and shutdown times of all members of the TSL.

The timeframes are defined by the first startup and last shutdown of all members of the TSL. The single startups/shutdowns of the devices are listed too. Found marker from all members are shown and get new numbers in ascending order.

By pressing the  button at the right of a section you get a list of all recorded interfaces with cascaded channel numbers.

### **9.7.1 Unsorted download**

While downloading the data unsorted, all data of the selected sections are downloaded without cascading or sorting by time. But these information are stored into the offline data set and can be used for later conversion. It is possible to cascade and synchronize the downloaded offline data set in a subsequent conversion process.

### **9.7.2 Sorted download**

During a sorted download all data will be synchronized and cascaded into one file. The mainboard number in the filename is the summary of all mainboard numbers in the TSL. All trace files with channel number will be cascaded according to the actual settings. Configurations and synchronization messages are listened in the head of the data files.


We recommend a sorted offline data set for further processing with other tools.

[Index](#)

## 9.8 Converting data from logger or offline data set – TSL

There's no difference in converting a normal offline data set or a TSL offline data set. All cascaded channels are listed in the <Channel selection tree>.


The checkbox **Show TSL Events** is available too. When you convert an unsorted offline data set all data will be sorted, synchronized and cascaded before. During an online conversion the current logger time is also shown.

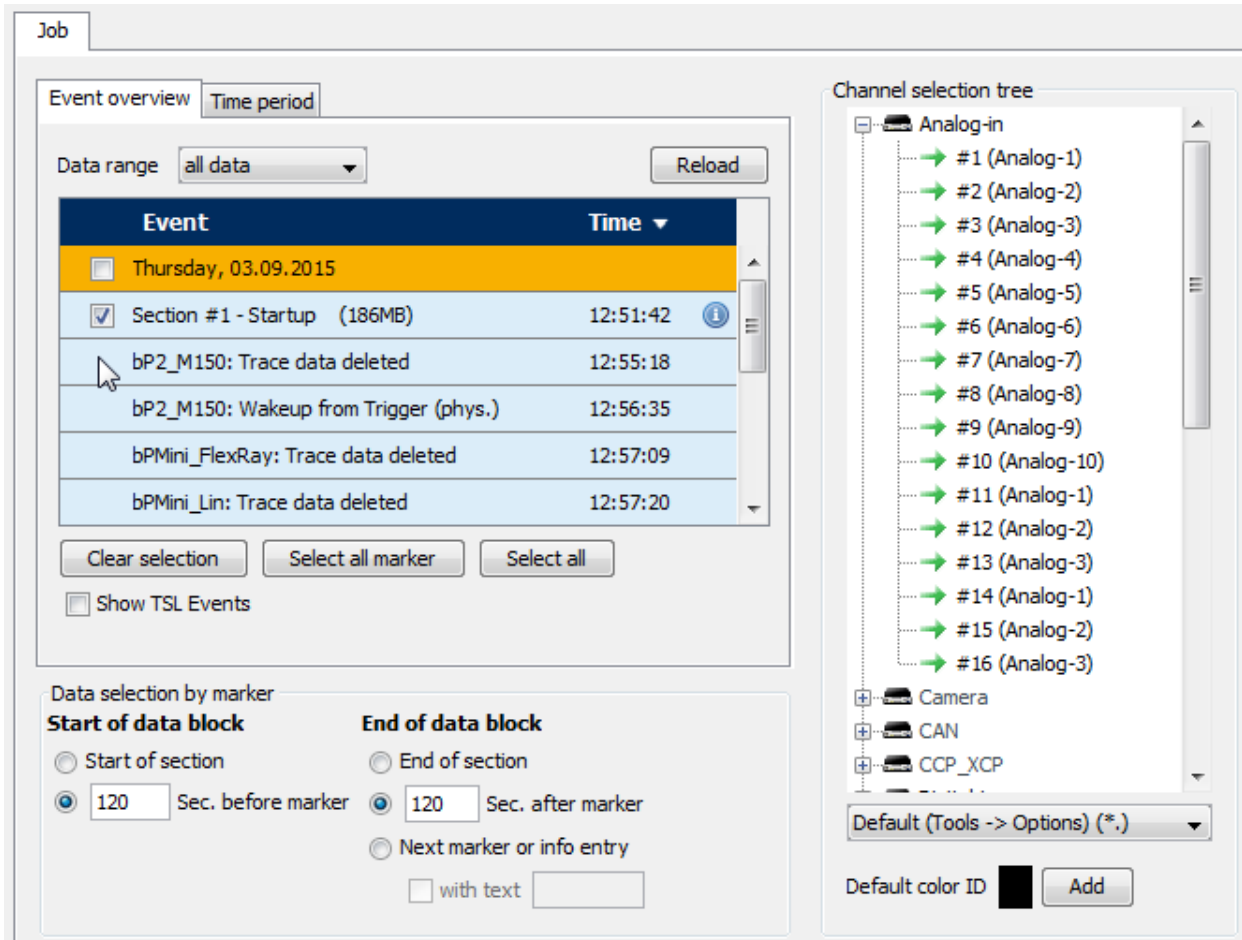

**Figure 9.27: Conversion overview TSL offline data set**

## 9.9 Creating a bug report – TSL

When starting the application [**Open bug report**] of a TSL you'll see the errors of all TSL members with a short description.

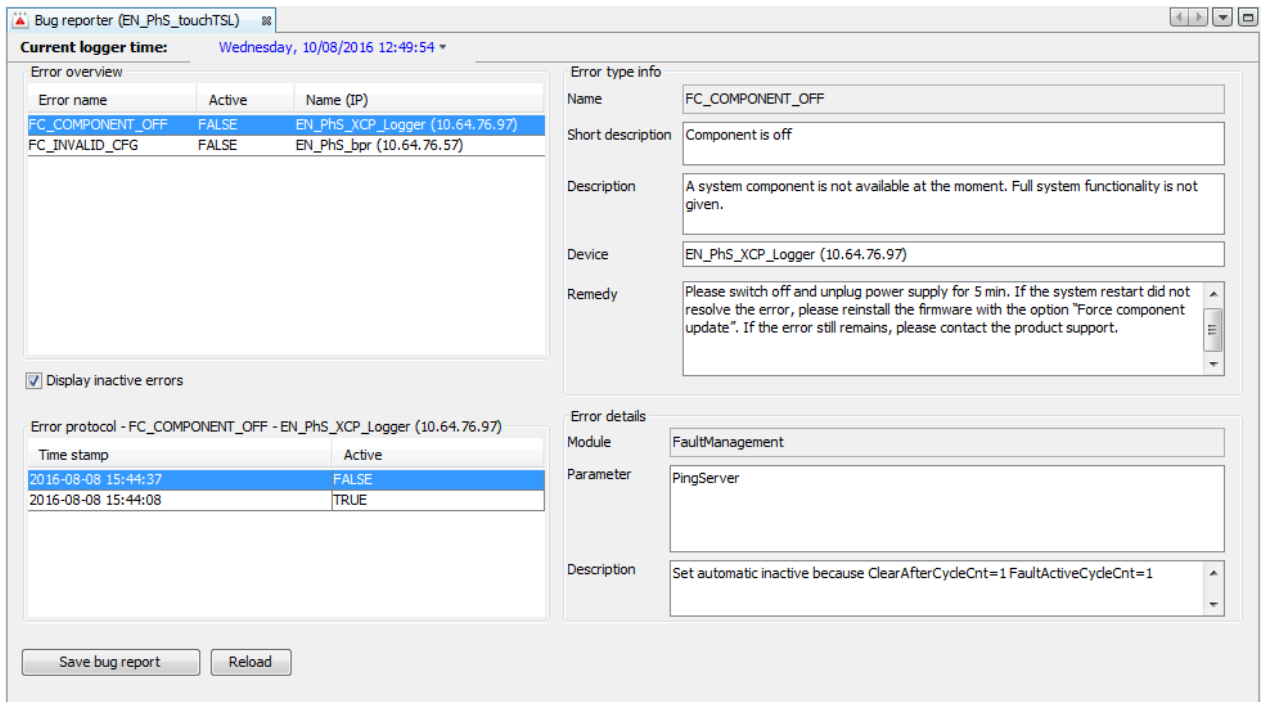

**Figure 9.28: TSL bug reporter**

When you save the bug report, the name contains the short “bPTSL” for the TSL network, the firmware version “FW-02.01.04” and the serial numbers of the members.






## 10 Online Monitor

The client offers an Online Monitor which allows having a live view to the recorded data.

### 10.1 Starting the Online Monitor

To start the Online Monitor you have to activate the checkbox **Online Streaming active** in the sub-category **[Online Streaming]** and write it to the logger.

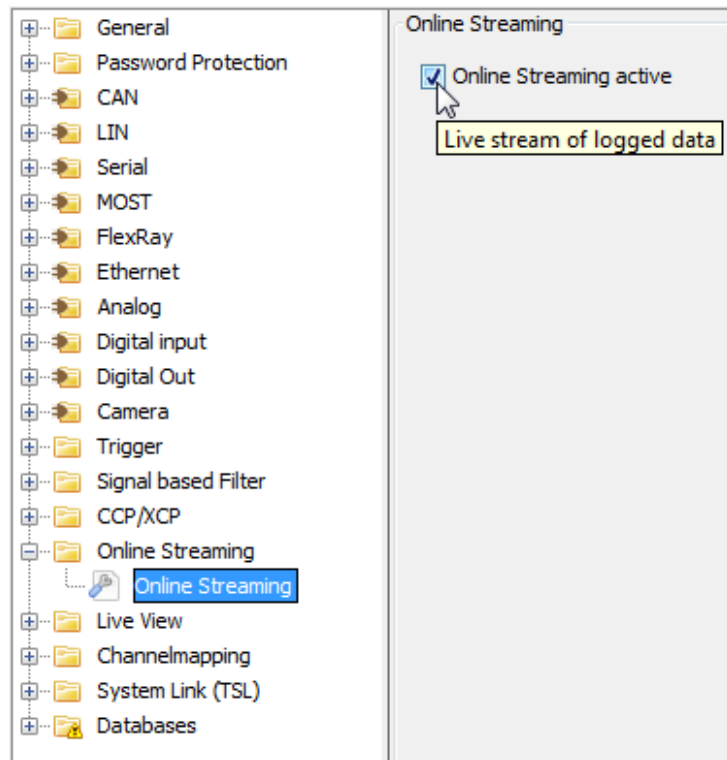


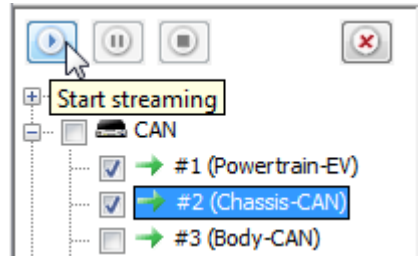
**Figure 10.1: Activating Online Streaming**

The tab <Online Monitor> can be opened by clicking the button **[Online Monitor] (2)**.




**Figure 10.2: Starting online monitor**

There you can define which interfaces and channels you want to see in the Online Monitor and start the streaming by clicking the button  **[Start streaming]**. You can choose a complete interface or separate channels.




**Figure 10.3: Starting online streaming**

Online streaming can be paused by the button **[Streaming pause]**

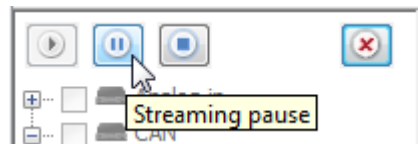

**Figure 10.4: Pausing online streaming**


There's no possibility to change the streamed channels when streaming is active. If you want to change some interfaces or channels you have to stop streaming before. To stop the streaming, please push the button **[Stop streaming]**. After changing the required settings you can start streaming again.

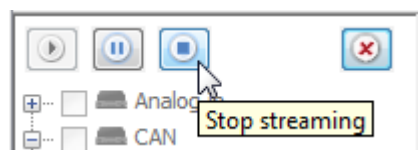

**Figure 10.5: Stopping online streaming**


### 10.1.1 Context menu of the channes

While Online monitor is still not active, a single channel can be opened in a new window:

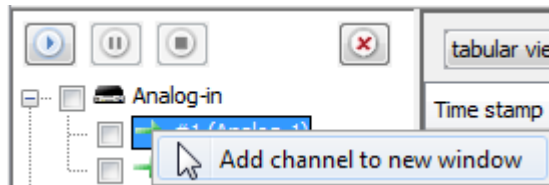


**Figure 10.6: Add channel to new window**

The new window can get an own name:

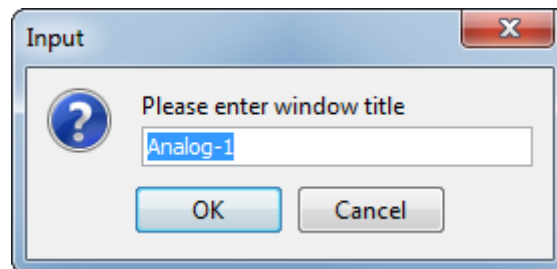


**Figure 10.7: Setting a window title**

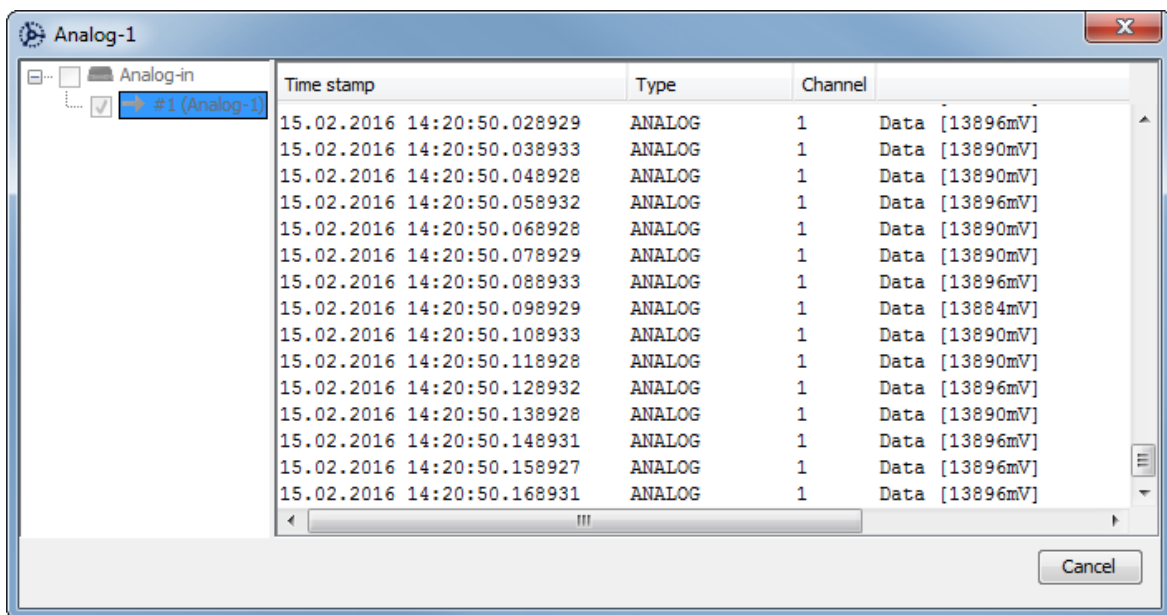


**Figure 10.8: A channel in a new window**

## 10.2 Assigning databases

You can assign databases to all your available CAN, LIN and FlexRay channels by the button

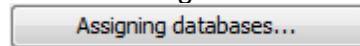


or by using the context menu:

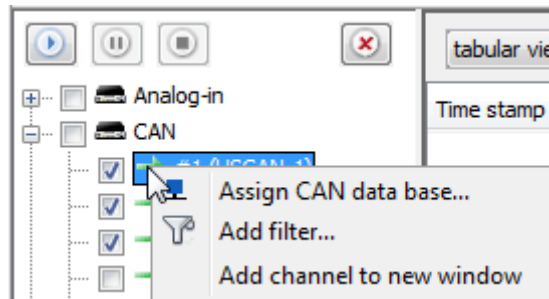

**Figure 10.9: Assigning databases by context menu**

In the next window all available channels the database can be assigned.

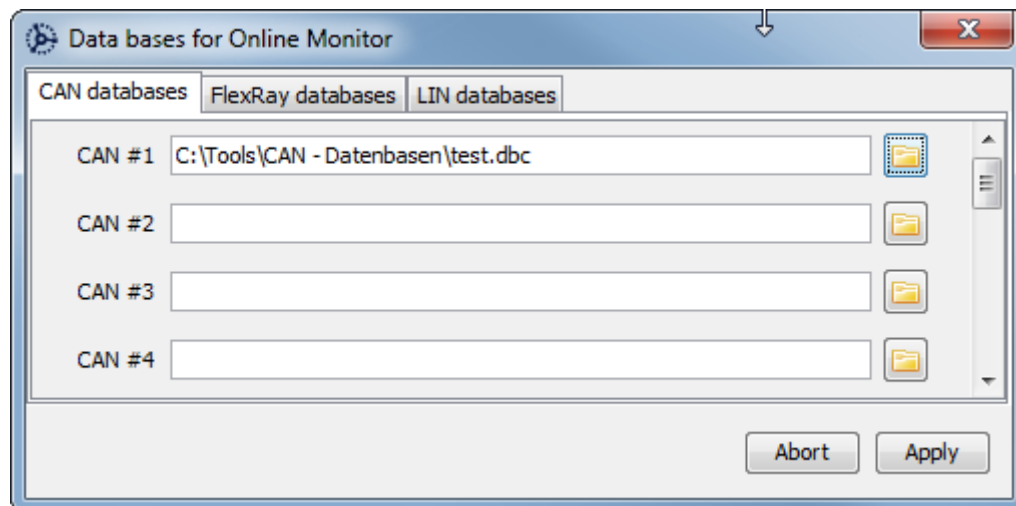

**Figure 10.10: Database configuration**

The following data bases can be assigned:

CAN: CAN dbc, FIBEX 3.x, FIBEX 4,1, AUTOSAR System Template 3.2.x.

FleyRay: FIBEX 3.x, FIBEX 4,1, AUTOSAR System Template 3.2.x.

LIN: FIBEX 3.x, FIBEX 4,1., LDF

## 10.3 Adding filter

For several interfaces you can create filters to define exactly which messages are shown in the Online Monitor. This option can be reached by the context menu. The context menu also allows to delete filters.

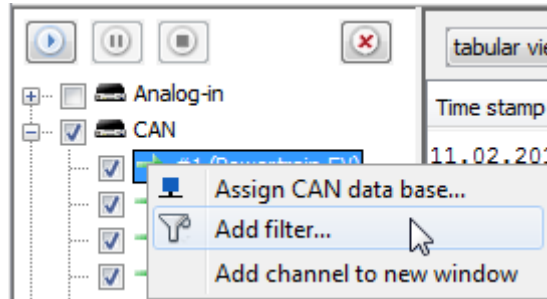


Figure 10.11: Add filter

### 10.3.1 CAN filter

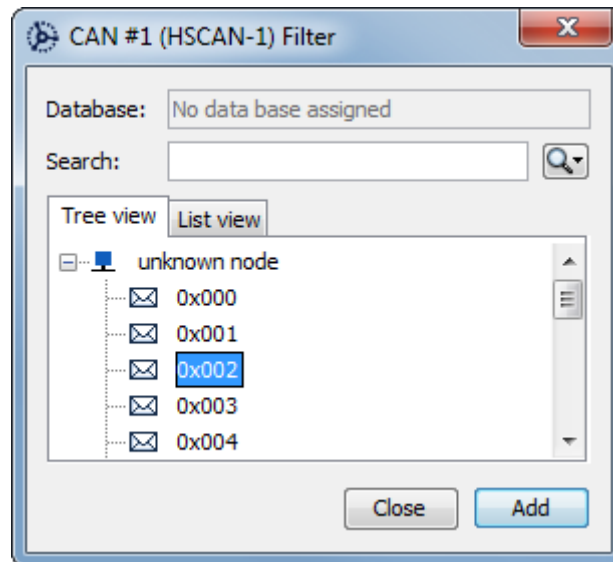


Figure 10.12: Choosing filter


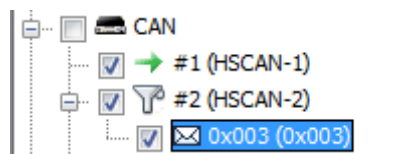


Figure 10.13: Newly added filter


Databases can be assigned to CAN channels **[No data base assigned...]**. This can be also used to configure Filters.

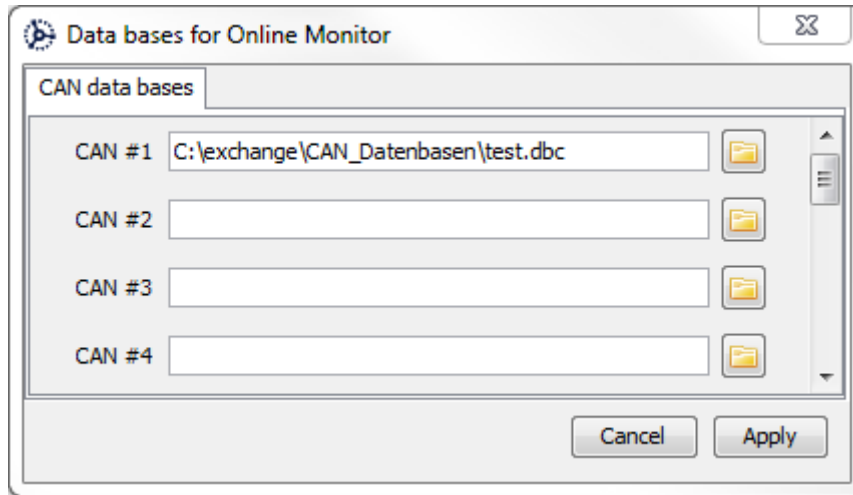


**Figure 10.14: Data bases for Online Monitor**

### 10.3.2 Text filter for Ethernet and serial channels

Ethernet and serial messages could be filtered by a string. Messages including the filter string are shown or written to a file.

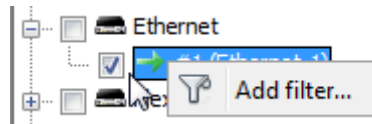

**Figure 10.15: Add filter**

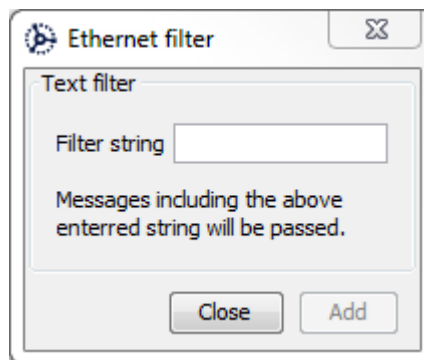


**Figure 10.16: Creating text filter for Ethernet and serial channels**

## 10.4 Redirecting logging into a file

The selected messages which are shown in the Online Monitor can be logged directly into a data file on your computer system. For doing this you only have to mark the checkbox and choose the directory to store the file to. Available target formats are:

- Binary Logging Format
- CANoe ASCII Format (\*.asc).
- Telemotive ASCII Format (\*.txt)
- Extended Telemotive Trace Data (\*.xtmt)

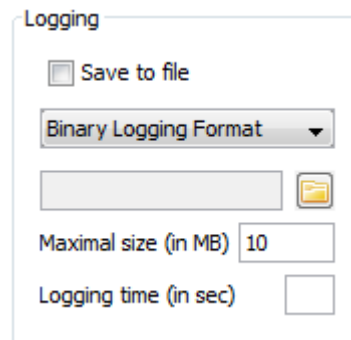

**Figure 10.17: Write Logging to file**


Every time you start the streaming the client creates a new file in the chosen store directory and adds a number to the filename “\_#...”.

The file can be limited due to a size or time period. When the defined option is reached, the file will be closed and a new file starts to log.

[Index](#)


## 10.5 Display of Online Monitor

While Online Monitor is running you see the current data which are recorded by the data logger.

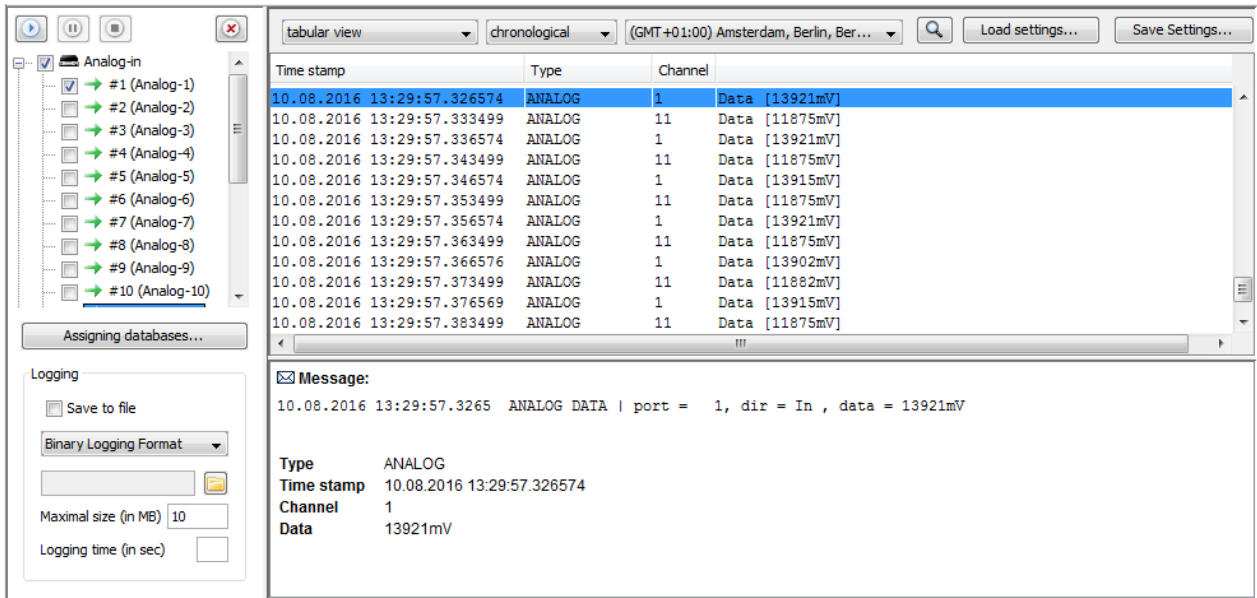

**Figure 10.18: Tab [Online Monitor]**


When the Online monitor is stopped you can display details of a message in the bottom part of the window.

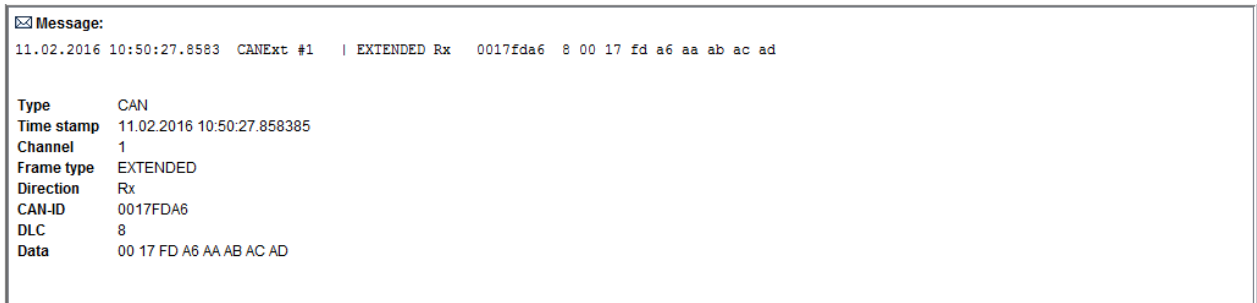

**Figure 10.19: Message details of a CAN message**

The shown traces can be deleted by the **[Clear trace window]** button when you want to proceed with another measurement or just want to clear the screen

The Online Monitor fills a maximum of 10000 rows and then the oldest messages fall out of the Online Monitor.

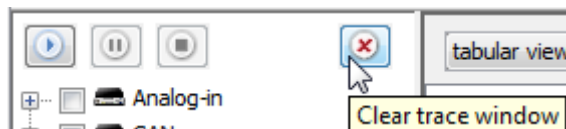

**Figure 10.20: Clear trace window with button**



## 10.5.1 Context menu for messages

You can delete the shown data by using the context menu (right mouse key) too.

Time stamp	Type	Channel	
11.02.2016 12:38:17.084838	ANALOG	1	Data [13523mV]
11.02.2016		1	Data [13536mV]
11.02.2016		1	Data [13523mV]
11.02.2016		1	Data [13517mV]
11.02.2016		1	Data [13505mV]
11.02.2016		1	Data [13517mV]
11.02.2016		1	Data [13523mV]
11.02.2016		1	Data [13517mV]
11.02.2016		1	Data [13523mV]
11.02.2016		1	Data [13523mV]
11.02.2016 12:38:18.084845	ANALOG	1	Data [13523mV]

**Figure 10.21: Clear trace window in Online Monitor data overview**

**Both options only clear the Online Monitor and have no influence to the recorded data.**

When you have stopped monitoring you have some more options in the context menu:

**[Export all messages...]** allows exporting all messages which are currently in the Online Monitor into these formats:


- Binary Logging Format
- CANoe ASCII Format (\*.asc).
- Telemotive ASCII Format (\*.txt)
- Extended Telemotive Trace Data (\*.xtmt)

**[Export selected messages...]** can be used to export selected messages only.

You can copy selected messages with **[Strg]** and **[c]** into the clipboard for further use, e.g., mailing or word processing.


**[View details in new window]** opens a new window with the details of the marked message.

**[Column configuration...]** allows to configure which columns are displayed and which are not.

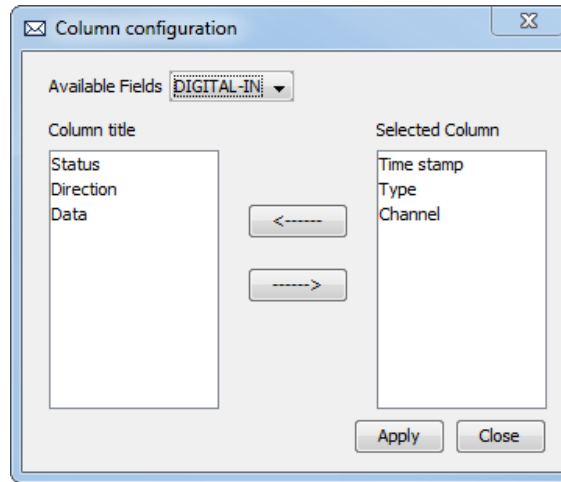


**Figure 10.22: Column configuration**

The available columns depend on the selected interface.

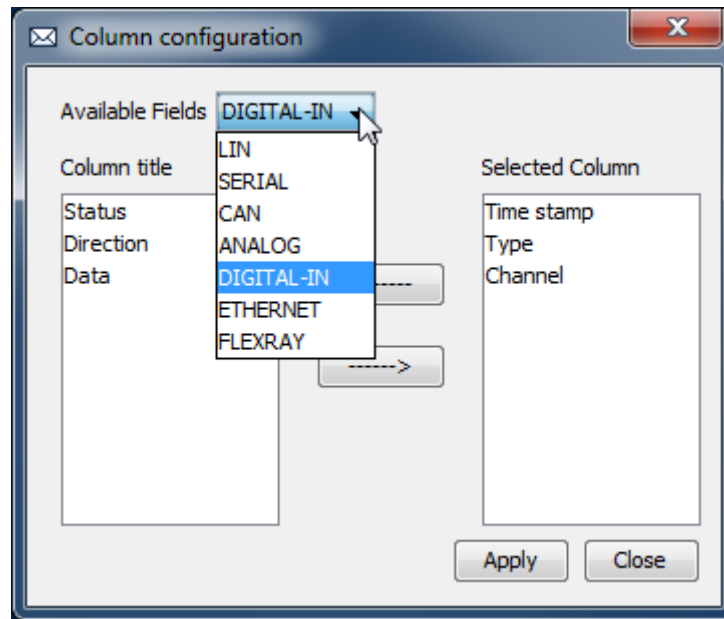

**Figure 10.23: Available fields depending on the selected interface**


[Column configuration...] is available in the context menu of the table header too.

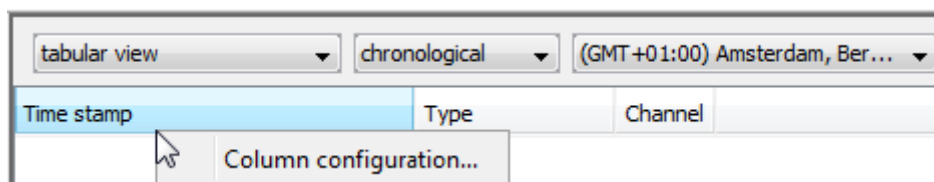

**Figure 10.24: Column configuration in table header**

## 10.6 Changing the view

The view of the data in Online monitor can be configured as you need it. The following settings can be set in the menu bar of the data window.

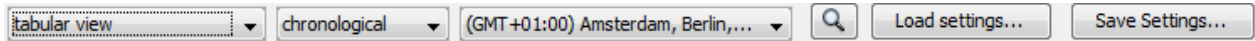

**Figure 10.25: the menu bar of the data window**

### 10.6.1 Tabular or Telemotive ASCII

In the first row the view can be changed between **[tabular view]** and **[Telemotive ASCII view]**

Time stamp	Type	Channel
15.02.2016 14:25:53.039304	ANALOG	1 Data [13902mV]
15.02.2016 14:25:53.049300	ANALOG	1 Data [13896mV]
15.02.2016 14:25:53.059303	ANALOG	1 Data [13890mV]

**Figure 10.26: tabular view**


#	Message
00009984	15.02.2016 14:25:53.0293 ANALOG DATA   port = 1, dir = In , data = 13896mV
00009985	15.02.2016 14:25:53.0393 ANALOG DATA   port = 1, dir = In , data = 13902mV
00009986	15.02.2016 14:25:53.0493 ANALOG DATA   port = 1, dir = In , data = 13896mV

**Figure 10.27: Telemotive ASCII view]**

### 10.6.2 Chronological or fixed

The next step which can be set is a **[chronological]** or **[fixed position]** view. With standard settings all messages are shown in the moment when they are logged.

With setting the window to **[fixed position]** all messages are fixed on the screen and only the changing characters will be refreshed.

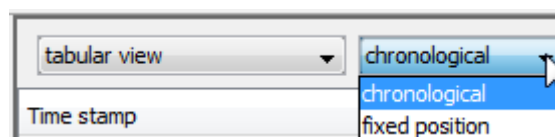

**Figure 10.28: Changing view**


Which part of a message is continuous and which is variable depends on the message type can be seen in the next table. Anything which is not continuous is variable.

Message type	Continuous part
SERIAL	<message type>, <channel index>, <protocol>
CAN	<message type>, <channel index>, <CAN type> (Standard, Error, TX, TXRequest), <CAN ID>
MARKER	<message type>
ANALOG	<message type>, <port>, <direction> (Rx, Tx)
SYSTEM	<message type>
TEMPERATUR	<message type>
ETHERNET	<message type>, <channel index>, <direction>(Rx, Tx), <protocol>, <ECU ID>
FLEXRAY	<message type>, <channel index>, <Slot ID>
LIN	<message type>, <channel index>, <LIN ID>
DIGITAL	<message type>, <port>, <direction> (Rx, Tx)
MOST25 – CTRL and MDP	<message type>, <host address>, <target address>
MOST25 – State	<message type>
MOST150 – CTRL and MDP	<message type>, <host address>, <target address>
MOST150 – MEP	<message type>, <target address>
MOST150 – State	<message type>
CCP	<message type>, <ECU ID>
XCP	<message type>, <ECU ID>
GPS	<message type>
ECL	<message type>
BUSLOAD	<message type>, <BUS>, <channel index>

**Table 10.1: Continuous and changing parts of the messages**

### 10.6.3 Sorting by columns


In [tabular view] and [fixed position] it is possible to sort the data in the available columns for a better overview. By clicking on the head of a column the client sorts the data. This is shown by a small arrow in the head after sorting.

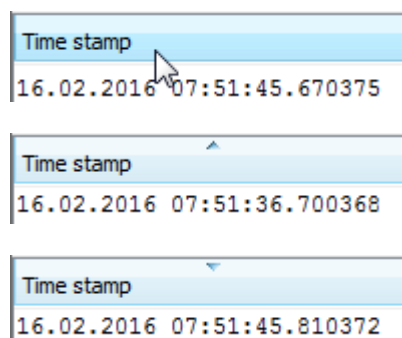

**Figure 10.29: A sorted column**


## 10.6.4 Time zone


The shown time zone can be changed between **GMT**, which is stored at the data logger, or the **Logger time zone**, which is set to the data logger.

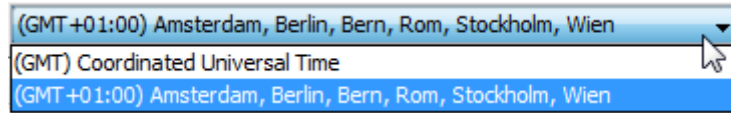



**Figure 10.30: Selecting time zone**

## 10.6.5 Searching in online monitor

By using the integrated search function  it can be searched in the shown data. Here it can be defined if the search should look at upper and lower case or not.

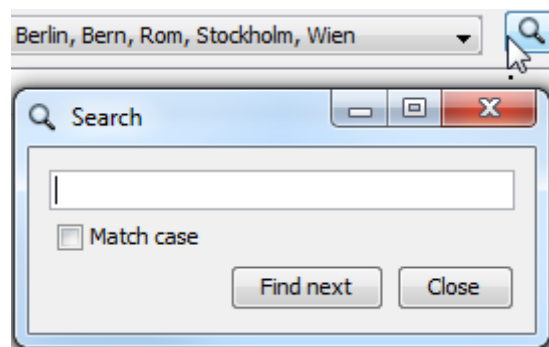

**Figure 10.31: Searching in online monitor**

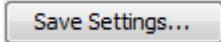All done settings for online monitor can be saved by the button  into a XML file or loaded later again by the button .

[Index](#)

## 11 Telemotive Live View

Telemotive Live View provides the opportunity to preconfigure data on the logger and show them live on a mobile device such as mobile phone, tablet or laptop.

A HTML5 compatible browser is required for displaying this. The connection to the logger is made by Wi-Fi (with additional license) or Ethernet.

In the basic version the number of supported devices is limited to 10, and the maximum number of signals to be displayed is limited to 20. These restrictions can be lifted via a separately license.

### 11.1 Open Live View

There are several ways to open Live View in the browser.

#### 11.1.1 Application icon [Telemotive Live View]

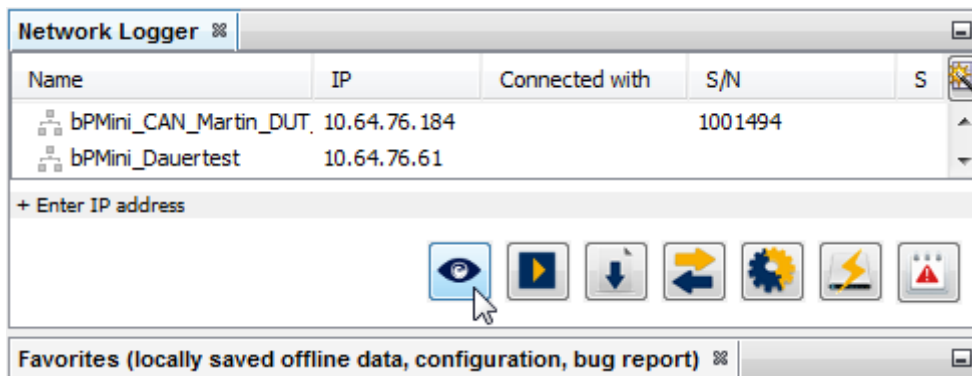


Figure 11.1: Open the Live View over the Icon

#### 11.1.2 Right click on the logger


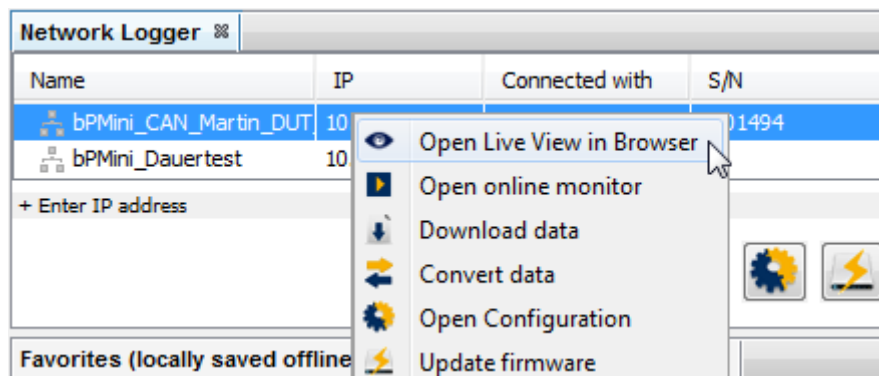


Figure 11.2: Open the Live View over right click


### 11.1.3 Access via the configuration

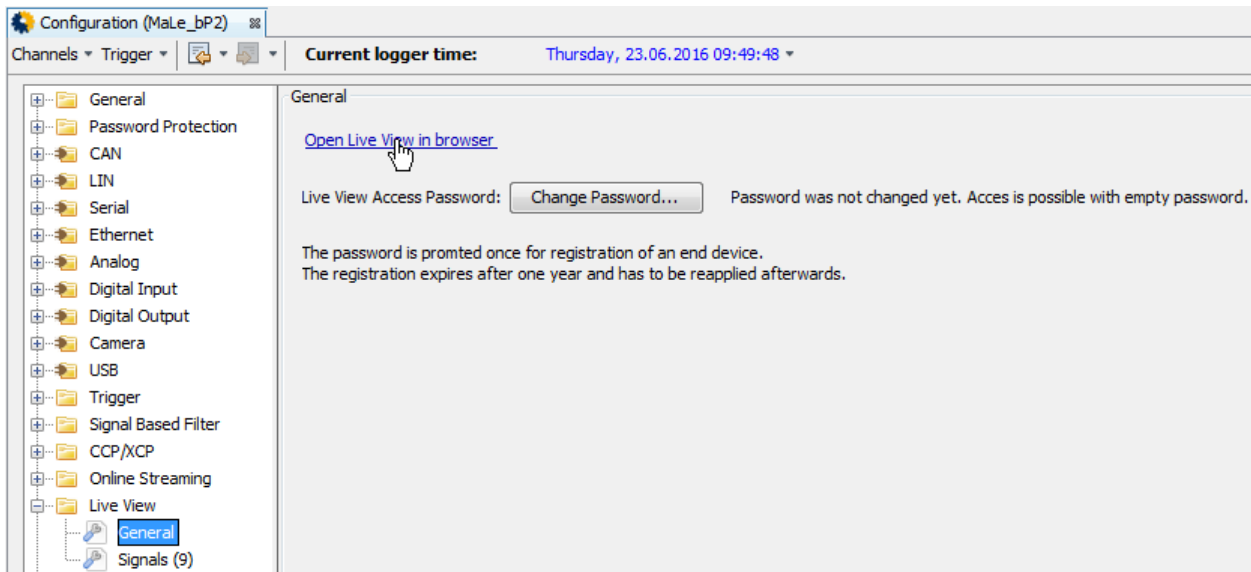

**Figure 11.3: Opening Live View via the configuration**

### 11.1.4 Access via the Client-Portal

By entering the IP address of the logger in the browser you get to the Client Portal.

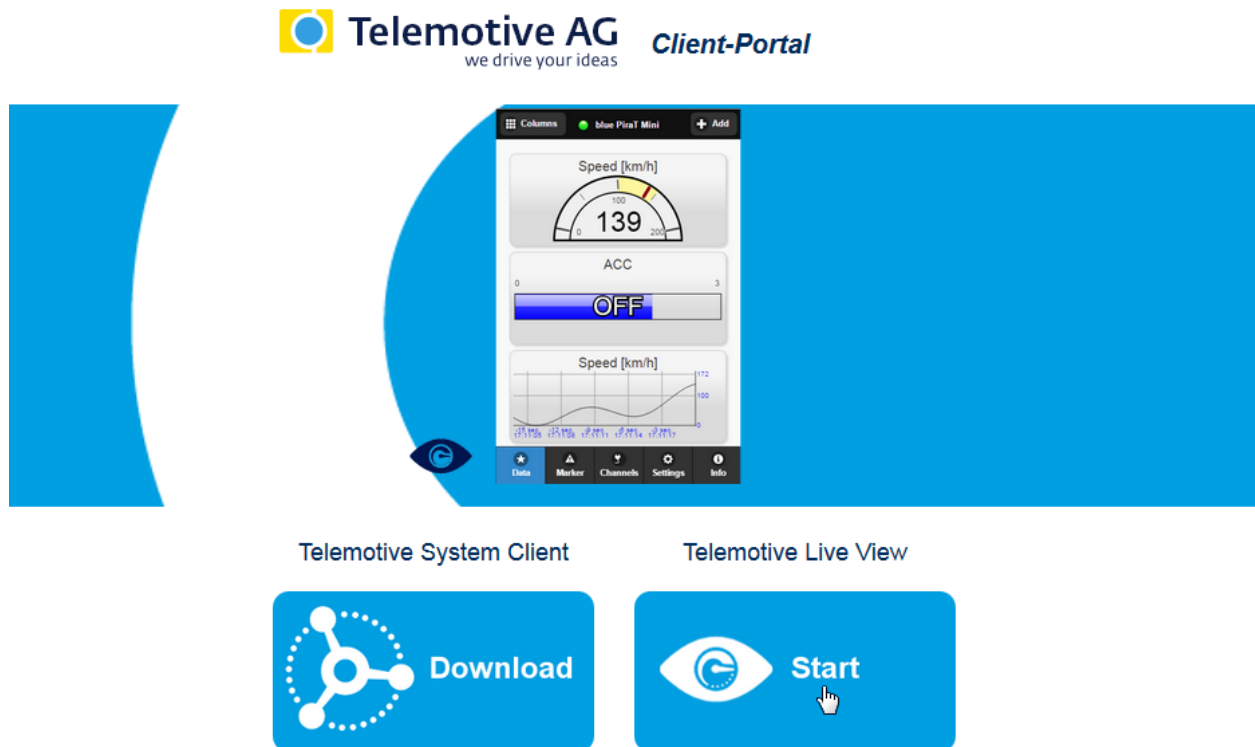


**Figure 11.4: Open the Live View via the Client-Portal**

## 11.2 Password configuration

In the default settings, there's no assigned password. Access can therefore be carried out without a password. Due to security reasons, and to prevent unauthorized access, a password should be established by the client for Telemotive Live View at first.


The dialog for entering or change a password can be reached via the configuration tree **[Live View] → [General]**.

Here you have the possibility to open Telemotive Live View via the direct link with the default browser too.

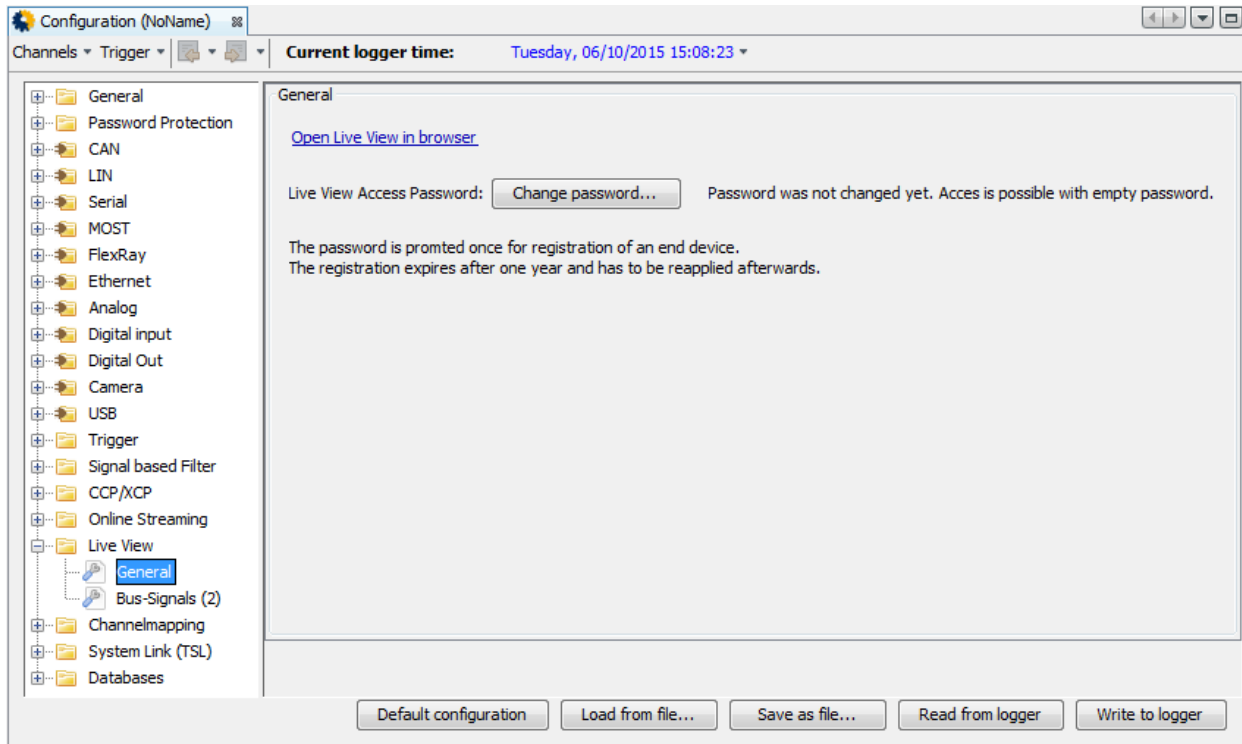

**Figure 11.5: Live View – General**

By clicking  the window for entering the password will open.

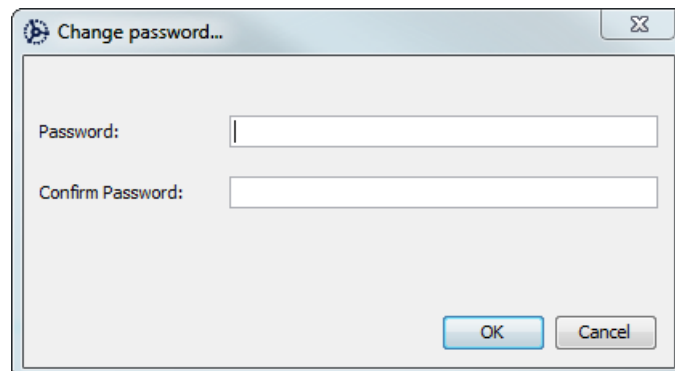


**Figure 11.6: Changing password**

**Note:**

The password may only contain characters that are encodable with US-ASCII eg. § is not allowed. The rules are self-explanatory by an implemented verification.



In the password configuration there is no minimum number of characters. So it is also possible to define a single-digit password.

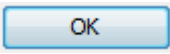To save the password, click on  .

The logger must be restarted by pressing the buttons **[Restart Logger]** to complete the process.

### **11.3 Connection between mobile device and logger via Wi-Fi**

To exchange information between the mobile device and the logger via Wi-Fi, the mobile device must login into the Wi-Fi of the logger.

For this, Wi-Fi has to be activated in the mobile device and the connection to the network with the given SSID and the password assigned in the client must be established.


[Index](#)

## 11.4 Registering the device

Each device must be registered first to be able to exchange information between the logger and TLV. For this, connect to the logger via Wi-Fi to the IP of the logger and call the TLV directory.

e.g.: 192.168.0.233/liveview

When accessing a device the first time, it once opens a dialog box for registration.

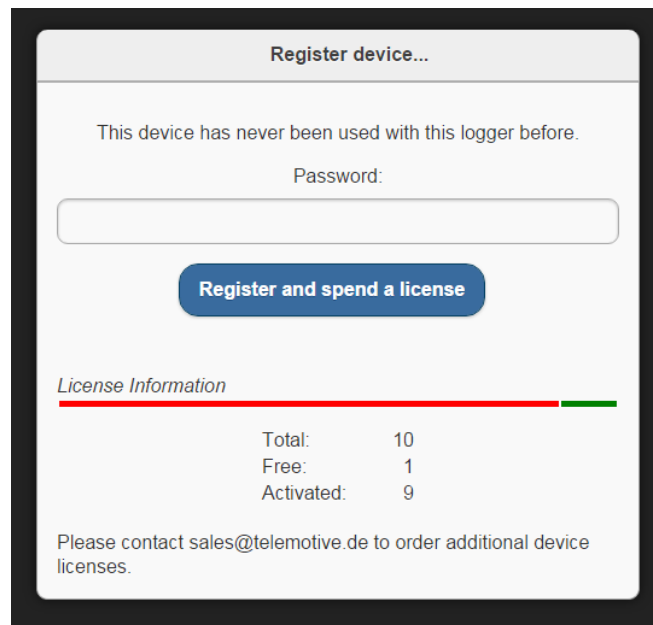

Register device...

This device has never been used with this logger before.

Password:

Register and spend a license


### License Information

Total:	10
Free:	1
Activated:	9

Please contact sales@telemotive.de to order additional device licenses.

### Figure 11.7: Registering device

In the license overview you can see immediately how many licenses for devices have already been registered, and how many are still available.

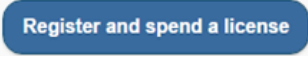The password field is empty when you access the site for the first time. Here type in the password that was specified in the client earlier. Finish the registration with 

After this step, the access to Telemotive Live View is active.

If the entered password is valid, the MAC address of the device is stored in a database on the logger. If another device with an, for the logger, unknown MAC address logs in, this registration dialog will always reappear.

## 11.5 Requirements

If the connection and authentication have been successfully completed with the logger, TLV shows the data view (Top).

In order to guarantee the fully functionality of the **TLV**, 3 functions of the (mobile) browser will be checked. The browser must support the following points:

- WebSocket
- Local- & SessionStorage
- Canvas

**WebSocket:** To guarantee communication between the logger and TLV, the (mobile) browser must support WebSocket's. There are a lot of browsers that tell the user that the browser supports this feature, which is not necessarily true (see Android Stack Browser)

**Local- & SessionStorage:** In order that the widgets do not have to be reconfigured repeatedly, the entire configuration is stored by the storage function on the (mobile) device.







**Note:**






**If the cache of the browser will be deleted, the saved configuration is lost.**

**Canvas:** The browser requires HTML5 - Canvas technology to draw the widgets.

All 3 functions have been reviewed by Telemotive by the following browsers. Here it is important that AppleWebKit version of at least 535.0 exists in the browser.

## 11.6 Requirements for mobile devices


Mobile browser	Requirement
	up from Android FW 4.4.2 (Kit-Kat)
	up from Windows Phone 8.0
	up from iOS 6.0
	up from version 16.0
	up from version 24.0
	up from version 34.0

Computer browser	Requirement
	up from Internet Explorer 11.0
	up from Safari 6.0
	up from Opera 18.0
	up from Firefox 11.0
	up from Chrome 21.0


## 11.7 Database configuration

To display the favored signals via Live View, they had to be configured in the client first.

A database has to be included to set a signal available for the Live View, The database can be configured in the configuration tree under the point **[Databases]** and the desired channel.

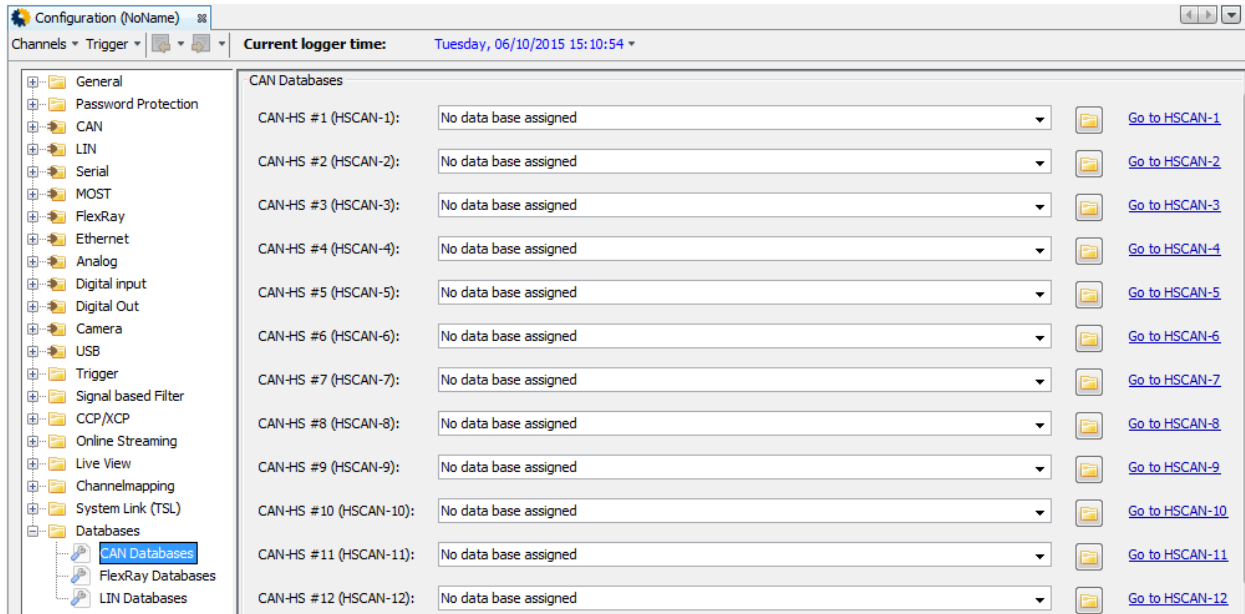


**Figure 11.8: Assigning databases**

Pressing the field  opens the dialog in which the DBC can be selected and load into the data base configuration.

[Index](#)

## 11.8 Adding signals


To display the favored signals in the Live View, these signals have to be set in the configuration tree at **[Live View] → [Signals]**.

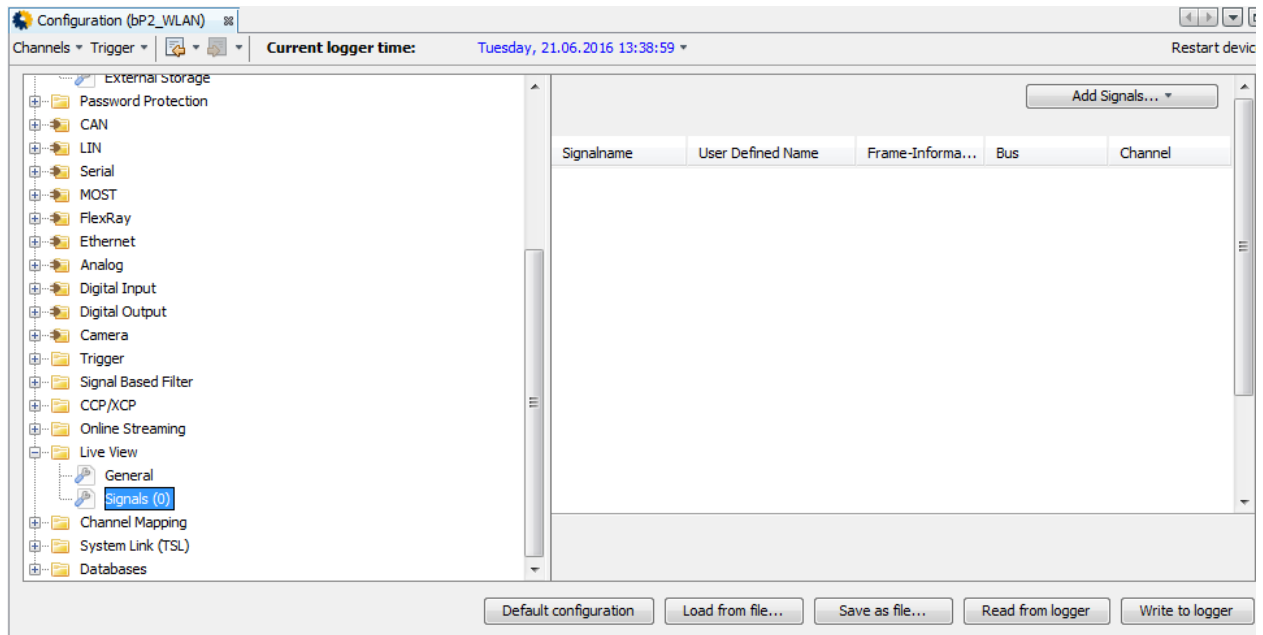


**Figure 11.9: Adding signals**

By clicking on **Add signals...** a context menu opens.

Where you can select the corresponding bus for which a database is stored.

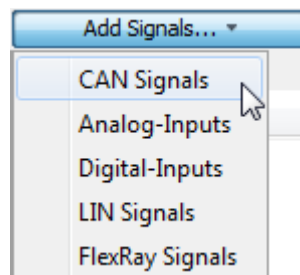

**Figure 11.10: Bus selection**

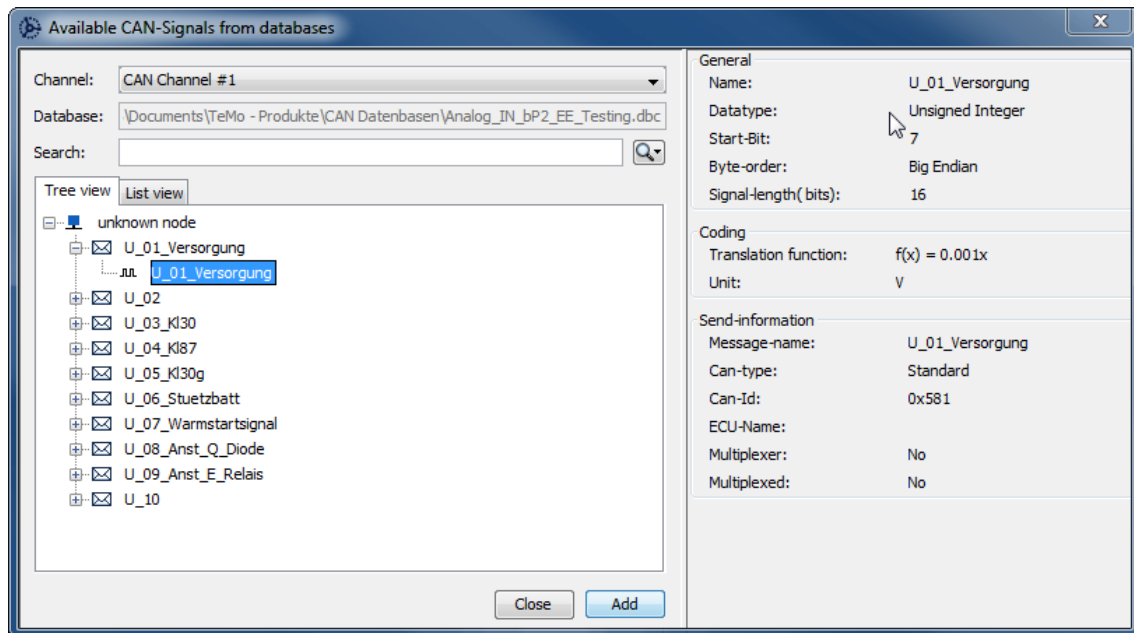


**Figure 11.11: Selecting signals**

The tree or list view provides the ability to display and select the signals that are stored in the respective DBC. By pressing **Add** these will be listed in the list of **[Signals]**.

To enable the logger offering the signals in the TLV, which are listed under **[Signals]**, the process must be finished with **Write to logger**.

## 11.9 The display of Telemotive Live View

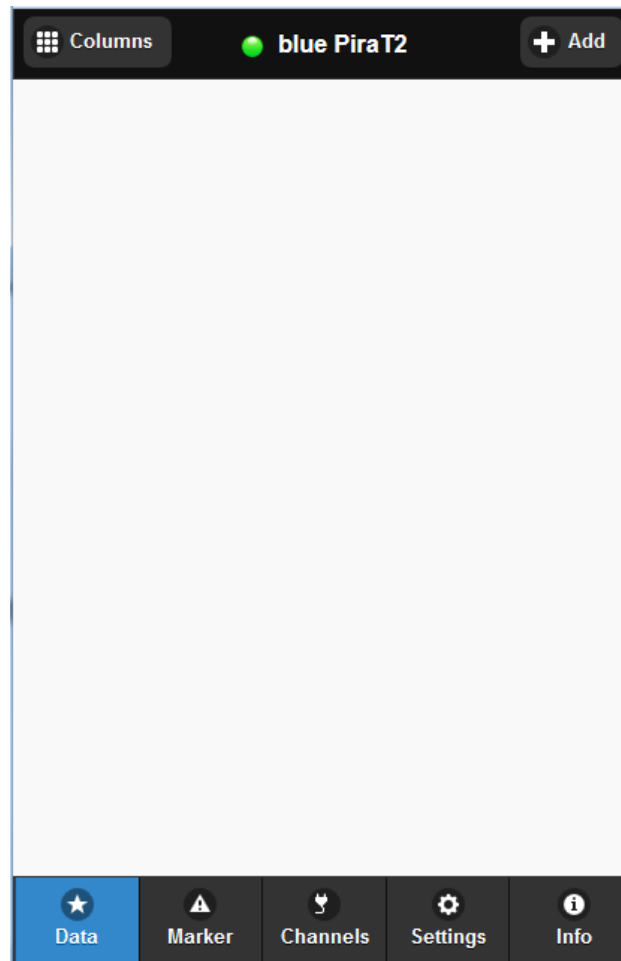

**Figure 11.12: Telemotive Live View startscreen**

The window of the Telemotive Live View can be displayed in 5 views that show information about the logger, change settings or set trigger.

At the top of the title bar, the logger type and the current connection status to the logger is displayed. If the communication is successful, the status indicator is **green**. If there's no connection available, (e.g., due to Wi-Fi failure), the display is gray.

If no connection exists, the Live View always tries to contact the logger again and again (reconnect).

State	Definition
	<b>green</b> – connection to logger successful, TLV is ready for use
	gray – connection not established, TLV tries to reconnect to the logger intermittently

### 11.9.1 Language Setting

The language of the Telemotive Live will is taken from the Browser settings.

Changing the language settings of the browser also causes a change of the Live View -surface.


## 11.10 Data

In the data view the Live View works with the created widgets. These widgets are supplied with the data on the WebSocket, which are provided by the Telemotive loggers. Various display options for the widgets are available to be set here.

Compared to the other 4 categories, the data view has 2 additional buttons for configuring the display.


By pressing the button **[Columns]** (☐☐☐☐), the widgets are displayed in multiple columns and sizes.

The widgets are always bound to a fixed grid. The grid of the WebApp provides 5 options with different sizes: 1, 2, 3, 4 and 5 columns. The widgets can be moved around within the grid.

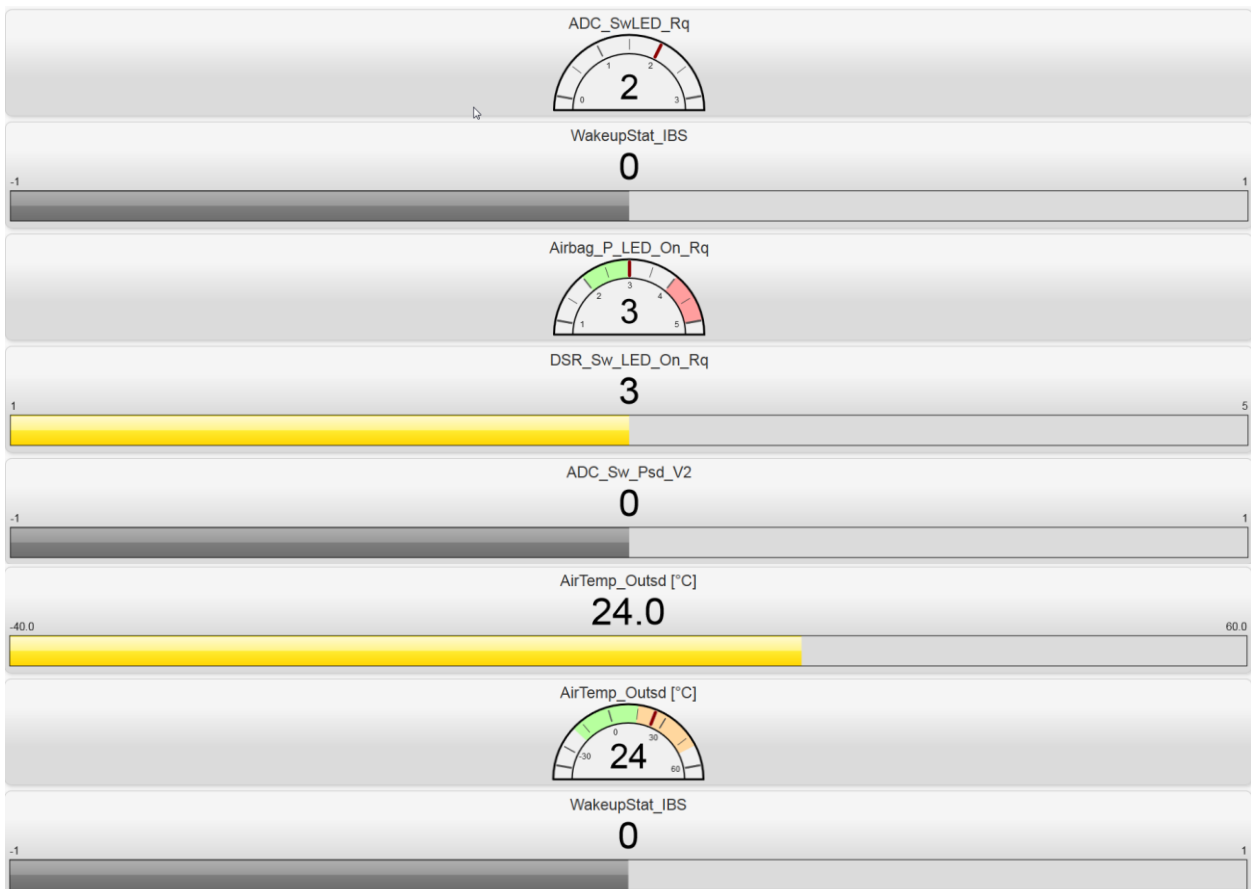


**Figure 11.13: Presentation with one column**




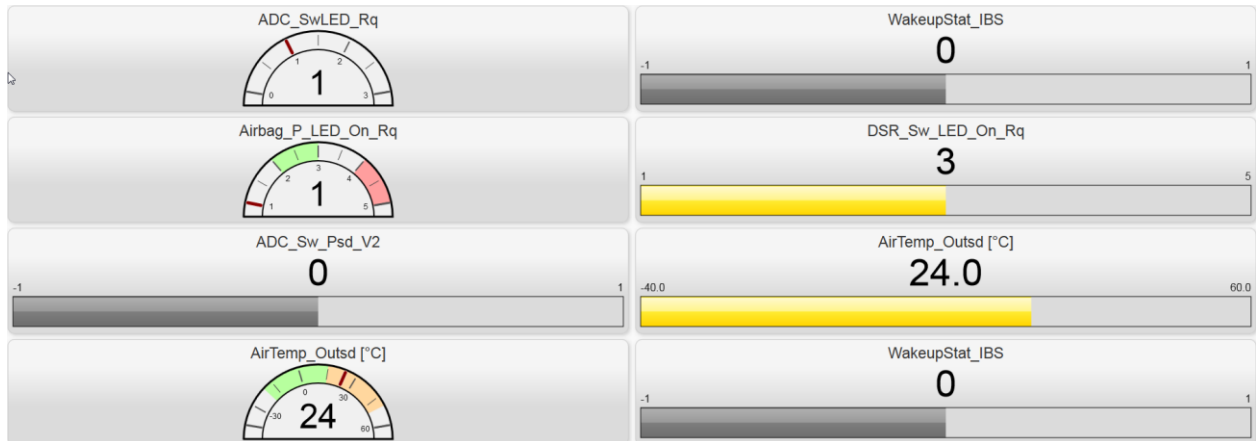

**Figure 11.14: Presentation with two columns**

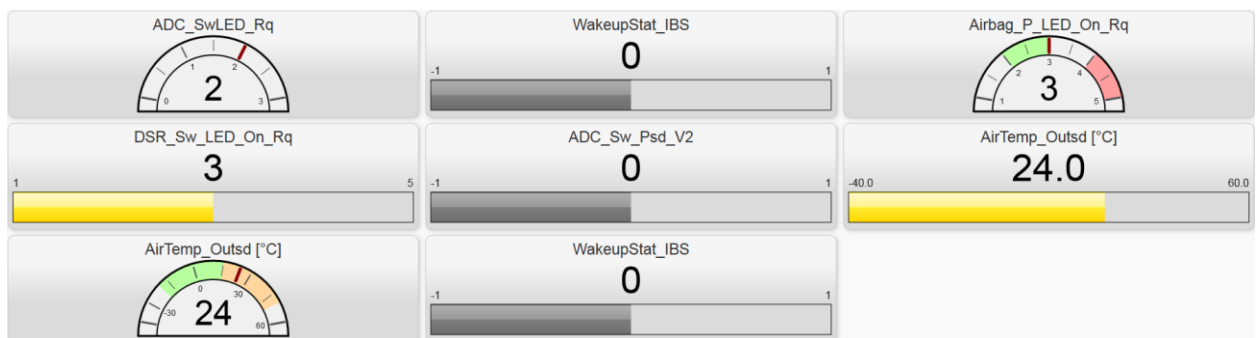

**Figure 11.15: Presentation with three columns**

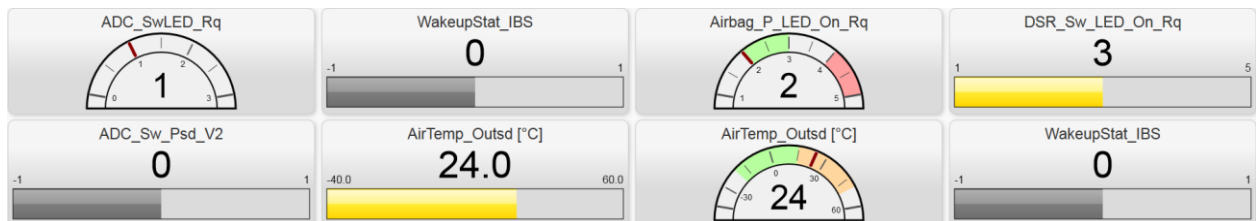

**Figure 11.16: Presentation with four columns**



**Figure 11.17: Presentation with five columns**

## 11.10.1 Adding and Configuration of widgets

By pressing **[(+ Add)]** a new widget on the grid will be created and a dialog box appears.

**Figure 11.18: Adding a widget**

### 11.10.1.1 Data Source

Under the tab **[Data Source]** the respective signal can be configured, which was previously added in the client menu item Live view / Signals.


#### 11.10.1.1.1 Label

An individual name for the selected signal can be given in the field **[Label]** because some signals have quite a long name.

**Figure 11.19: Field Label**

### 11.10.1.1.2 Adding signals

Via the Data Source button you can select the signals, that you have previously added in the client under the menu item Live View / Signals

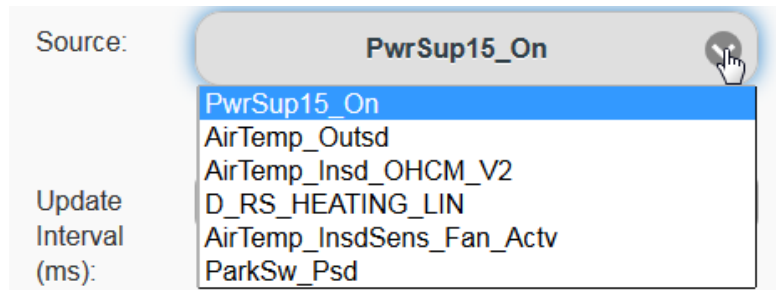


**Figure 11.20: Adding signals**

### 11.10.1.1.3 Represent multiple signals in a widget

You can also display several signals within a widget. This requires the presentation option [Line chart]. The other signals are added as follows:


- 1.) Select the button [Add Signal]
- 2.) Tip on the link or the plus icon in the appearing additional signal button (it appears always the first signal in alphabetical order of the added signals in the client).
- 3.) Select the data source in the window that opens
- 4.) Enter the proper Update Interval
- 5.) Enter the chart name about the [Label] field
- 6.) With the button [Modify] the further signal is added to the Widget

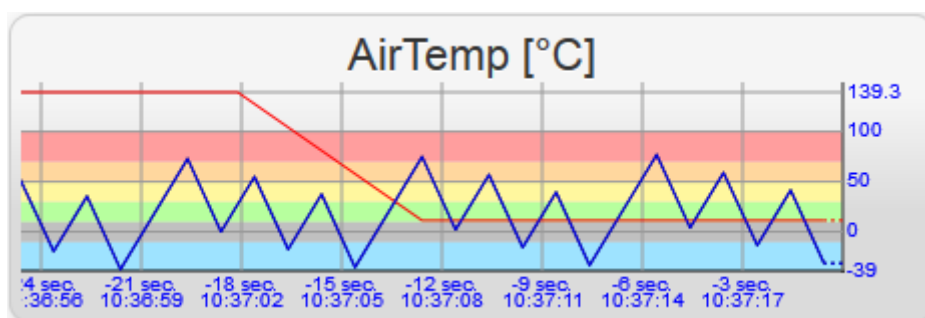

**Figure 11.21: Widget with multiple signals**

#### 11.10.1.1.4 Update Interval

In this field you can specify how often the view of the widget should be updated (in milliseconds ms).

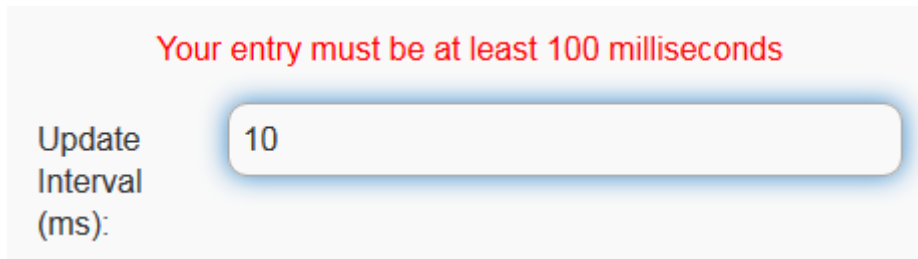


The screenshot shows a user interface element for setting the 'Update Interval (ms)'. The label 'Update Interval (ms):' is on the left. To its right is a text input field containing the number '10'. Above the input field, a red error message reads 'Your entry must be at least 100 milliseconds'. The input field has a blue border and a slight shadow.

**Figure 11.22: Field Update Interval**

### 11.10.1.2 Presentation

After configuring the data source, the appearance of the widget for the configured signal can be set on the tab **[Presentation]**.

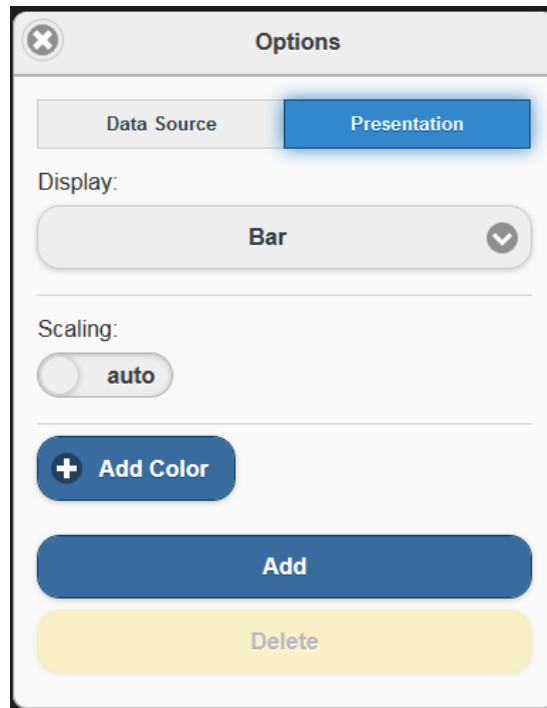

**Figure 11.23: Configuring presentation**

For the **[Presentation]** of the configured values different widgets are available.

Widget presentation (in FW 02.01.01)	Widget name	Widget settings
	Bar	Scaling: auto and man. Color Selection: Yes Dec. places: Yes
	Lines	Scaling: auto and man. Color Selection: Yes Dec. places: Yes
	Speedo	Scaling: auto and man. Color Selection: Yes Dec. places: Yes
	Text	Scaling: None Color Selection: Yes Dec. places: Yes Timeunit: Yes

### 11.10.1.2.1 Scaling

For the scaling, the 2 states **[auto]** and **[manually]** are selectable. If the controls are set to **[auto]**, the maximum value is continuously adapted to the signal. Different to the state **[auto]**, the widget is static in the mode **[manually]**, where the user needs to specify a minimum and a maximum value. With this setting, the widget shows those areas only. If the signal value is outside this range, it is no longer detected by the widget.

The figure shows two screenshots of a user interface for setting scaling. The top screenshot shows the 'Scaling' control set to 'auto'. The bottom screenshot shows the 'Scaling' control set to 'man.' (manual), with 'Min' set to 0 and 'Max' set to 255.

**Figure 11.24: Setting the scaling**

### 11.10.1.2.2 Timeunit

In the display option [line chart] you can enter the range of data retrieval for displaying from 100 to 86.400.000 ms (24h). Either as a numeric entry or using the arrow buttons on the right side of the field.

The figure shows a text input field labeled 'Timeunit (ms):' with the value '10'. A red error message above the field reads 'Your entry must be at least 100 milliseconds'.

**Figure 11.25: Setting the timeunit in the line chart**

### 11.10.1.2.3 Decimal places

For a better overview the decimal places can be fixed.

The figure shows two screenshots of a user interface for setting decimal places. The top screenshot shows the 'Dec. places' control set to 'auto'. The bottom screenshot shows the 'Dec. places' control set to 'man.' (manual), with 'Digits' set to 2.

**Figure 11.26: Setting dec. places**


### 11.10.1.2.4 Adding Color

By pressing this field, it is possible to set several value ranges to be shown in colors as gray, blue, green, orange, yellow and / or red.


The value ranges may also overlap. Here, the rule is that the color interval defined below overwrites the previous color setting.

### Example color configuration outside temperature display


First, the type of display, the scale and the range of values are set.

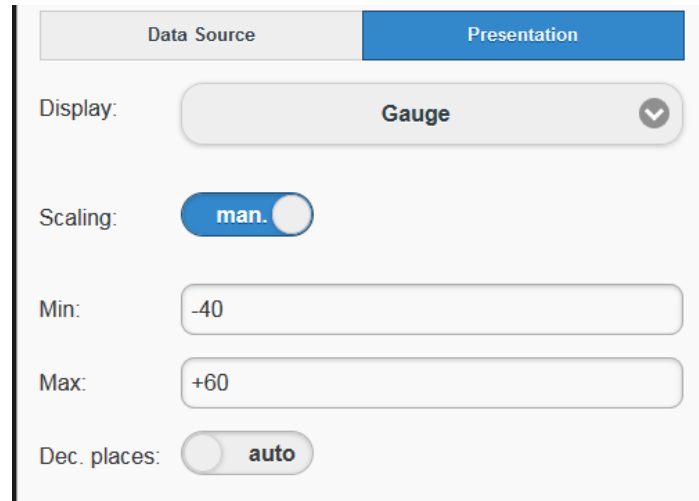


**Figure 11.27: Example Presentation Configuration**

To add a color activate the button 

Then the following field appears:

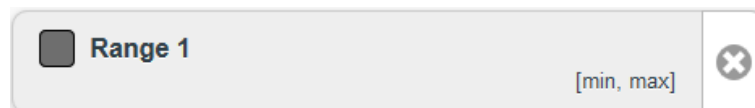


A click or finger print in [Range 1] opens a settings window:

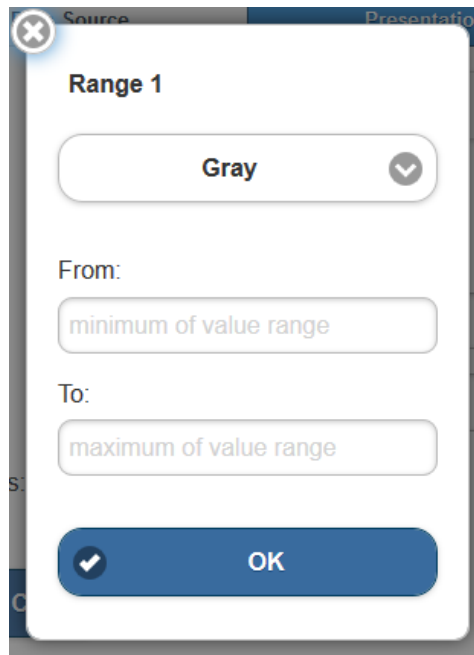

**Figure 11.28: Setting window range**


The activation of the color buttons [Gray] opens the color selection.

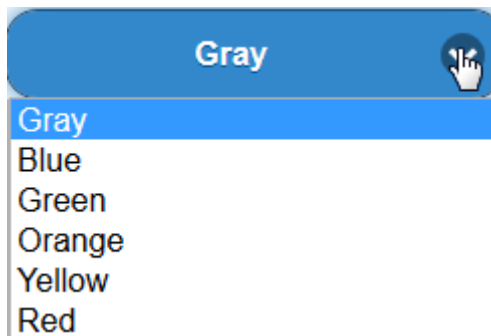

**Figure 11.29: Color selection**




Here you can enter the range of the color:

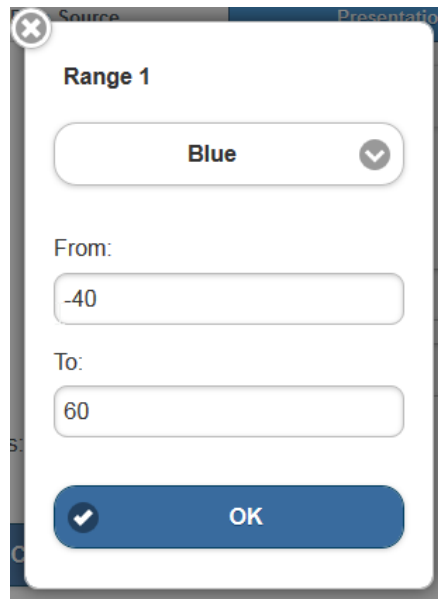


**Figure 11.30: Range input**

By clicking or finger pressure on [ok] the newly created blue ranges are represented.

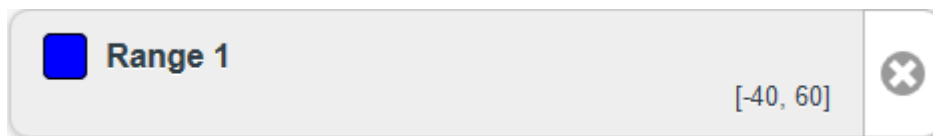

**Figure 11.31: Colored Range**


Individual ranges may be removed via the "Delete" button.

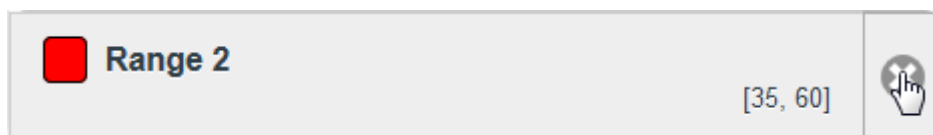


**Figure 11.32: Remove a range**

[Index](#)


The settings will be taken over by activation of the [Modify] Button

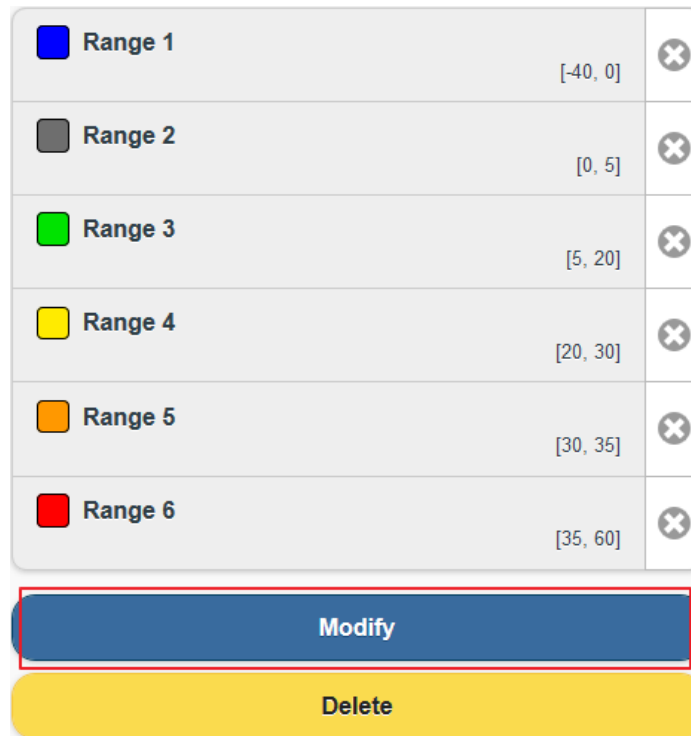


**Figure 11.33: Taking over of the color presentation**

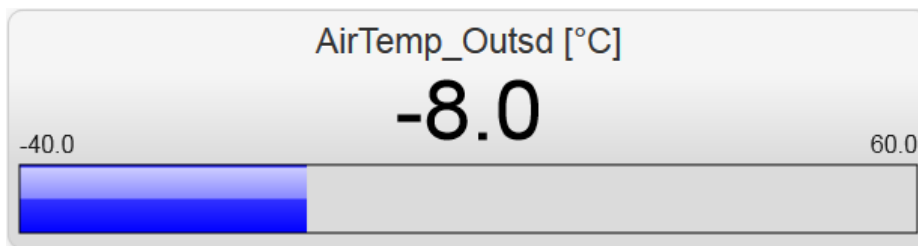


**Figure 11.34: Colored Presentation of the signal as bar**

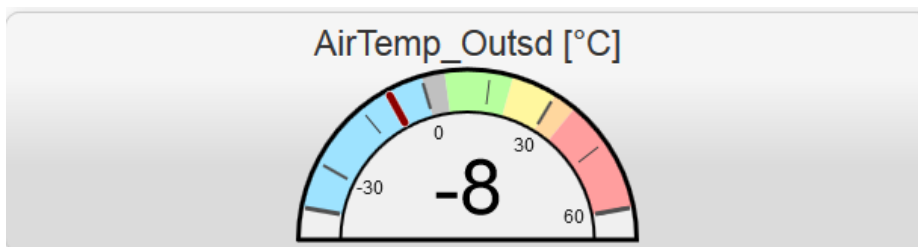

**Figure 11.35: Colored Presentation of the signal as gauge**

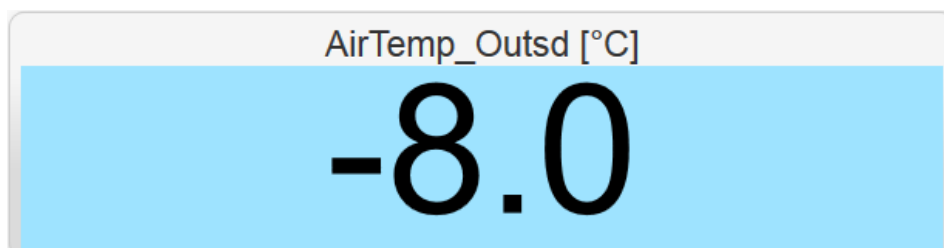

**Figure 11.36: Colored Presentation of the signal as text**

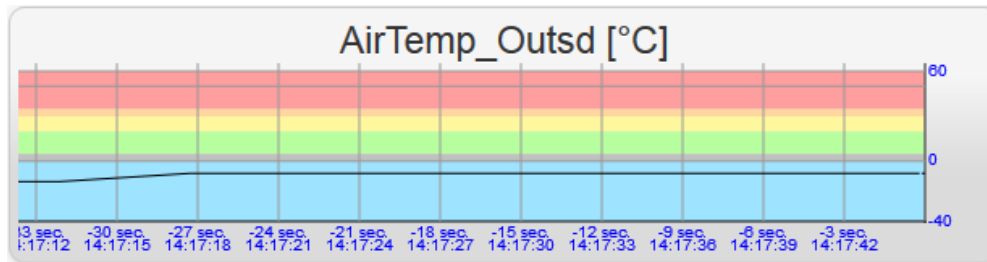

**Figure 11.37: Colored Presentation of the signal as line chart**

### 11.10.2 Customizing widgets


If the widget is already on the grid, it can be adjusted individually, or the arrangement can be changed. By pressing on a widget with your finger, the known dialog in which the widget can be adjusted, saved or deleted will be shown again. With pressed mouse button (finger), the widget can be repositioned on the grid.

Operation on the widget (FW 2.01.01)	Effect
1x keystroke	opens the settings dialog
1x keystroke + hold	moving at the grid

[Index](#)

## 11.11 Marker


By touching the trigger button on the tab **[Marker]**, a marker can be set and this creates an information entry. All markers that are created are listed below the button. This list is updated as soon as a marker is set. If a trigger is set on network device A, device B will be updated at the same time and gets the trigger displayed in his list too.

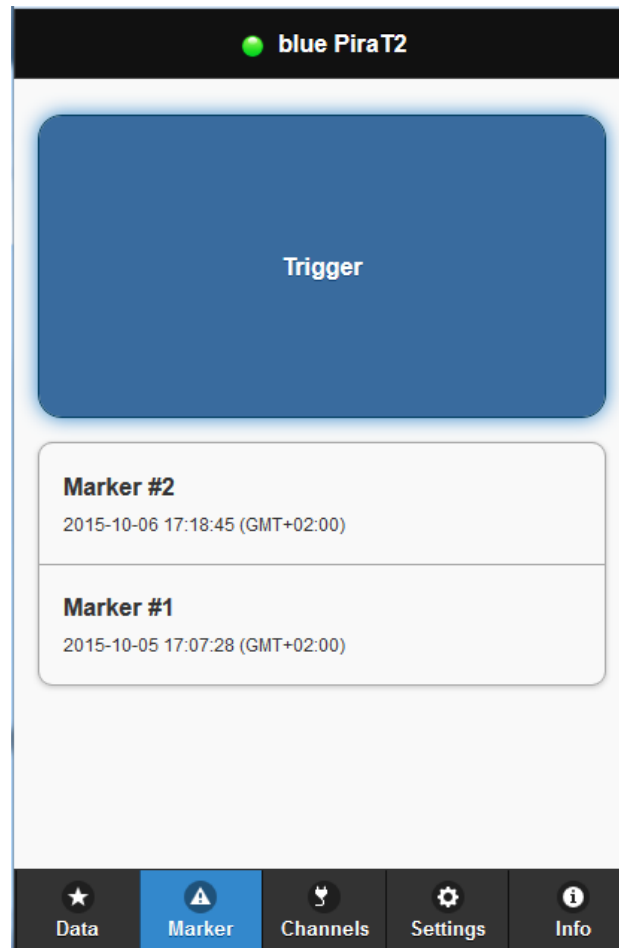

**Figure 11.38: Tab “Marker”**

## 11.12 Channels

Information about active, inactive or even faulty buses are displayed on the tab **[Channels]**. In addition to the bus state, information about the bus load or the bus name here are visible too.

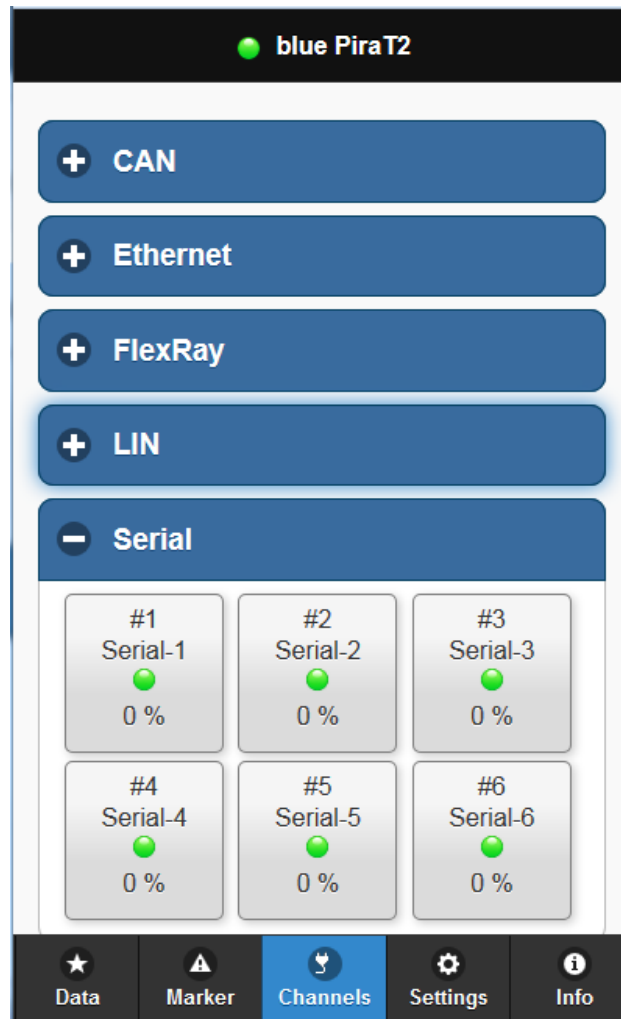


**Figure 11.39: Tab “Channels”**

BUS state	Meaning
	BUS is active (without errors, messages are send)
	BUS is deactivated or not connected
	BUS state unknown (BUS message could not been delivered)
	BUS has an (ERROR)

## 11.13 Settings

Under the category **[Settings]** various settings for the TLV can be done. In order not to have to configure the widgets every time, there is the option of saving the configuration on both, the logger as well as locally on the mobile device.

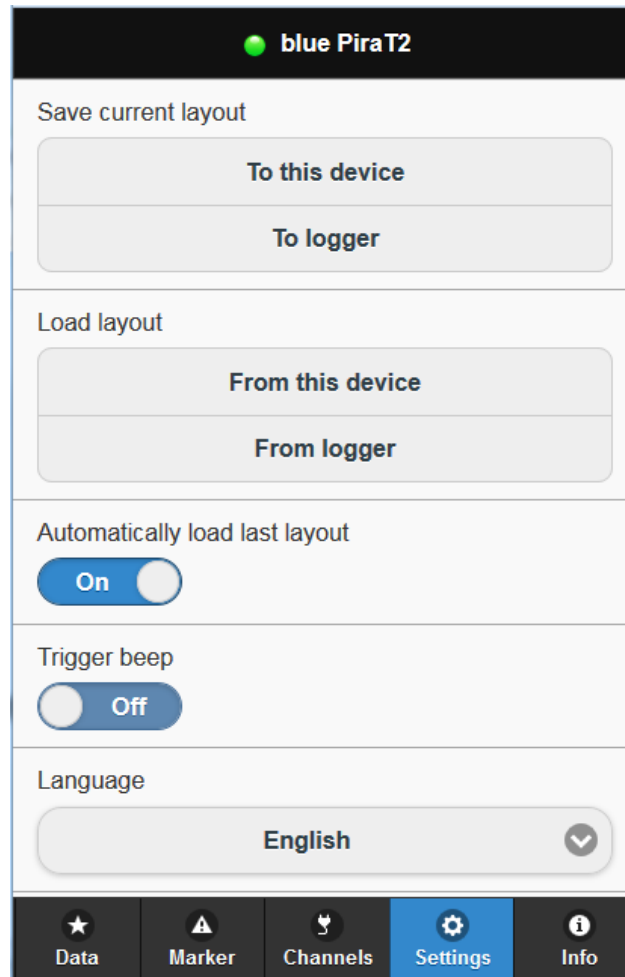


**Figure 11.40: Tab “Settings”**

The settings (widget configuration) and the trigger beep (whether on or off) can be stored on the logger **[To logger]** or locally on the mobile device **[To this device]**.

In both cases, a dialog opens in which the settings can be saved with a custom name.


**Note:**

**A layout can ONLY be loaded on a logger with the same IP address, restoring to a logger with different IP address is not possible!**

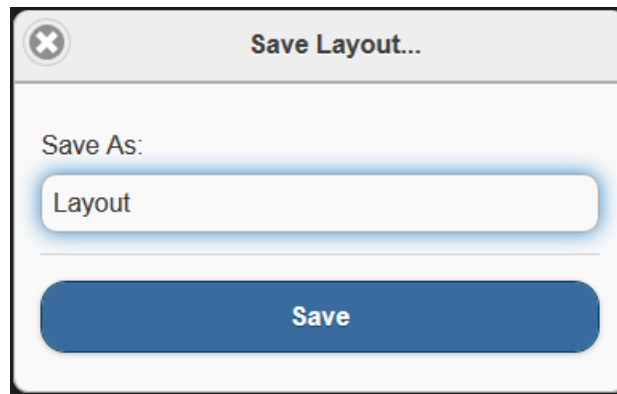


**Figure 11.41: Saving a layout**

If the layout and the settings have been saved, this is available in the loading dialogue.

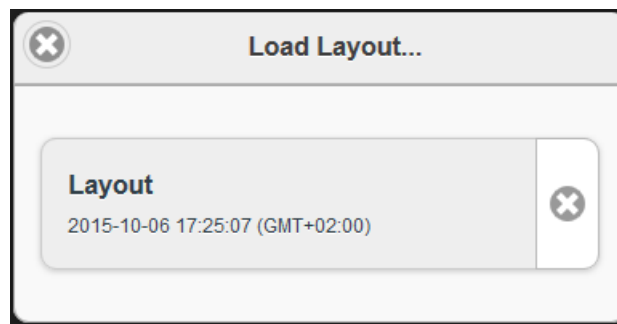

**Figure 11.42: Loading a layout**

If a layout is no longer required, you can delete it by pressing the icon .

**Automatically load last layout:** When this feature is enabled, the browser is always loading the last configuration which was set. When a saved configuration is loaded, the current configuration which was not saved will be overwritten.

**Note:**

**If the browser cache is cleared, the last settings which were configured on the browser and not saved to the device, are deleted.**

**Trigger beep:** Plays an acoustic signal on the terminal when the trigger button is pressed.

**Language:** Changes the language of the TLV.

## 11.14 Info

On the tab **[Info]** you will find information about the logger such as device name, firmware version and the current state of the spent and existing licenses.



**Figure 11.43: Tab “Info”**

### Device Information

- Name: Name of the logger
- FW Version: Firmware version of the logger
- License: Available or not

[Index](#)




## 12 Downloading data from logger or offline data set

This chapter describes how to use the data download application.

### 12.1 Opening the application “Create data set”

The download application allows saving logged trace data (in Telemotive format) from the logger on the computers disk.

In the tab <Network Logger> click a logger that is not already connected.

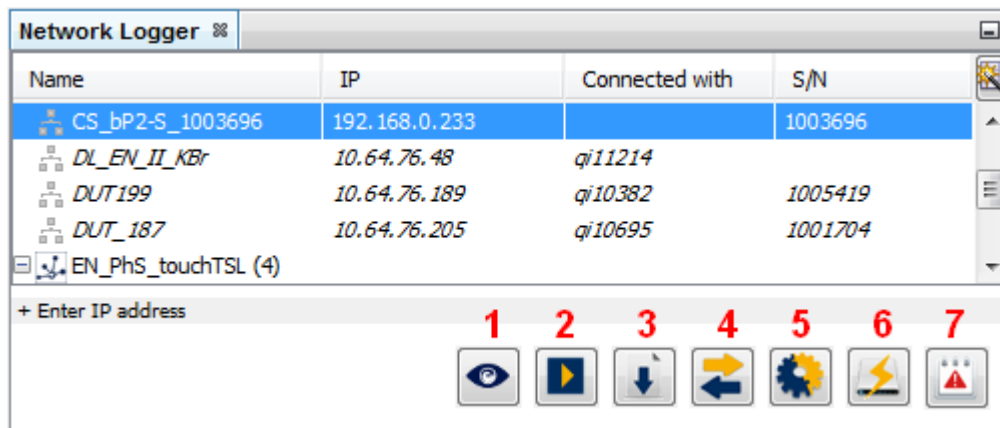

**Figure 12.1: Selecting logger**

Click on the application [**Download data**] (3).

The tab <Create data set> is opening. The <Event overview> with the loggers data is displayed on the right.

**Attention:**

**If corrupted data are found on the logger the client tries to repair this data first before he shows the overview. Depending on the quantity of defective files this can take up to some minutes.**

Create data set (NoTSLName) ◀ ▶ ↻

**Current logger time:** Wednesday, 10/08/2016 14:21:39 Disk usage **MEM**

**Marker**

**Delete data**

Reset marker counter when deleting data

Delete selected data

**Data selection by marker**

**Start of data block**

Start of section

20  Seconds before marker

**End of data block**

End of section

20  Seconds after marker

Next marker or info entry

with following text

**Event overview** Time period

Data range all data

Event	Time
<input type="checkbox"/> Wednesday, 03/08/2016	
<input type="checkbox"/> Section #13 - Startup (39MB)	08:57:12 <span style="float: right;">i</span>
CS_bPR_1005740: Wakeup from PowerOn (p...	08:57:12
<input type="checkbox"/> Marker #11	09:06:13
<input type="checkbox"/> Marker #12	09:06:13
<input type="checkbox"/> Marker #13	09:06:14
<input type="checkbox"/> Marker #14	09:06:14
<input type="checkbox"/> Marker #15	09:06:15
CS_bP2_1003696: Wakeup from PowerOn (p...	09:06:25
CS_bP2_1003696: Wakeup from PowerOn (p...	09:07:19
CS_bP2_1003696: Configuration update	09:07:45
CS_bP2_1003696: Configuration update	09:10:44
CS_bPR_1005740: Configuration update	09:11:02
Shutdown	09:24:18
<input type="checkbox"/> Section #14 - Startup (5MB)	09:24:46 <span style="float: right;">i</span>


Show TSL Events

Storage mode unsorted, ZIP

**Figure 12.2: Tab “Create data set”**

## 12.2 The tab “Create data set”


### 12.2.1 Toolbar

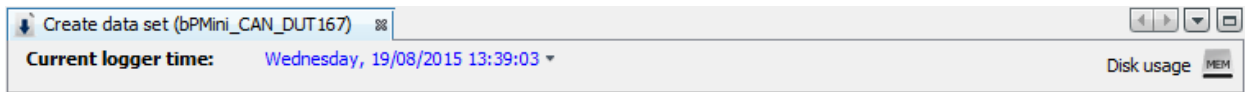

**Figure 12.3: Toolbar in the tab “Create data set”**

The toolbar at the top of the tab contains the following panels.

#### 12.2.1.1 Current logger time

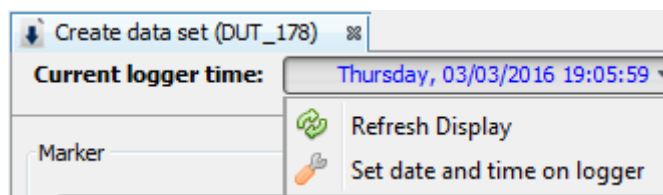


**Figure 12.4: Setting time and date**

[Current logger time] shows the logger time. By clicking the arrow the logger time can be synchronized to PC time.

#### 12.2.1.2 Disk usage

Klicking on [Disk usage] opens a window that displays the current available internal space for trace data storage.

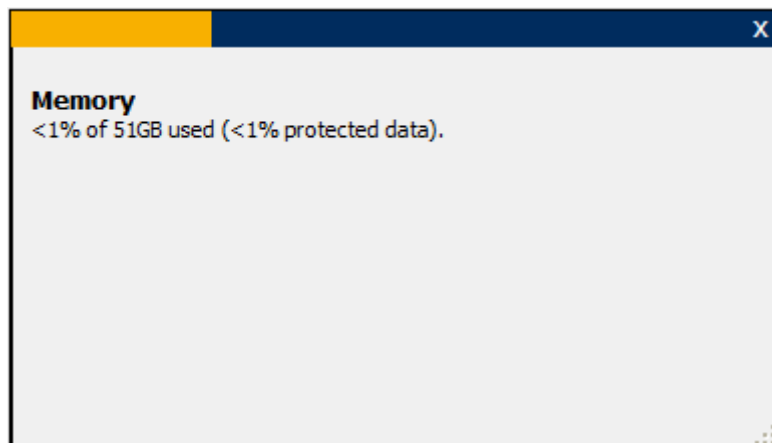


**Figure 12.5: Window with disk usage**

The window can be closed by clicking the [x] button in the upper right corner.

From 95% usage, the button [Disk usage] is colored in red

## 12.2.2 Reset marker counter

Each marker in the <Event overview> is assigned a consecutive number. By clicking the button **[Reset marker counter]** this counter is reset to “0”.

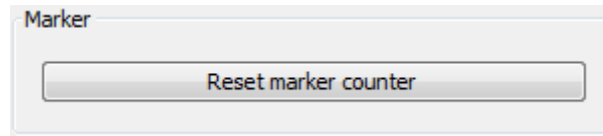


**Figure 12.6: Reset marker counter**

## 12.2.3 Delete data


To delete data from the logger, you have two options.

**Delete all data** all data from the logger will be erased  
In this case, you have the option to reset the marker counter.

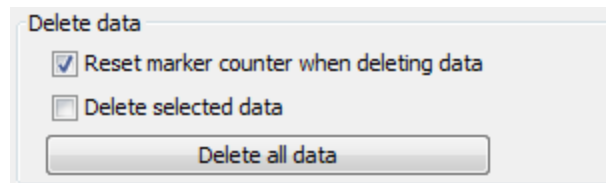

**Figure 12.7: Delete all data incl. Reset marker counter**

**Delete selected data** only selected data will be erased  
The data have to be marked in the <Event overview> beforehand.

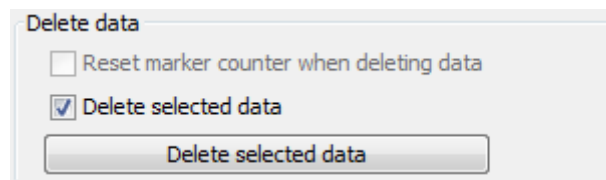

**Figure 12.8: Delete selected data**

## 12.2.4 Defining data block

In the segment <Data selection by marker> the periphery of the data block is defined for the marker that was chosen in the <Event overview>.

Data selection begins either at the last startup or at a fixed time before marker time.

For the end of data block there are four possibilities. It ends at:

- the end of section,
- a fixed time after the marker,
- the next marker or info entry within the same section that is been set or
- the next marker or info entry within the same section with the text entered in the text field that is been set.

**Figure 12.9: Defining data block start and end**

### 12.2.5 Event overview

The tab sheet <Event overview> displays the recorded data as sections defined by a startup and shutdown of the data logger, including all markers set and info events (wakeup source (CAN, LIN, Power-ON, ...), configuration update, delete data, set time, TSL events etc.).

The following functions and information are available.


- The dropdown menu at <Data range> limits the display to the data from the selected interval (since today, since yesterday, since 2 days etc.)
- **[Reload]** will request any new data from the logger and updates the <Event overview>.
- **Time** ▼ reverses the time order.
- **[Clear selection]** clears the choice, not the data.
- **[Select all marker]** selects all marker in the event overview.
- **[Select all]** sets all events as active.

**Attention:**

**If you select an orange marked day, all sections, that begin on this day will be marked.**


**Starts no section at the selected day, then there are no data downloaded or converted.**

**If you want to select data of a special day (from 00:00 to 23:59) please use the <Time period> window for selecting the hours of this day.**

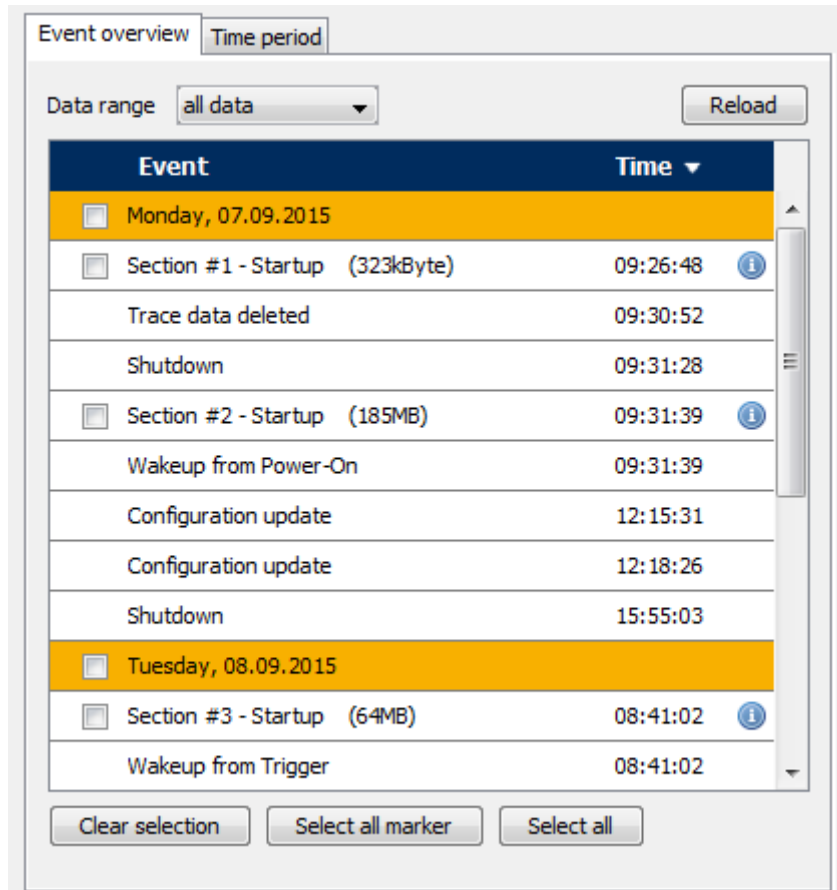

**Figure 12.10: Create data set – Event overview**

A click on the i button opens a window with an overview of the recorded channels in this section. The window can be closed by clicking the **[x]** button in the upper right corner.

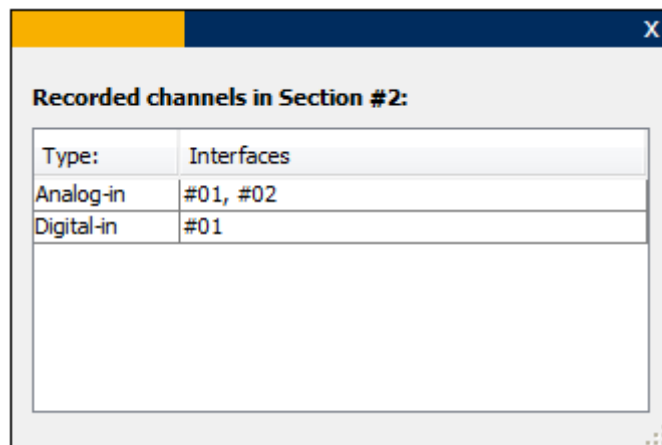

**Figure 12.11: Window for overview of recorded channels each section**

### 12.2.5.1 Displaying wakeup reasons

For failure analysis is explicitly specified in the event window (from start-up to shutdown) as additional information in addition to the recorded interfaces also the interface which has aroused the logger.

The screenshot shows the 'Event overview' window with a 'Time period' tab selected. The 'Data range' is set to 'all data'. The table below lists various events, with several 'Wakeup from...' entries highlighted in red. The events are grouped into sections, with 'Shutdown' events separating the sections.


Event	Time
Shutdown	14:34:20
<input type="checkbox"/> Section #4 - Startup (6MB/49MB)	14:43:49 ⓘ
Wakeup from CAN#3	14:43:49
Shutdown	15:14:39
<input type="checkbox"/> Section #5 - Startup (349kByte/1MB)	15:18:28 ⓘ
Wakeup from LIN#1	15:18:28
Shutdown	15:24:26
<input type="checkbox"/> Section #6 - Startup (862kByte/3MB)	15:28:47 ⓘ
Wakeup from Power-On	15:28:47
Shutdown	15:35:46
<input type="checkbox"/> Section #7 - Startup (4MB/14MB)	15:36:13 ⓘ
Wakeup from Power-On	15:36:13
Shutdown	17:02:50
<input type="checkbox"/> Section #8 - Startup (1MB/5MB)	17:05:20 ⓘ
Wakeup from Clamp15	17:05:20
Shutdown	18:14:53
<input type="checkbox"/> Monday, 29/02/2016	
<input type="checkbox"/> Section #9 - Startup (83kByte/319kByte)	09:09:04 ⓘ

Buttons at the bottom: Clear selection, Select all marker, Select all

**Figure 12.12: Wakup sources in the event window (highlighted in red)**

## 12.2.6 Time period

The tab sheet <Time period> selects all data for download that is selected “From” a defined start time “To” a defined end time.

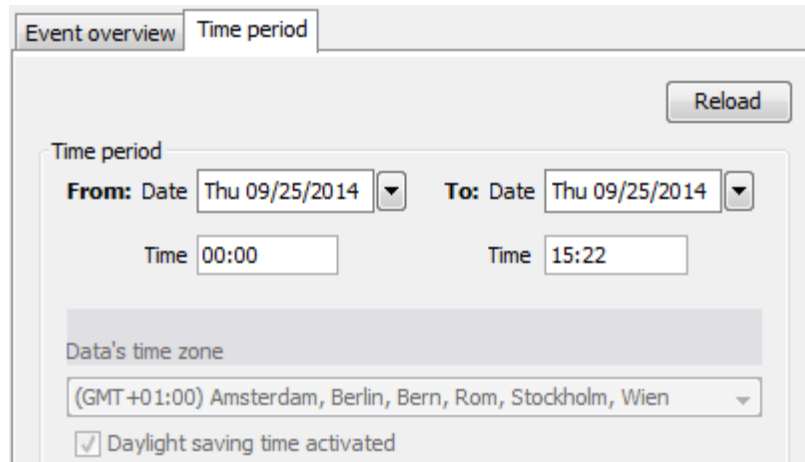

The screenshot displays the 'Time period' configuration window. It features a 'Reload' button in the top right. The 'Time period' section includes 'From: Date' and 'To: Date' dropdown menus, both set to 'Thu 09/25/2014'. Below these are 'Time' input fields for '00:00' and '15:22'. A 'Data's time zone' dropdown is set to '(GMT +01:00) Amsterdam, Berlin, Bern, Rom, Stockholm, Wien'. A checkbox for 'Daylight saving time activated' is checked.


**Figure 12.13: Create data set – Time period**

[Index](#)



## 12.3 Settings

By clicking on **[Settings...]** a dialog opens with multiple views. You can find this button underneath the <Event overview> resp. the <Time period> or in the menu bar of the client in the item **[Tools]**. Here you have the choice between short and long trace file names and the download modes sorted and unsorted, as folder- or ZIP-file.

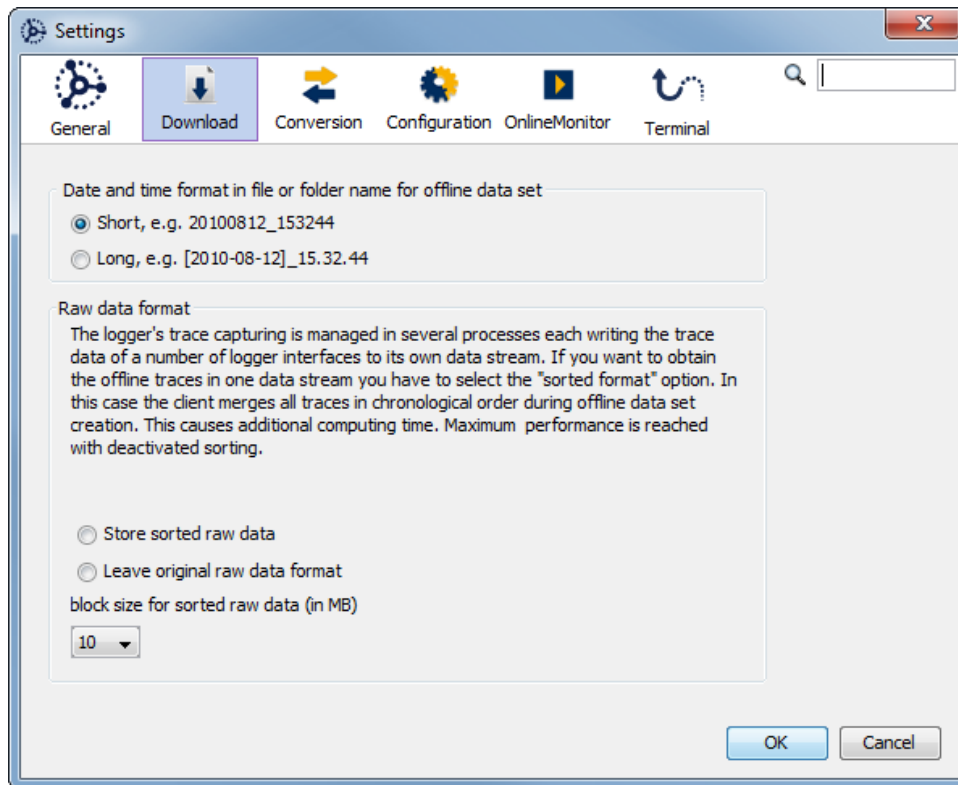


**Figure 12.14: Change download-options**

## 12.4 Downloading data set

The download of data can be initialized by a click on the button **[Download...]** underneath the <Event overview> resp. the <Time period>.

After a click on the **[Download...]** button, you have to set a <Name> for your offline data set and a place to store. Confirm the download with **[Save]**.

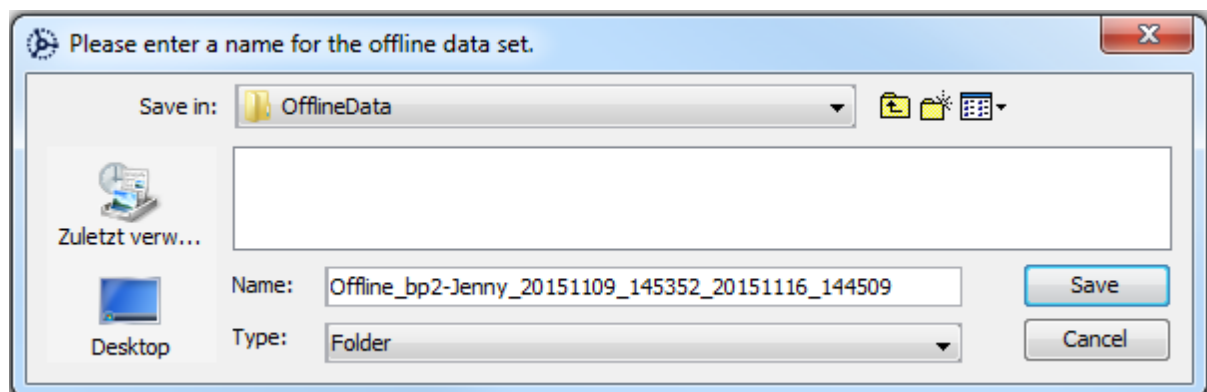


**Figure 12.15: Download data set**

## 12.5 Partitioning a data set


When you have downloaded a huge offline data set but you only need a small part of this for your analysis you can divide the huge offline data set into pieces.

When you have put the offline data set to the tab “Favorites” (see section 6.4 The tab “Favorites”) you can select it and reach the option **[Create offline data subset from this...]** in the context menu by a right click.

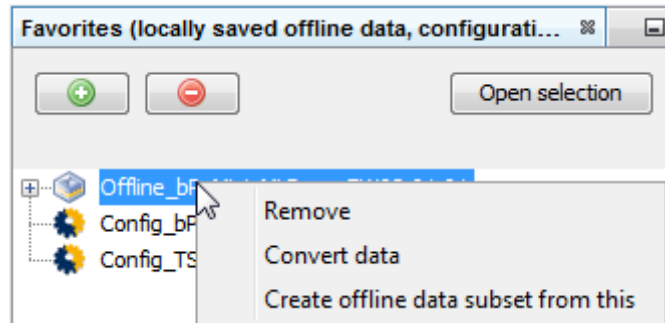

**Figure 12.16: Create offline data subset from this**

The full offline data set is displayed in the right window in an own tab <Create data set>. After selecting the desired events or time period you are able to create the offline date subset by clicking the button **[Create...]**.

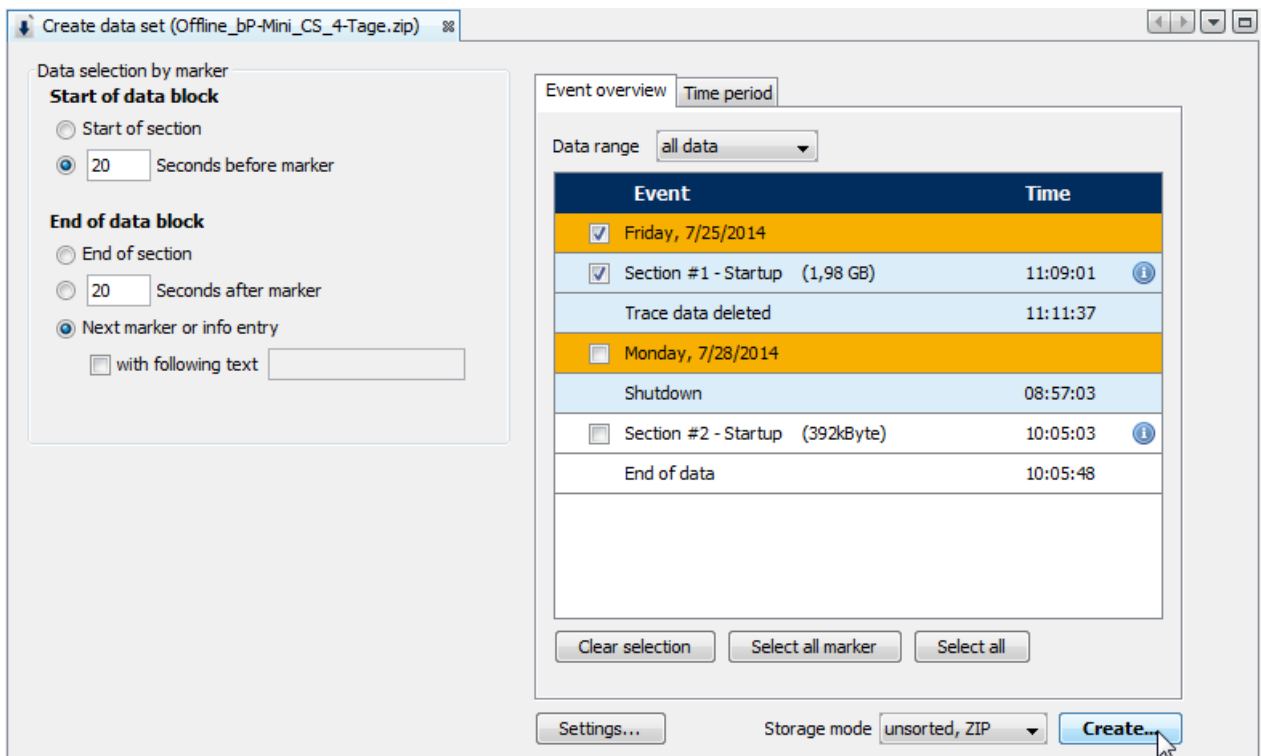

**Figure 12.17: Creating an offline data subset**

## 12.6 Trace file viewer


To get an overview about the offline data, a trace file viewer is available in the Telemotive System Client.

Add the unzipped offline data to the tab “Favorites” (see section 6.4 The tab “Favorites”). In the directory tree, you can find the trace data. A double-click opens the trace file viewer in the right window. By the filter function, you could select the recorded channels.


You can select which interface or channel should be displayed and change the displayed data into HEX format.

For interfaces you can select either complete groups of interfaces or single interfaces.

**Note:**  
The timestamps of unsorted data are always in GMT.

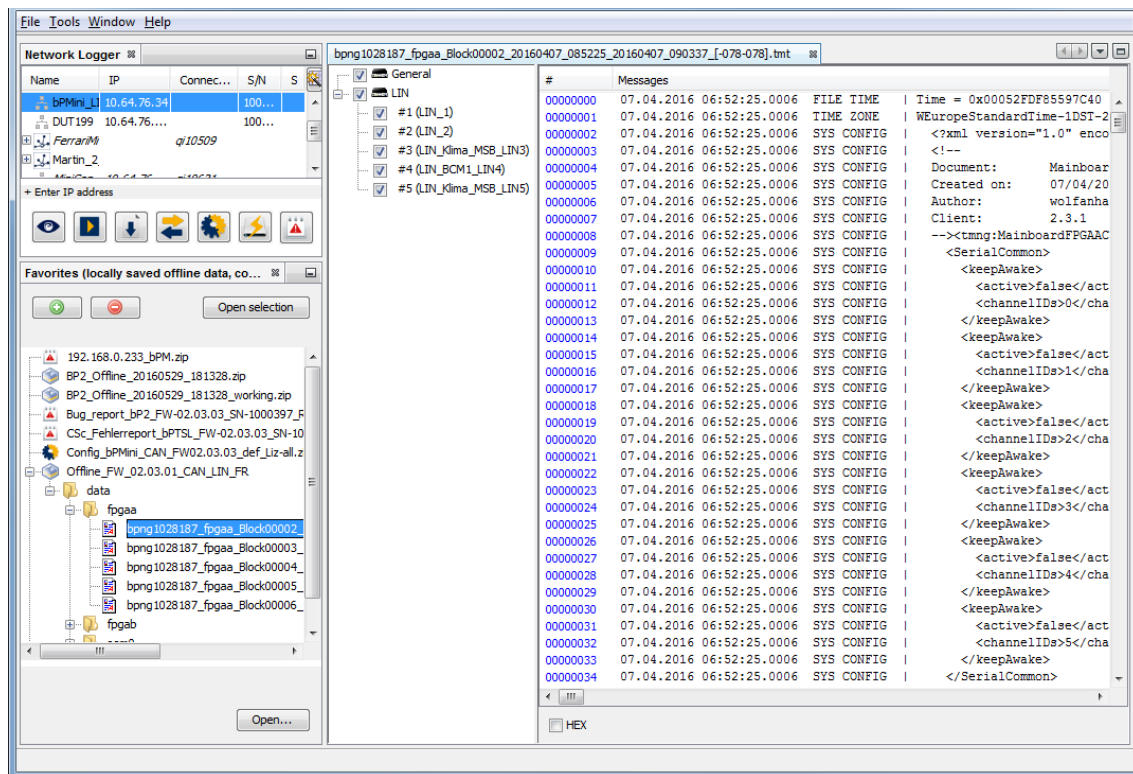

**Figure 12.18: Trace file viewer**

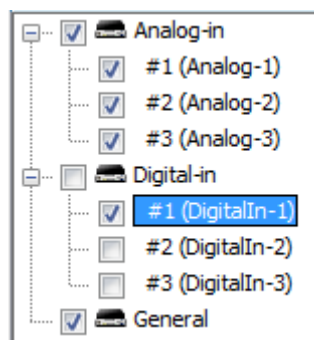

**Figure 12.19: Selecting groups or interfaces**

blue PiraT2 / blue PiraT2 5E						
<b>/ethernet</b>	<b>/fpgaa</b>	<b>/fpgab</b>	<b>/fpgac</b>	<b>/mii0</b>	<b>/oem0</b>	<b>/oem2</b>
<b>Schnittstelle / Interface</b>						
<b>Ethernet</b>	<b>6x Seriell 1 - 6</b>	<b>12x HS-CAN 1 - 12</b>	<b>10x HS-CAN 15 - 24</b>	<b>mii (ETH-Spy)</b>	<b>MOST 150</b>	<b>MOST 25</b>
	<b>2x Analog-IN 1 - 2</b>	<b>2x LS-CAN 13 - 14</b>			<b>8x Analog-IN 3 - 10</b>	<b>8x Analog-IN 3 - 10</b>
	<b>1x Digital IN+OUT IN 1</b>				<b>4x Digital-IN 2 - 5</b>	<b>4x Digital-IN 2 - 5</b>
	<b>1x Digital IN+OUT OUT 1</b>				<b>2x Digital- OUT 2 - 3</b>	<b>2x Digital- OUT 2 - 3</b>
	<b>8x LIN 1 - 8</b>				<b>2x FlexRay 1 - 2</b>	<b>2x FlexRay 1 - 2</b>

**Figure 12.20: Folder structure of an offline data set from blue PiraT2 / 5E**

blue PiraT Mini				
<b>/ethernet</b>	<b>/fpgam</b>	<b>/fpgame</b>	<b>/fpgamfr</b>	<b>/fpgamm150</b>
<b>Schnittstelle / Interface</b>				
<b>Ethernet</b>	<b>CAN</b>	<b>mii (ETH-Spy)</b>	<b>FR</b>	<b>M150</b>
	<b>LIN</b>			
	<b>SER</b>			
	<b>Analog / Digital</b>			

**Figure 12.21: Folder structure of an offline data set from blue PiraT Mini**

## 13 Terminal light


The Telemotive data logger **blue PiraT2** and **blue PiraT Mini** have a feature called “Terminal light” which allows to connect several logger to one computer system for configuration, downloading or other features without the need to modify the network settings of each data logger.

For this feature every data logger has a second, fixed IP address in the subnet 10.1.X.Y which can be contacted by the Telemotive System Client.

### Attention:

**To use this option your computers network port has to be set to the fixed IP address 10.1.255.254 and subnet mask 255.255.0.0.**

To set this IP address, please go to the specific network connection at **[Properties]** change the IP settings and close the window with **[OK]**.

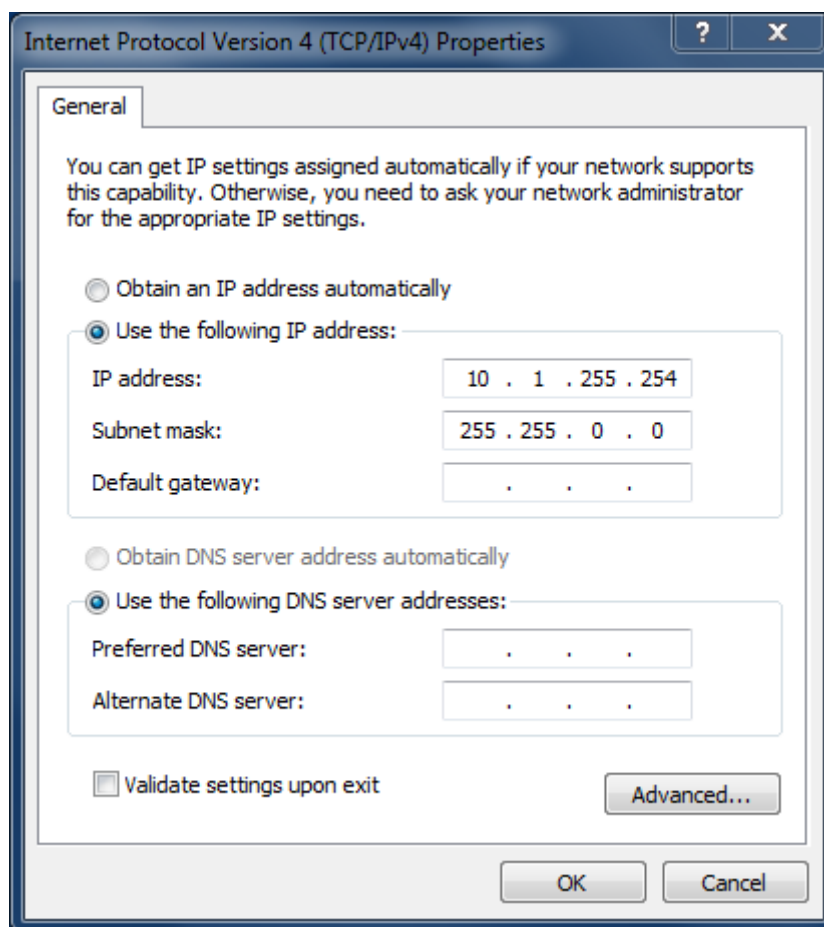

**Figure 13.1: Change IP settings**

When this is done the Telemotive System Client establishes the connection to the data loggers and the devices can be used.

[Index](#)

## 14 Converting data from logger or offline data set

All trace data will be recorded internally in the proprietary Telemotive TMT format (\*.tmt). If the recorded trace data will be downloaded and sorted, the data will be converted to an Extended TMT format (\*.xtmt).

This chapter describes how to convert the internal format in other formats, to make the data readable or to prepare them to import them into available analyzing tools.

### 14.1 Conversion format overview

The table below shows which data of the interfaces can be converted to other formats.

Tracedaten / Trace data	Format / format																										
	APN ASCII *.txt	ASCII Hexadecimal *.txt	Autosar DLT *.dlc	Binary Logging *.bif	CANcorder *_CANCORDER.asc	CANoe ASCII *.asc	Eso Trace file *.esotrace	Ethernet Raw *.raw	Extended Telemotive *.xtmt	GN-Log *.xlog	GPS Exchange *.gpx	KML Google Maps *.kml	KMZ comp. Google Maps *.kmz	MDf Logging *.log	MDf Signal v3.3 *.mdf	MDf Signal v4.1 *.mf4	MOST Data Analyser *.img	MPEG-4 *.mpeg4	MPEG Isochron raw file *.ts	NMEA - ASCII GPS *.nmea	Optolyzer *.op2	RAW Serial *_RAW.txt	Serial Debug *.txt	Serial Trace Analyser *.txt	TCPdump *.pcap	Telemotive ASCII *.txt	Trace Client *.trc
Analog IN				X	X			X																			X
CAN				X	X	X		X						X	X	X											X
CCP_XCP								X							X	X											X
Digital IN								X																			X
ECL								X									X										X
Ethernet			X	X			X	X	X	X															X	X	
- Ethernet - DLT			X					X	X																		X
- Ethernet - EsoTrace							X	X	X																		X
- Ethernet - GN Log								X	X	X																	X
- Ethernet - RAW								X	X																		X
- Ethernet - Spy Mode/MII				X				X	X																X	X	
- Ethernet - TCP Server								X	X																		X
- Ethernet - UDP Server								X	X																		X
- Ethernet - UTF8								X	X																		X
FlexRay				X		X		X																			X
GPS								X		X	X	X								X							X
Kamera/Video																			X								
LIN				X		X		X																			X
MOST150 CTRL				X				X										X									X
MOST150 MDP				X				X											X								X
MOST150 MEP				X				X																	X	X	
MOST150 Streaming				X				X											X								
MOST25 CTRL				X		X		X										X			X						X
MOST25 MDP				X		X		X										X									X
Serial RS232	X	X	X				X	X	X													X	X	X			X
Signal based filter (Format wird beibehalten / keeps the used format)																											
USB / Conn.-Gateway MLBevo								X														X	X				X
<b>Marker</b>																											
<b>Konvertierung / converting</b>	1	1	m	m	m	m	1	1	m	1	1	1	1	m	m	1	m	1	m	1	m	1	m	1	m	m	1
<b>Marker</b>	M																										
	P																										
<b>Konvertierung / converting</b>	m																										
	1																										

**Table 14.1: Conversion options (overview)**

## 14.2 Description of file formats

All traces data are stored on the logger in Telemotive Trace File format:

Telemotive Trace File (binary) (\*.tmt) (\*.xtmt)

This file format is a proprietary binary format of Telemotive AG. It is used for storing the trace data internally on the data logger and into offline data sets. The file names have the extension “\*.tmt” or “\*.xtmt”, if the data are already sorted. The Telemotive Trace File format is able to store all bus types and all of the information that the data logger is logging. Each data entry is stored with a start and an end time stamp.

**Note:**

**This file format contains time stamps in the time standard UTC (Universal Time, Coordinated).**

And can be converted later in these formats:

### 14.2.1 APN ASCII (\*. \_APN.txt)

This format contains the serial data in binary format. Each line starts with a time stamp. A line is finished if the pattern 0x0D 0x0A 0xAA or 0x0D 0x0A 0xBB occurs in the data. In this case, the characters 0x0D 0x0A is written to the current line and 0xAA resp. 0xBB is written to the following line.

### 14.2.2 ASCII Hexadecimal (\*.txt)

This format contains the serial data in hexadecimal format. Each line starts with a time stamp. A line is finished if the number of bytes in this line or the difference in the time stamps exceeds certain values.

### 14.2.3 Autosar DLT (\*.dlt)

This format bases on AUTOSAR Diagnostic Log and Trace 4.0. The format can be used for Ethernet and serial data. Due to a special customer requirement, the serial DLT messages are extended with a DLT serial header. The header is put in front of each message and consists of the four bytes “0x44 0x4C 0x53 0x01” (ASCII representation: „DLS“+0x01).

### 14.2.4 Binary Logging (\*.blf)

The BLF format is a data format of the company Vector. It is possible to import files of this format into the software CANoe. Currently, the Telemotive System Client includes CAN, MOST25/150 control channel and MOST25 asynchronous channel, MOST150 MDP/MEP channel, FlexRay channel, LIN channel and even Ethernet-SPY/MII data in this format. Additionally it is possible to convert analog data, marker (also as MOST pseudo messages) and timestamps as CAN pseudo messages.

### 14.2.5 CANCorder (\*. \_CANCORDER.txt)

The CANCorder format is an ASCII format of the data logger CANCorder of the company IXX-AT. It is possible to use this format for the CAN data recorded by the blue PiraT2 / blue PiraT Mini.

### **14.2.6 CANoe ASCII (\*.asc)**

The CANoe ASCII format is a data format of the company Vector Informatik. It is possible to read files of this format into the software CANoe. Currently the client includes CAN, MOST25 control channel and MOST asynchronous channel, FlexRay channel and LIN channel data in this format. Additionally it is possible to convert analog data, marker (also MOST pseudo messages) and timestamps as CAN pseudo messages.

### **14.2.7 EsoTrace (\*.esotrace)**

This format was defined by the company eSolution and can be used for Ethernet data.

### **14.2.8 Ethernet Raw (\*.raw)**

It is possible to log Ethernet data in the following two formats.

- **RAW** = Data packages with packet-length of up to 40 kilobyte are getting a time stamp and will be stored on the data logger.
- **UTF8** = Data packages which are ending with LF or CR are getting a time stamp and will be stored on the data logger. This is a proprietary format for serial data.

Extended Telemotive Trace File (binary) (\*.tmt) (\*.xtmt)

This file format is a proprietary binary format of Telemotive AG. It is used for storing the trace data internally on the data logger and into offline data sets. The file names have the extension “\*.xtmt”, if the data are already sorted. The Telemotive Trace File format is able to store all bus types and all of the information that the data logger is logging. Each data entry is stored with a start and an end time stamp.

**Note:**

**This file format contains time stamps in the time standard UTC (Universal Time, Coordinated).**

### **14.2.9 GN-Log (\*.GNLog.<yy>aa)**

This is a proprietary format for serial data. <yy> contains the last two digits of the year.

### **14.2.10 GPS Exchange (\*.gpx)**

The GPS exchange format GPX is the format for geo data. It is an open license free format, which should be used for the exchange of geo data. The format bases on the XML standard.

### **14.2.11 KML (\*.kml)**

Keyhole Markup Language (KML) is the format for geo data for the applications Google Earth and Google Maps. The format bases on the XML standard.

### **14.2.12 KMZ (\*.kmz)**

Keyhole Markup Language (KML) is the format for geo data for the applications Google Earth and Google Maps. KMZ is the compressed version of KML in zip format. The format bases on the XML standard.

### **14.2.13 MDF Logging (\*.log)**

MDF (Measurement Data Format) is a binary data format for measurement data, which was developed by the company Vector. Currently this format is only used for CAN messages. It defines one channel group related to MDF specification v3.3.



The channel group includes:

- #1 Event-Type
- #2 CAN-Channel
- #3 CAN-ID
- #4 Direction Rx/Tx
- #5 RTR
- #6 DLC
- #7-14 Byte 0 – 7
- #15 Time Stamp

#### **14.2.14 MDF Signal v3.3 (\*.mdf)**

MDF (Measurement Data Format) is a binary data format for measurement data, which was developed by the company Vector. This format includes all signals of the CAN trace, that are specified within the assigned DBC file or which were logged by CCP/XCP.

#### **14.2.15 MDF Signal v4.1 (\*.mf4)**

MDF (Measurement Data Format) is a binary data format for measurement data by ASAM standards. This format includes all signals of the CAN trace, that are specified within the assigned DBC file or which were logged by CCP/XCP.

#### **14.2.16 MOST Data Analyser (\*.img)**

The MOST Data Analyser format contains data of the MOST control and asynchronous channel as well as MDP, MEP and streaming messages. It has the extension “\*.img“. It is possible to read files of this format with the “OptoLyzer Suite“ of SMSC. Marker could be written as MOST pseudo message.

#### **14.2.17 MPEG4 – Video (\*.mpeg4)**

MPEG4 is a well-known format for video streams. For more information please have a look on <http://mpeg.chiariglione.org/standards/mpeg-4/mpeg-4.htm>.

#### **14.2.18 MPEG Isochronous raw (.ts)**

MPEG transport stream is a standardized communication protocol for continuous, digital video and audio streams. This format is used for DVB, ATSC and MOST150 streaming data. The format is generated by extracting the raw data from the data stream.

#### **14.2.19 NMEA – ASCII GPS (\*.nmea)**

NMEA 0183 is a well-known format for geo data, which was defined by the National Marine Electronics Association. It bases on ASCII.

### 14.2.20 OptoLyzer (\*.op2)

The OptoLyzer format contains data of the MOST25 control channel. It has the extension ".op2". It is possible to import files of this format with the "OptoLyzer Suite" from the company SMSC. For newer versions of the "OptoLyzer Suite" it is recommended to use the \*.img format. Marker could be written as MOST pseudo message.

### 14.2.21 Raw Serial (\*.\_RAW.txt)

This format only contains the unmodified serial raw data (and also Connected-Gateway MLBevo) without any formatting. It is only possible to store one single channel in this format.

### 14.2.22 Serial Debug (\*.txt)

The Serial Debug format is also a format for unmodified raw data (and also Connected-Gateway MLBevo). In contrast to the Raw Serial format one message contains all characters up to the next end-of-line. This format equals the Raw Serial format of the blue Pirat.

### 14.2.23 Serial Trace Analyser (\*.txt)

The Serial Trace Analyser format is a simple text format for serial data.

```
0006394 22.06.2006 07:12:01.5 | Startup sequence initiated
0006395 22.06.2006 07:12:02.3 | performing mem test
0006396 22.06.2006 07:12:02.5 | ===== Marker 5 =====
0006397 22.06.2006 07:12:03.1 | time: 0455334
```

**Figure 14.1: Trace in Serial Trace Analyser format**

Mostly a single channel can be stored in this format. Each line starts with a line number followed by a time stamp and the serial data. This format also supports markers.

### 14.2.24 TCP dump (\*.pcap)

TCP dump is a well-known program for controlling and evaluating network traffic. For Windows operating system "WinDump" is available.

For more information please have a look on [www.tcpdump.org](http://www.tcpdump.org).

### 14.2.25 Telemotive ASCII (\*.txt)

This file format is a proprietary text format of Telemotive AG. It is mainly used for testing purposes. The Telemotive Trace File ASCII format is able to store all bus types of the data logger. The other file formats are not able to store all information created by the data logger (e.g., error states), therefore it can be useful to select this format for data conversion.

The format could be different in a newer client version. Each line starts with a time stamp followed by the bus type and the channel number (if applicable). Here you can see an example of a trace in the Telemotive ASCII format.

```
22.06.2006 06:51:52.3422 MOST CTRL | [0101 -> 0401] . 01.01 . 003.1 . 0 0 ()
22.06.2006 06:51:52.3430 SERIAL #1 | PI:d313 ATN:1 MESSAGES:6 selected:false HEX_ AA BB 01
22.06.2006 06:51:52.3430 SERIAL #1 | Program [1] ixRadio
22.06.2006 06:51:52.3436 MOST CTRL | [0101 -> 0100] . 01.01 . 003.C . 0 2 (01 01)
22.06.2006 06:51:52.3464 CAN #1 | Rx 0fa 8 1e 5d f6 00 1c 15 84 69
22.06.2006 06:51:52.3476 SERIAL #1 | Starting shutdown
22.06.2006 06:51:52.3545 CAN #1 | Rx 7c9 8 f0 50 01 5a 00 27 9a 00
```

**Figure 14.2: Trace in the Telemotive ASCII format**

### **14.2.26 Trace Client Format (\*.tcr)**


A special data format for the trace client from Harman Becker.

[Index](#)

## 14.3 Opening the application “Conversion”

The conversion application allows saving internal data from the logger or an offline data set on the computers disk in a chosen format.


In the tab <Network Logger> click a logger that is not already connected.

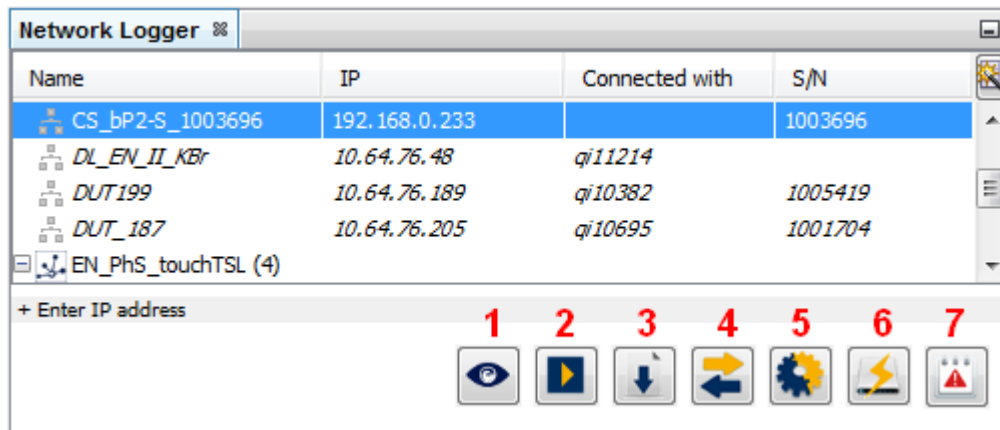

**Figure 14.3: Selecting logger**


Click on the application [**Convert data**] (4).

The tab <Conversion> is opening with the <Event overview> with the loggers data on the left side, the <Channel selection tree> in the middle and the area for format settings on the right side.

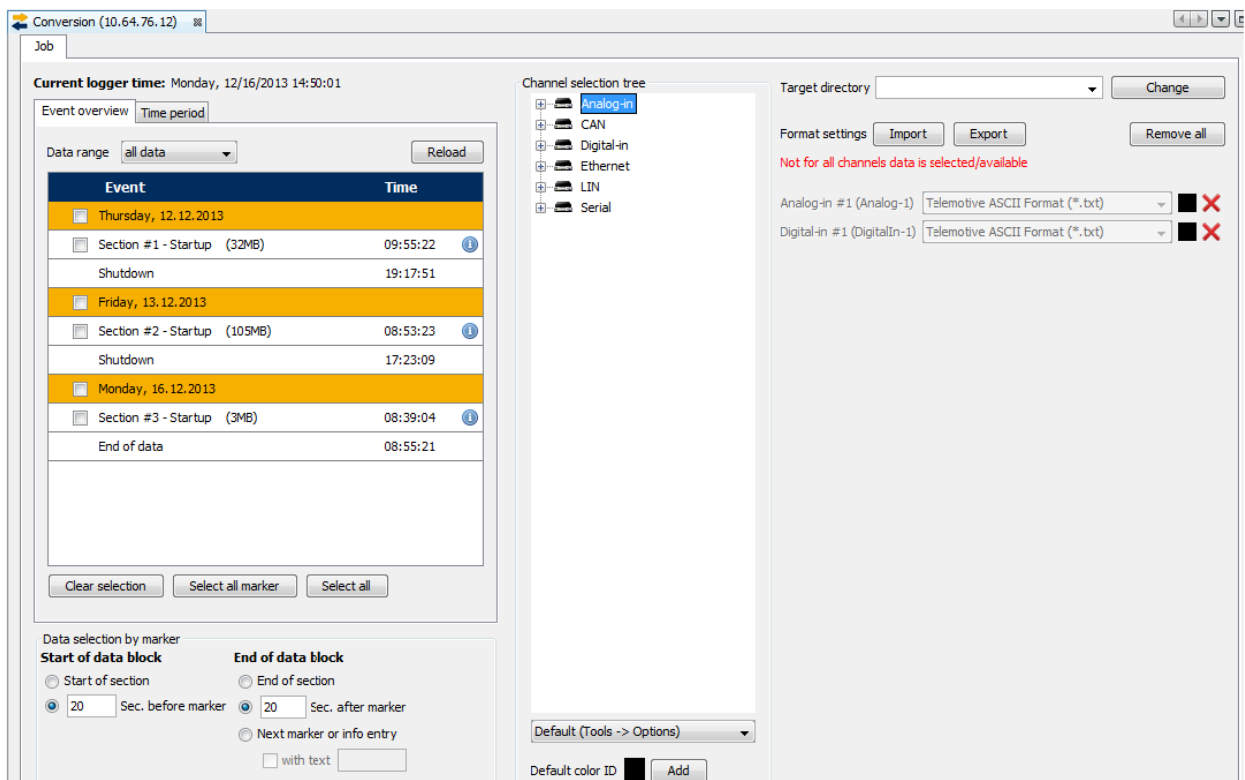

**Figure 14.4: Tab “Conversion”**

If you want to convert an offline data set or pieces of it, add the offline data to the tab “Favorites” (see section 6.4 The tab “Favorites”).

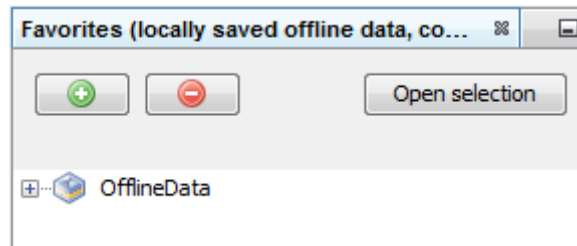

**Figure 14.5: Tab “Favorites”**



A double-click on the offline data set opens the window with the available data sections. In the tab name the file name is displayed in parentheses.

## 14.4 The tab “Conversion”

In an online conversion, the toolbar at the top of the tab is equal to that of the tab <Create data set>, see 12.2

The tab “Create data set”.  
In the tab <Conversion> of an offline data set there is no toolbar available.

The button bar at the bottom of the tab contains the following buttons.

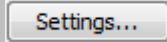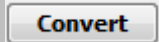Button	Effect
	opens the dialog <Settings>, see 14.7 Settings
	starts the conversion

**Table 14.2: Buttons in the tab “Conversion”**

### 14.4.1 Event overview and time period

Data which should be converted can be selected in the <Event overview> or the <Time period>.

For more information see 12.2.5 Event overview and 12.2.6

Time period.

**Attention:**


**While converting data, selected in the event overview, the data are stored divided into sections. When the data were selected in the time period the data are stored into one file as long as the file hasn't reached the maximum file size.**

[Index](#)

## 14.4.2 Defining a data block

You can select days, sections or marker for conversion. For the conversion with markers the time period which should be converted before and after the marker can be configured.

For more information see 12.2.4 Defining data block.

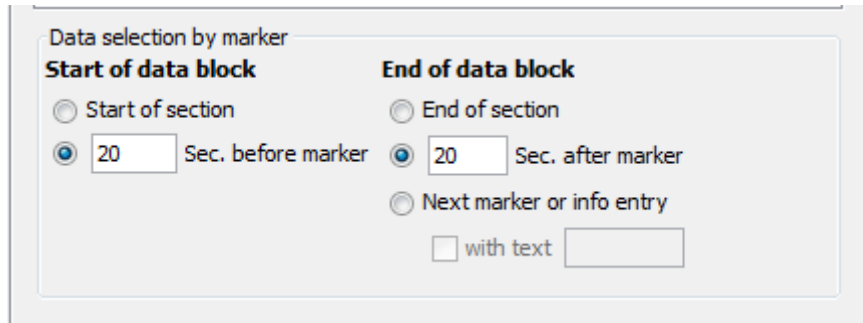

**Figure 14.6: Defining data block start and end**

### Attention:

The availability of channels is determined at section level. At very low data rates, it is therefore possible that the conversion of data around a marker may fail because of there are no data at this time.

In this case only the existing data will be converted.


## 14.4.3 Choosing channel

Each channel in the <Channel selection tree> is sorted to its interface. To see the channels of an interface click on the [+].

If you have chosen the data which shall be converted, the color of the arrows of available channels in the <Channel selection tree> changes from gray to green.

Open the dropdown menu underneath the <Channel selection tree> and choose the desired conversion format.

If **[Default (Tools ->Options)]** is set, the default settings of the dialog <Settings> will be taken, see 14.7.4 Formats.

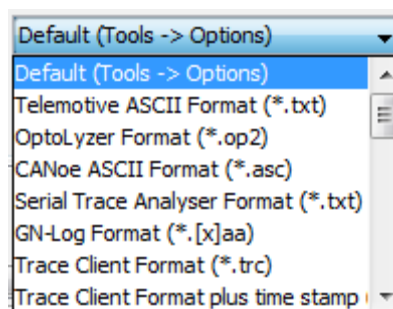


**Figure 14.7: Choosing conversion format**

To add a channel to the area for format settings, double-click on it at the <Channel selection tree> or select it there and click **[Add]** underneath the <Channel selection tree>. Multiple channels can be selected by holding down the **[Strg]** button.



Available channels appear in the <Default color ID>. Unavailable channels are grayed out.

Once an unavailable channel has been added, it is pointed out in red font, that not for all added channels data were selected or are available.

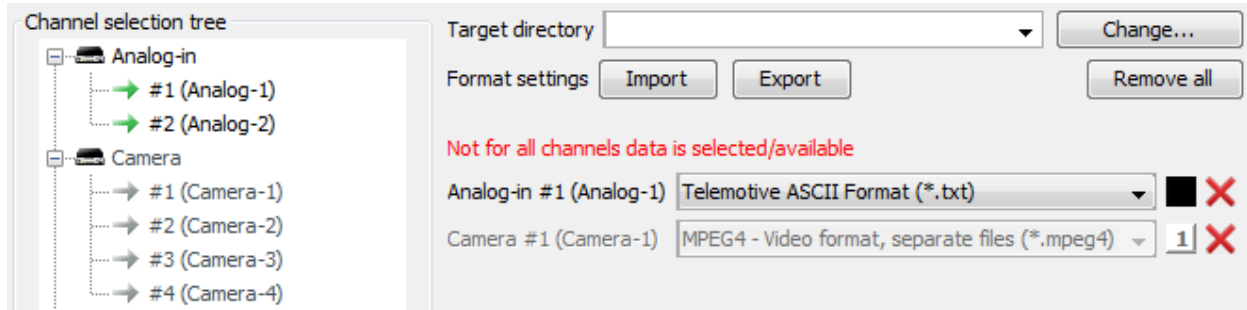


**Figure 14.8: “Channel selection tree” and area for format settings**

By a click on the [X] the respective conversion channel is removed.

#### 14.4.4 Selecting target directory


The path of the target directory, where the converted data shall be stored, can be selected here. The target directory combo box allows entering the name of the directory in which the converted data will be saved. Either you choose an entry from the dropdown menu or you open the dialog <Choose target directory> by clicking [Change...].

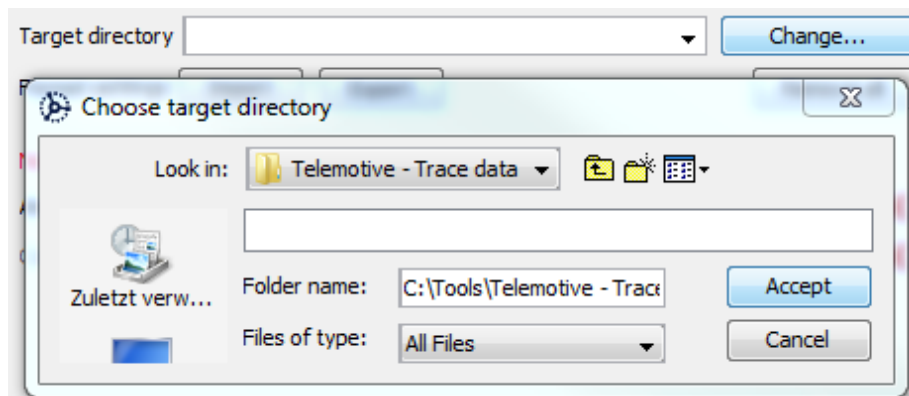

**Figure 14.9: Selecting target directory**

#### 14.4.5 Import/export format settings


The <Format settings> with the selected channels can be imported or exported to quickly use frequently used settings.

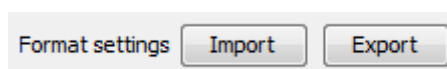

**Figure 14.10: Import/export format settings**

### 14.4.6 Changing conversion format


The dropdown menu of the active, added channels only offers the conversion formats which are possible for the data of the interface.

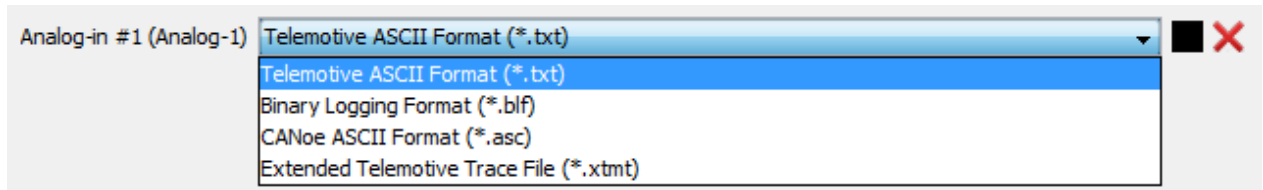

**Figure 14.11: Changing conversion format**

Data having the same channel can be converted in the same format but in different output files by selecting different Color-IDs.

For changing the Color-ID click on the colored field besides the dropdown menu. A dialog opens in which the Color-ID can be changed arbitrarily. By clicking **[Apply]** the colored field takes over the selected color value.

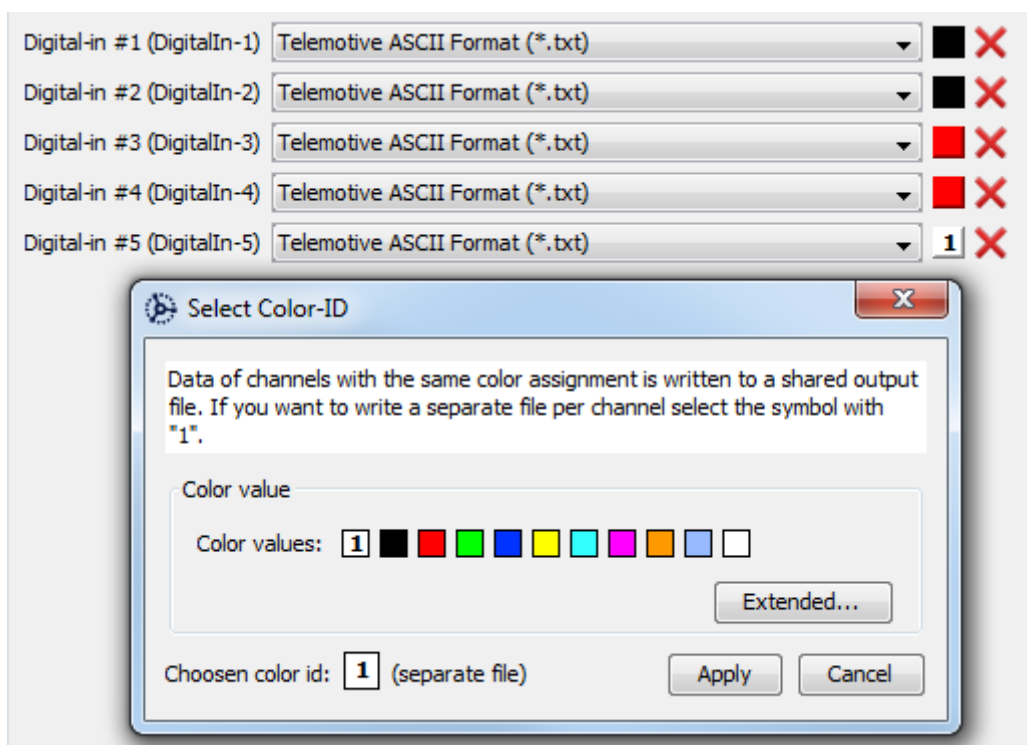


**Figure 14.12: Changing Color-IDs**

## 14.5 Converting data

By pressing the **[Convert]** button at the lower button bar the conversion can be started. All channels in the area for format settings will be written into the target directory in the selected format.

**In some cases, not all data could be converted at the target format. This is the case if the target format can't absorb all of the recorded information (e.g., signal based conversion) or the protocol is not supported (e.g., TCP-Raw-data to GN-Log).**

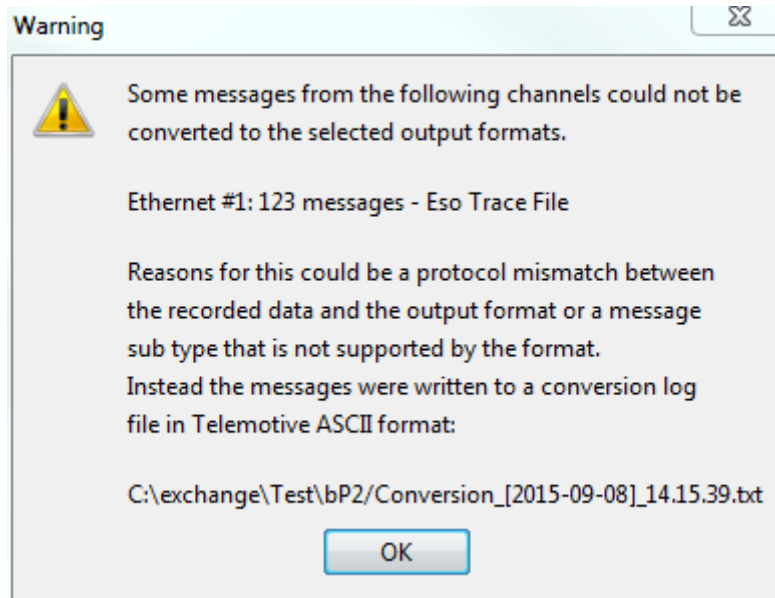

**Figure 14.13: Notification message due to improper conversion**

## 14.6 Automatically generated Events.txt

During the conversion process all events in the selected time range are saved into a file called event.txt which allows to get fast access to the times where marker are set or to see the startups and shutdowns of the data logger.

This file is analogue to the file which was created with blue PiraT of first generation.

The structure of the file is as follows:

```
----- Thursday, 25.09.2014
Section 1
    09:16:54.000    Startup
    10:29:27.000    Marker #1
    11:17:13.349    Shutdown
Section 2
    11:17:29.000    Startup
    11:19:59.991    Shutdown
Section 3
```


**Figure 14.14: Example Events.txt**

## 14.7 Settings

By clicking on **[Settings...]** a dialog opens with multiple views. You can find this button underneath the <Event overview> resp. the <Time period> or in the menu bar of the client in the item **[Tools]**.

### 14.7.1 General

On the tab sheet <General> you can define the name of the tester which will be inserted into the converted file names.

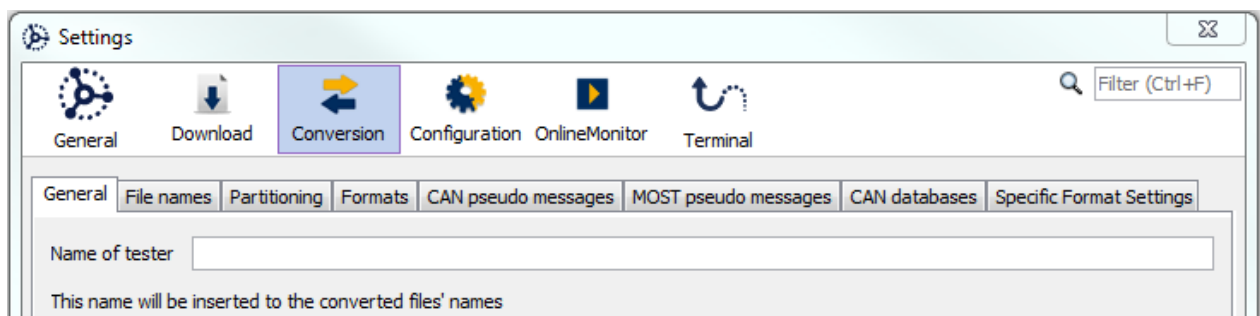

**Figure 14.15: Tab sheet “General”**

### 14.7.2 File names

Here you can choose whether the file name of the converted data contains:

- the date and time display in the short or long format
- the time stamp according to the effectively included data or to the time stamps in the data selection dialog and
- occurring marker numbers.

**Note:**

**If you set many markers, the file name will be very long.**


The timestamp inserted in the file name can be configured as follows:

**according to the effectively included data**

The time stamp of the first and last recorded data in the selected interval is written in the file name.

**according to the time stamps in the data selection dialog**

The time of the selected interval is written in the file name.

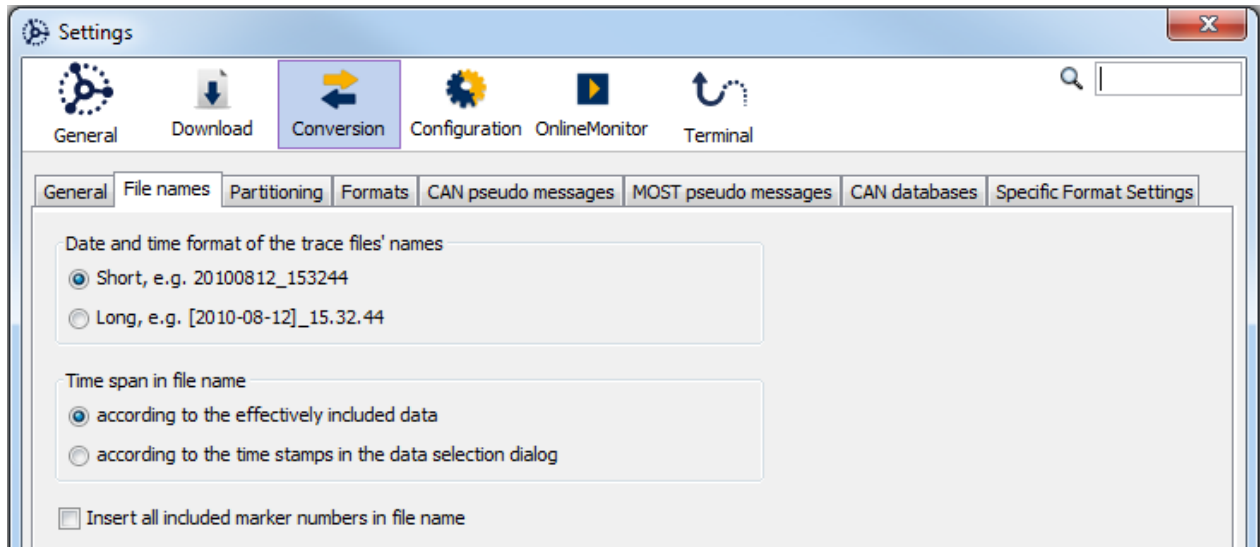

**Figure 14.16: Tab sheet “File names”**


### 14.7.3 Partitioning

The partitioning concerns splitting of the target trace files in multiple parts.

If **Split converted files at midnight** is not enabled, the last file at the day is written full to the maximum output size, after that a new file begins (all files have the same max. size).

If **Store converted files in subdirectories named according to their start time** is enabled, the client makes subdirectories for the converted data. You can choose if the names of these folders only contain the date or also the name of the data logger.

The maximum file size can be adjusted. When this file size is reached, the trace file is closed at this point and a new one is created.

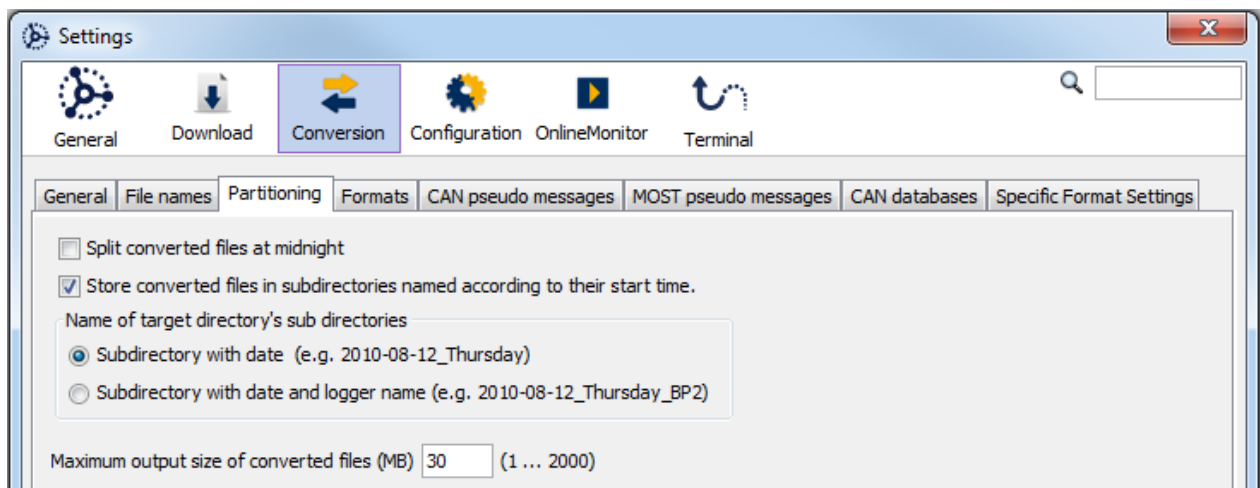


**Figure 14.17: Tab sheet “Partitioning”**

## 14.7.4 Formats

The default settings for format selection can be chosen here. The available file formats are shown in Table 14.1: Conversion options (overview).

To convert analog data into “\*.asc” or “\*.blf”, the data must be transformed first into CAN pseudo messages.

The corresponding DBC file can be found on the associated CAN channels that are allocated among databases.

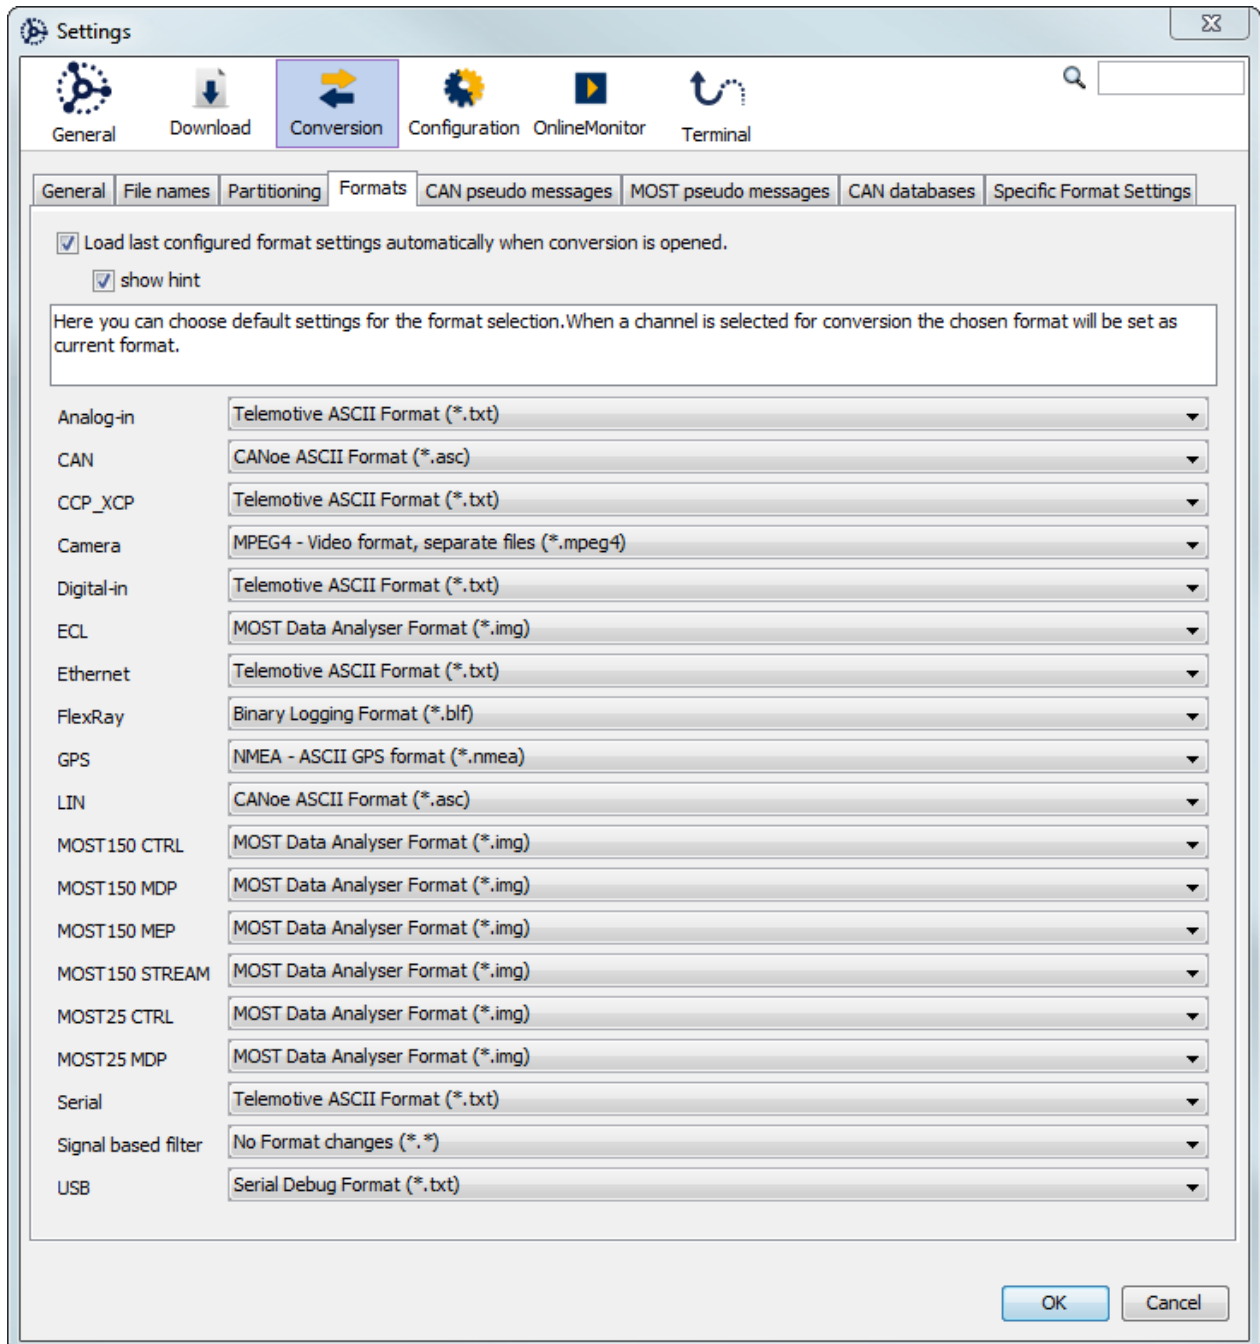

**Figure 14.18: Tab sheet “Formats”**

## 14.7.5 CAN pseudo messages

Some CAN file formats (e.g., CANoe ASCII) don't support the inclusion of the markers and the absolute time stamps. For this reason, the client can be configured to insert CAN pseudo messages with this information. A pseudo message is defined by the channel number, the CAN ID and the number of data bytes.


The pseudo message for the absolute time stamps is inserted every second. It contains the hour, minute, second, day, month and year of the time stamp.

The pseudo message for markers is inserted at the time of the marker. It contains the marker number.

It is also possible to write analog measurements as a CAN pseudo message. So the analog data could be written in the CANoe format as "\*.asc" or "\*.blf" files.

Therefore you have to assign a CAN ID and a CAN channel to each analog port that you want to convert. The selected CAN channel must be configured with a CAN database (see section 8.17). This DBC file must contain a description of the CAN message of the selected CAN ID including a CAN signal with at least 16 bit of data length. Internally the logger stores the voltage values in volts. The output of the measuring values is an integer format, so the decimal places are cut off. To solve these, please write a factor in your CAN database. For example a factor of 0.001 gives output values in mV.

The analog data will be written to this signal when converting.

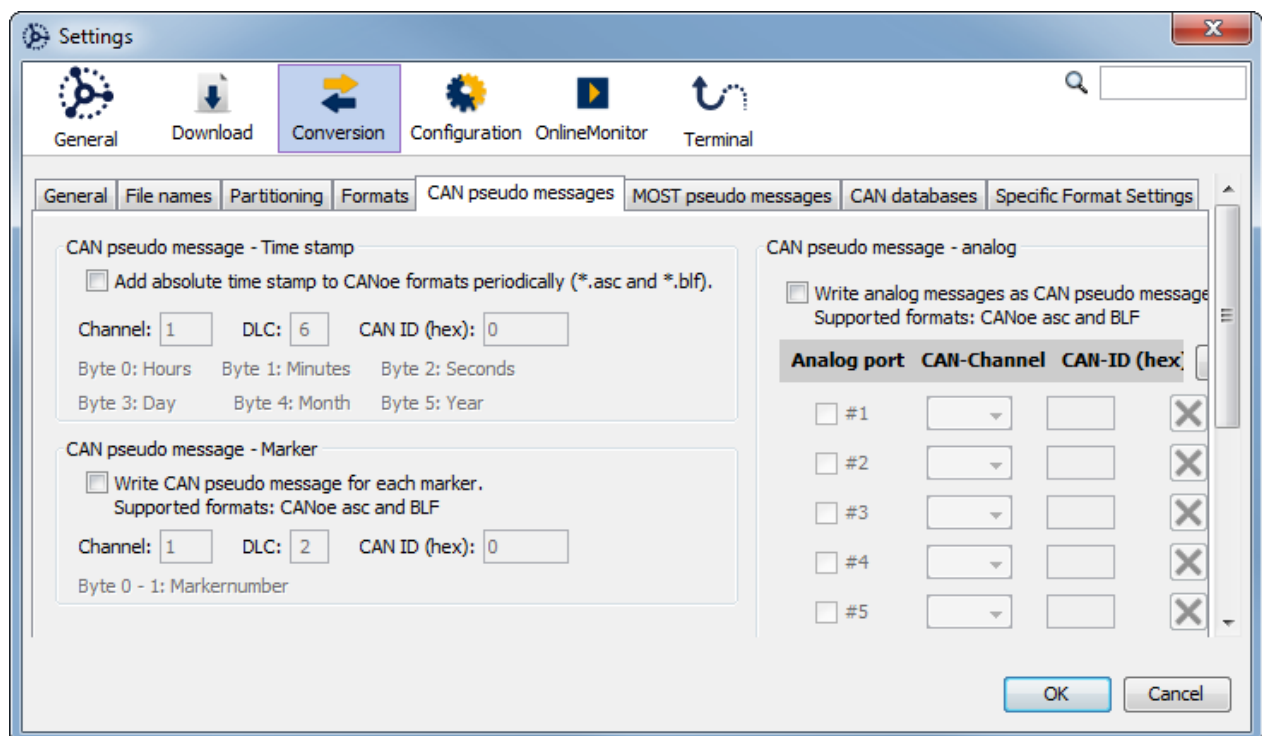


**Figure 14.19: Tab sheet "CAN pseudo messages"**

## 14.7.6 MOST pseudo messages

Some file formats (e.g., OptoLyzer “\*.op2”) do not support the inclusion of the markers. For this reason, the client can be configured to insert MOST pseudo messages with this information.

A pseudo message is defined by its source address, the target address, the function block ID and the function ID. The marker number is stored in the first two data bytes (the lower 8 bit are stored in the first data byte).

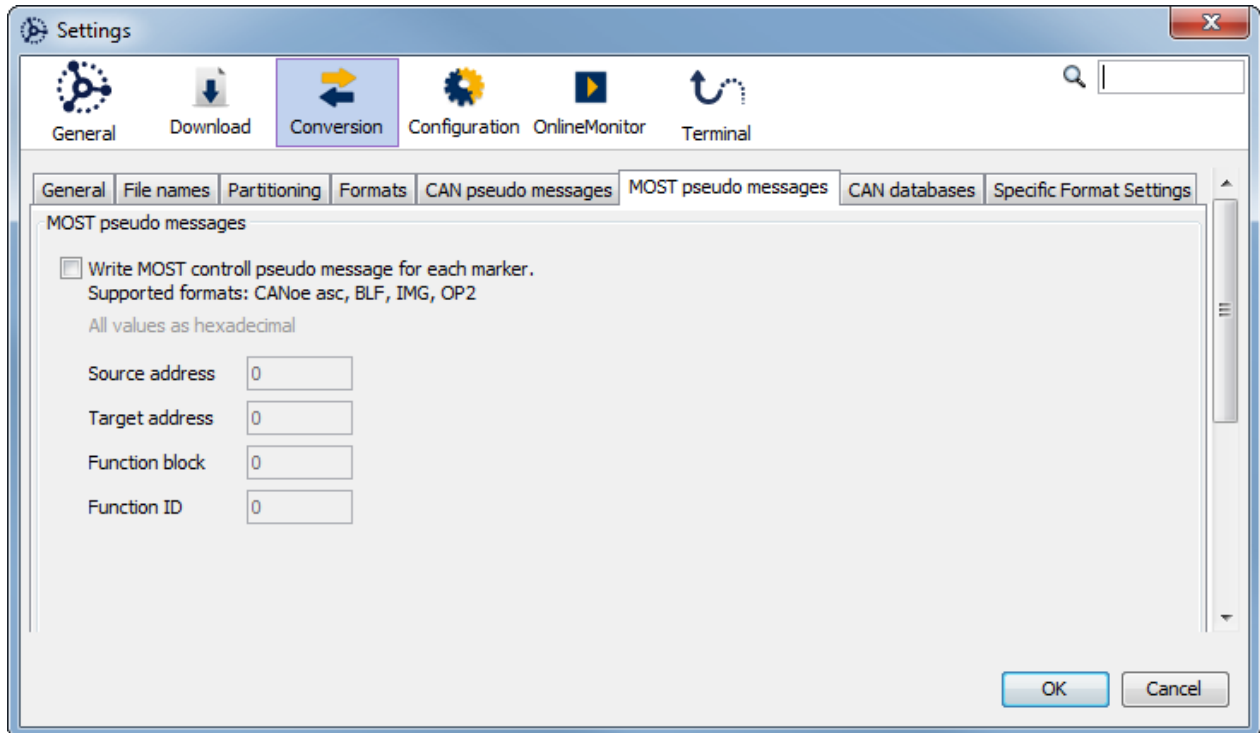


**Figure 14.20: Tab sheet “MOST pseudo messages”**



### 14.7.7 CAN databases


Databases settings are accessible by opening the tab sheet <CAN databases> in the settings menu. This menu allows configuring a database for each CAN channel. Databases contain readable names for CAN message IDs which allows easier configuration of CAN filters.

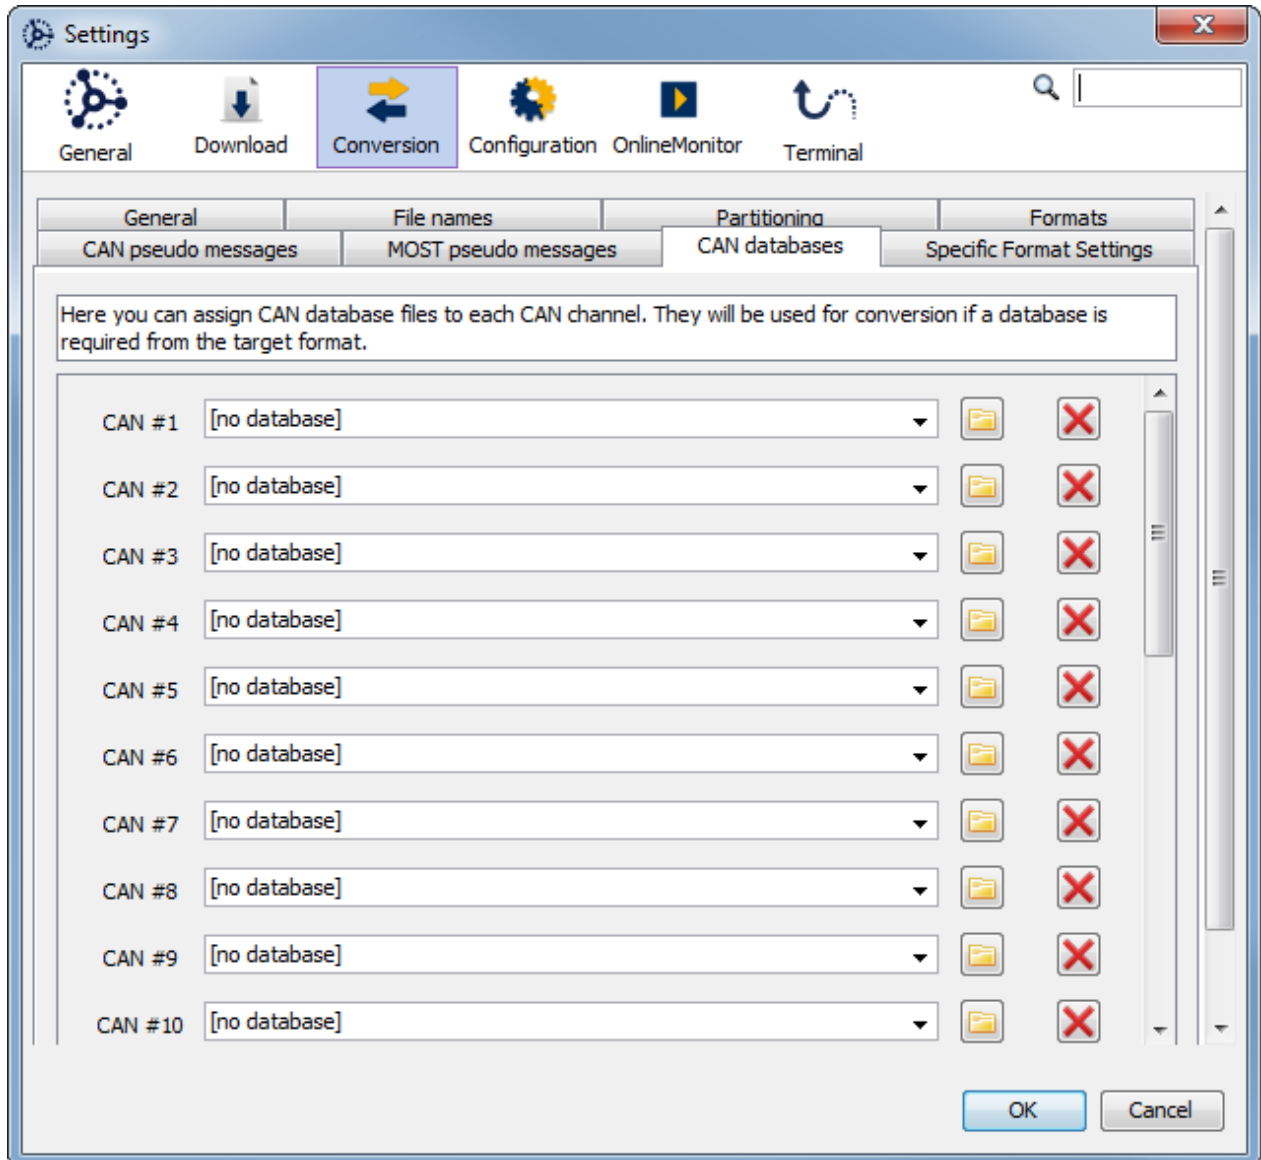

**Figure 14.21: Tab sheet “CAN databases”**

## 14.7.8 Specific Format Settings

Here you can set up specific format settings for both optional feature GPS Logging and MOST150 streaming.

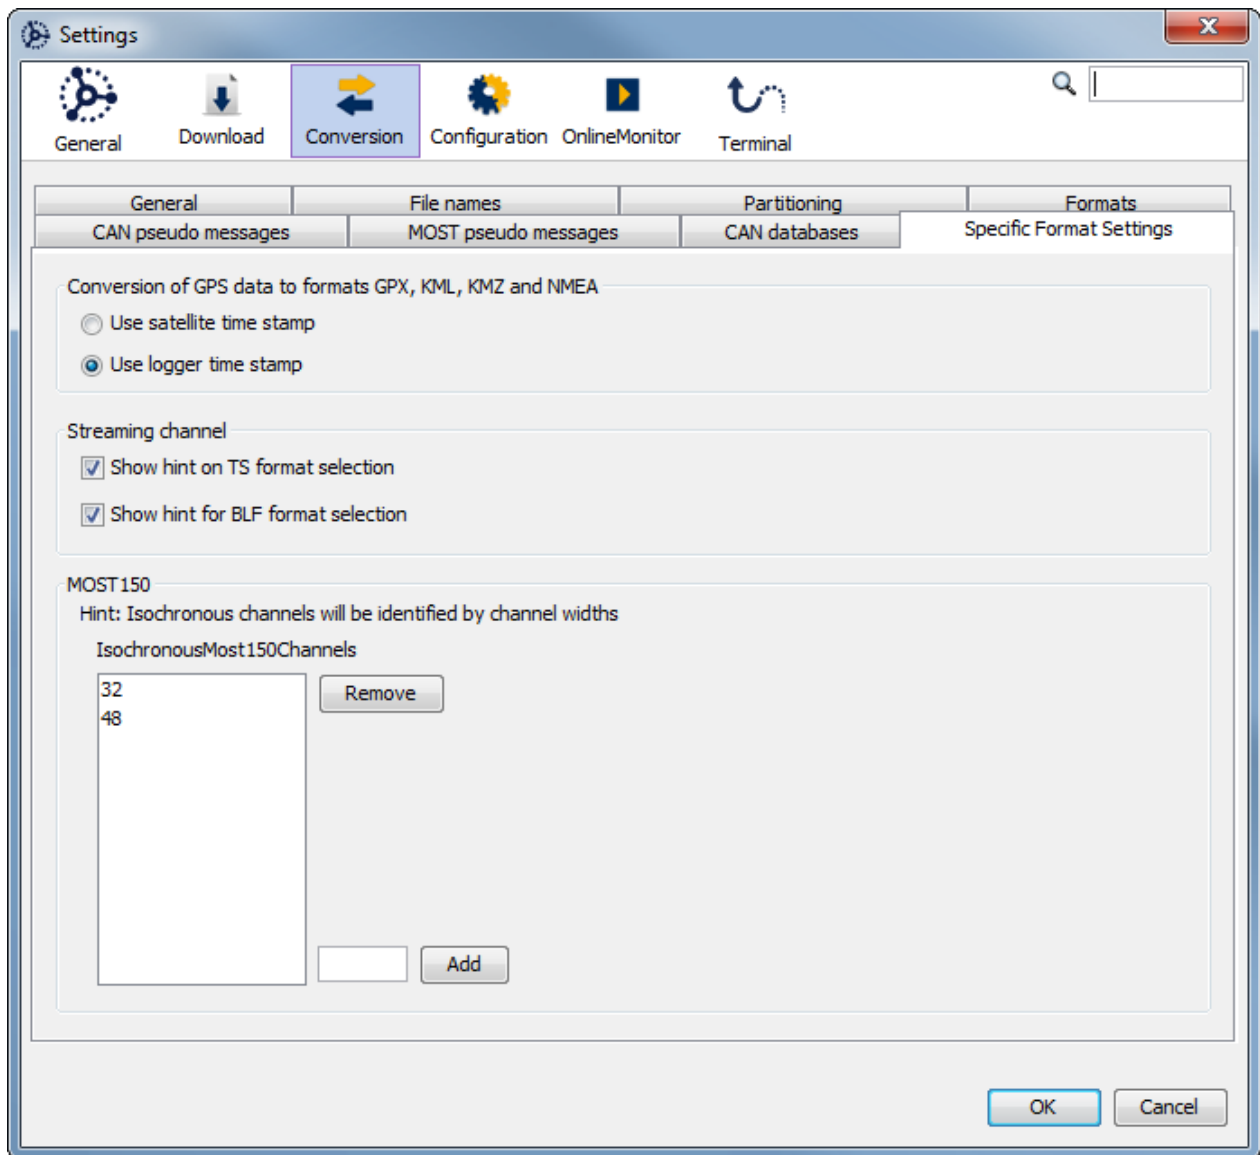


**Figure 14.22: Tab sheet “Specific Format Settings”**

### 14.7.8.1 Converting of GPS data

For converting GPS data in GPS Exchange format (\*.gpx), KML Google Maps (\*.kml), KMZ comp. Google Maps (\*.kmz) or NMEA – ASCII GPS (\*.nmea) you could select the time stamp source. It is possible to use the logger time or the satellite time.


### 14.7.8.2 Converting of MOST150 streaming data

The enabled checkbox **Show hint on TS format selection** activates the hint when MOST150 streaming data shall be converted into the Isochronous raw format (\*.ts) and notes the limitations for the conversion.

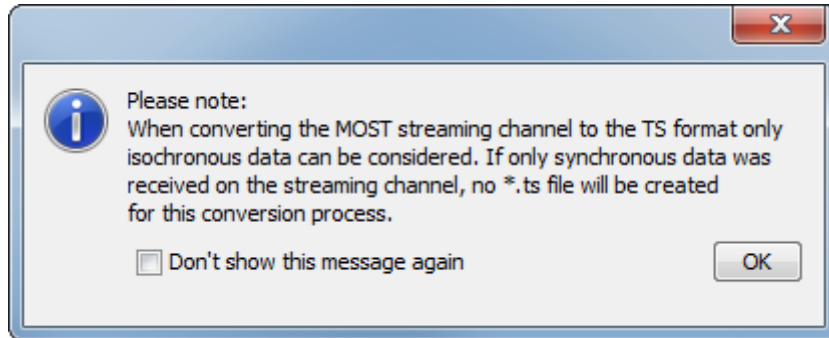

**Figure 14.23: Notification message due to conversion of a streaming channel to \*.ts**

The enabled checkbox **Show hint on blf format selection** activates the hint when MOST150 streaming data shall be converted into the binary loggin format (\*.blf) and notes the limitations for the conversion.

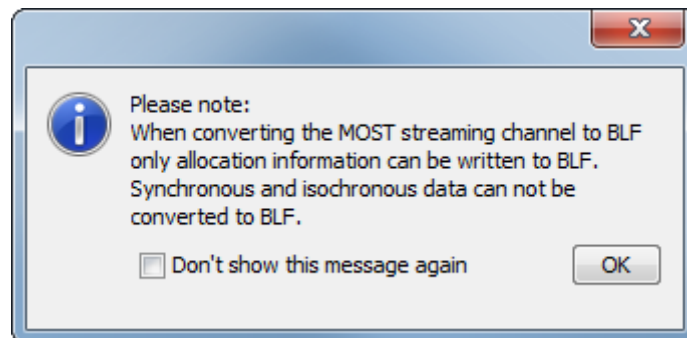

**Figure 14.24: Notification message due to conversion of a streaming channel to \*.blf**


### 14.7.8.3 Channel width of MOST150 isochronous data

Here the width of the isochronous MOST150 channels vcan be specified according to the used control units.

[Index](#)

## 15 Firmware / Licenses update


The tab <Firmware- / Licenses update> can be opened by clicking the button **[Update firmware] (6)**.

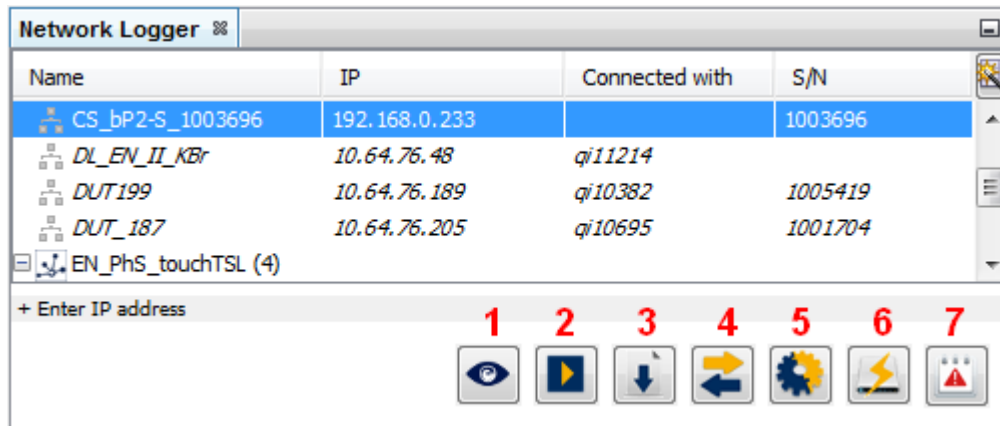

**Figure 15.1: Tab “Network Logger”**

**[Current logger time]** shows the logger time. By clicking the arrow the logger time can be synchronized to PC time.

By clicking the button **[Read data again]** at the bottom of the tab the tab content will be updated.

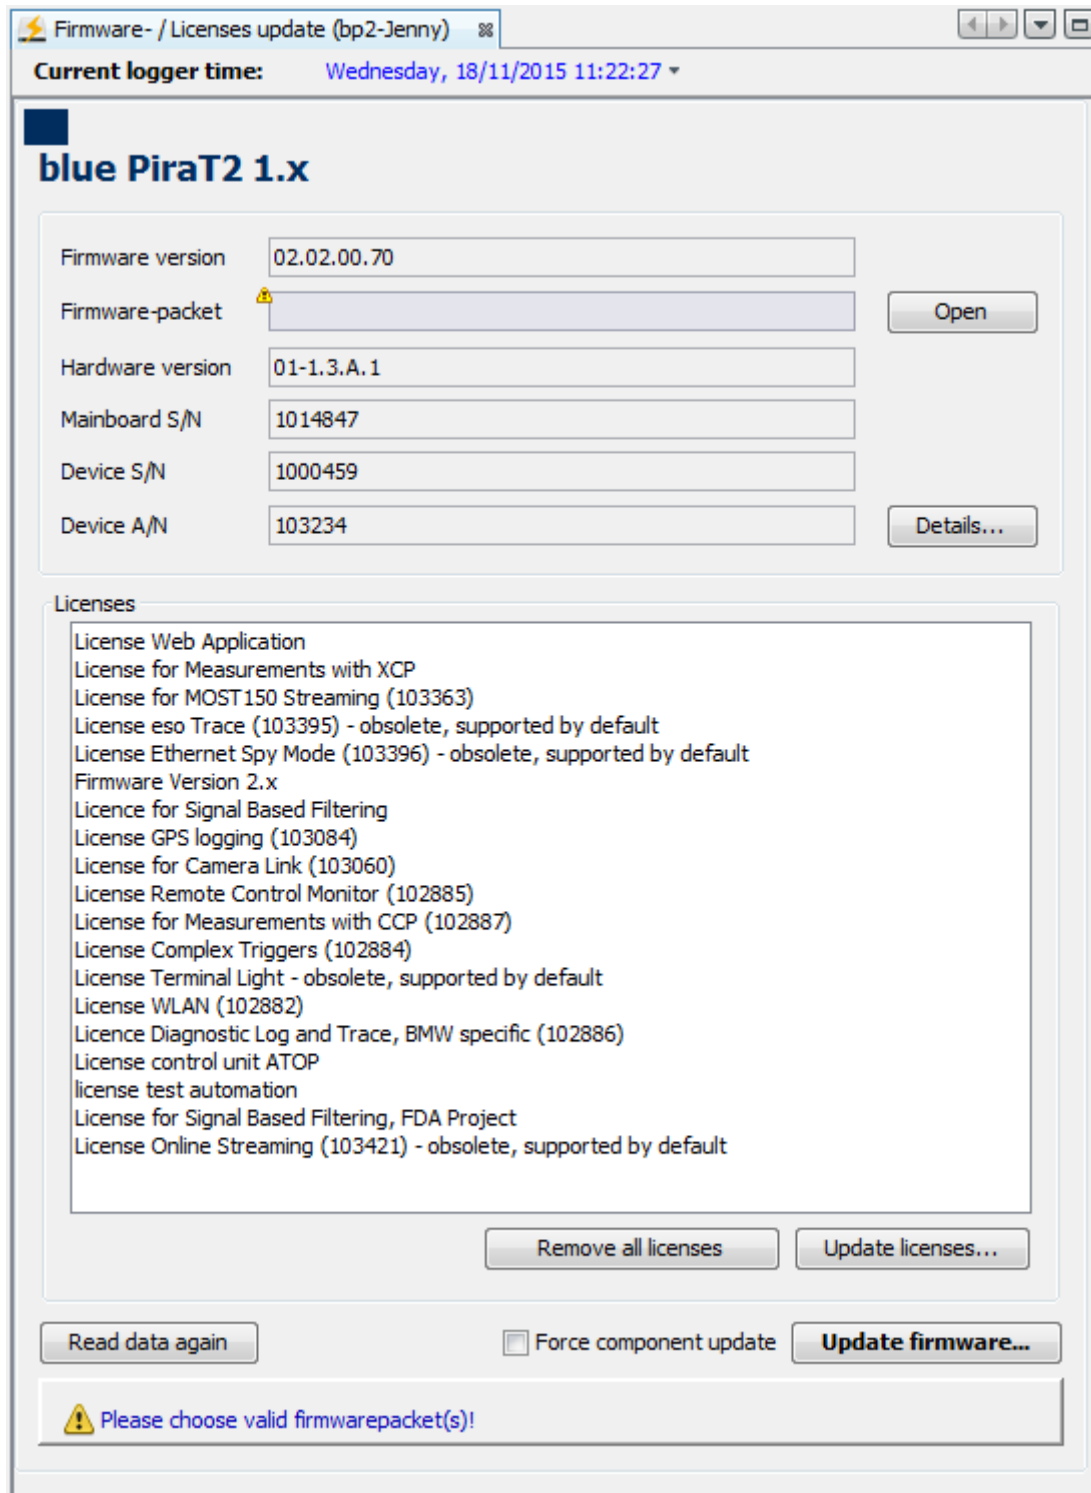

**Figure 15.2: Tab “Firmware- / Licenses update” (of blue PiraT2)**

## 15.1 Device information

The following information is read from the logger and displayed in the upper section of the tab:

- current version of the firmware on the data logger,
- hardware version,
- mainboard serial number,
- device serial number and
- device article number.


Firmware version	02.02.00.70	
Firmware-packet		Open
Hardware version	01-1.3.A.1	
Mainboard S/N	1014847	
Device S/N	1000459	
Device A/N	103234	Details...

**Figure 15.3: Firmware- / Licenses update: device information**

Over **[Details...]** a window opens containing the version numbers of the logger components. The window can be closed by clicking **[OK]** or the **[x]** button in the upper right corner.

## 15.2 Update firmware


Click **[Open]** next to <Firmware-packet>. Choose the desired firmware file (file extension “\*.dat”) in the appearing dialog. Click **[Open]**.

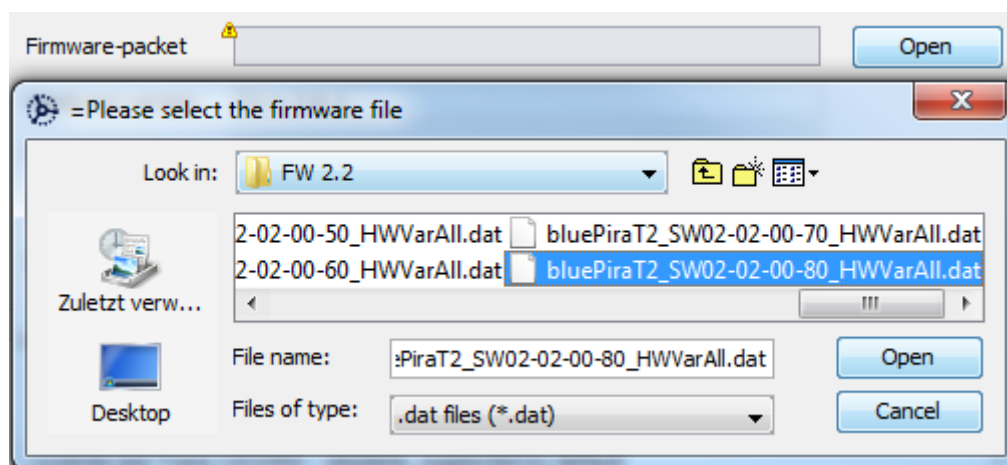

**Figure 15.4: Selecting firmware file**

**Note:**

If you choose an invalid firmwarepacket, an notification message appears and the button **[Update firmware...]** stays inactive.


 Invalid firmwarepacket for blue PiraT2!

**Figure 15.5: Notification message by invalid firmwarepacket**

**Note:**

The firmware files shouldn't be renamed. If you rename this file, the firmware update fails.

Click **[Update firmware...]**. Follow the instructions in the appearing dialog and click **[Start firmware update]**.

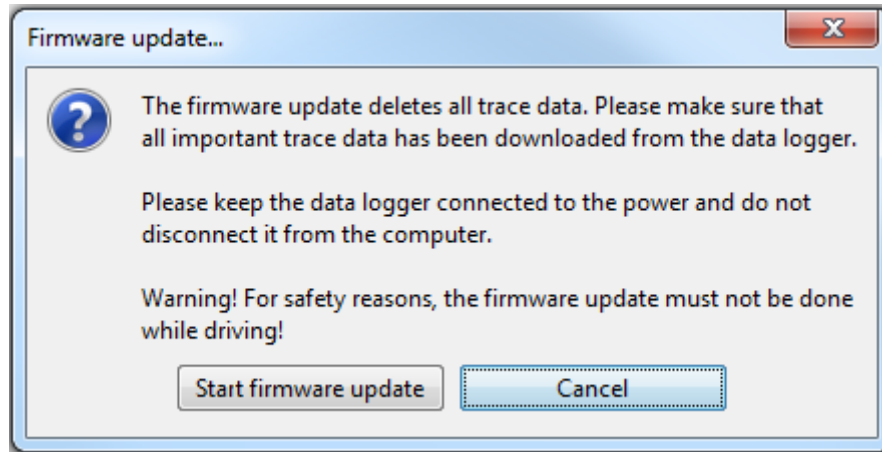


**Figure 15.6: Notification message before firmware update**

### 15.3 Licenses


The actual installed licenses are shown in the section <Licenses>.

It is possible to remove all licenses by a click on **[Remove all licenses]**.

In order to update licenses, click on the **[Update licenses...]** button, choose the desired file containing the license (file extension ".tml") in the appearing dialog and click **[Open]**.

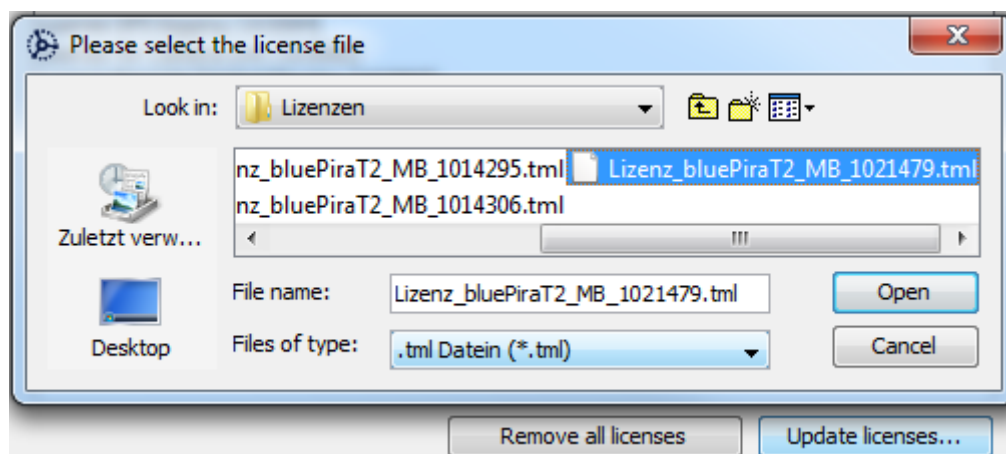


**Figure 15.7: Selecting license file**

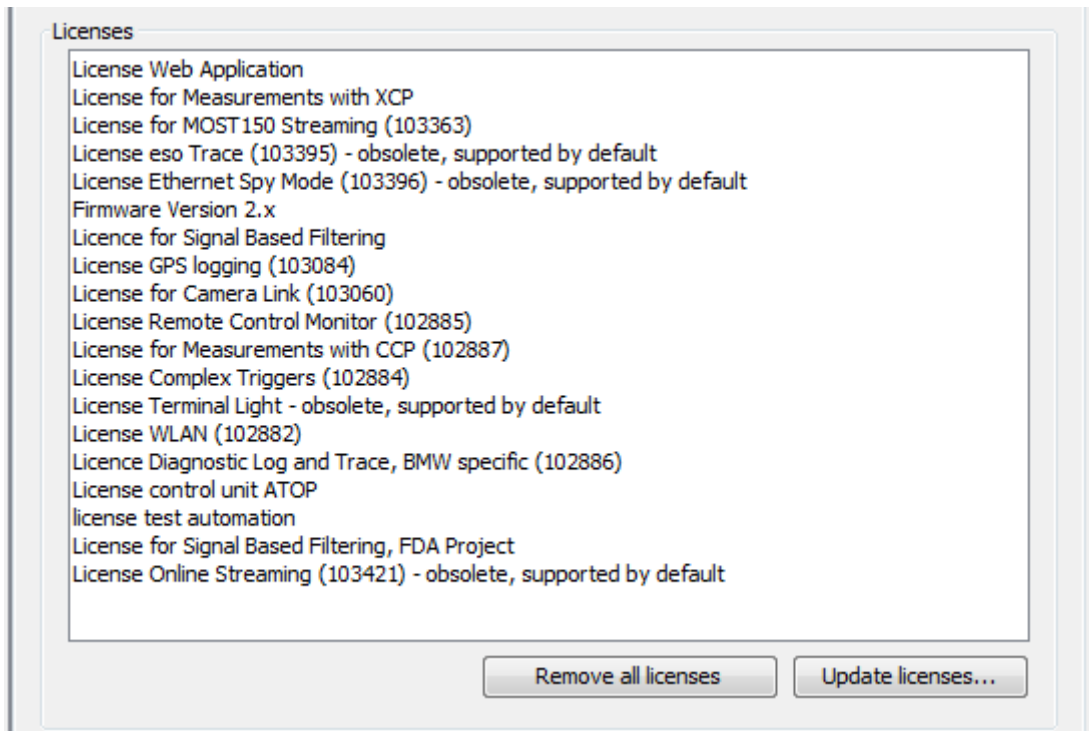

**Figure 15.8: Firmware- / Licenses update <Licenses>**

## 15.4 Force component update

The update of all components can be forced by ticking the corresponding checkbox. This can be useful to reinstall the same version or to downgrade to an older version on the logger.

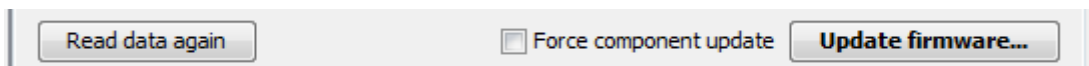

**Figure 15.9: Force component update**

[Index](#)




## 16 Bug reporter

The bug reporter is meant to help in the understanding of logger's errors. Some errors are very simple to fix by the user himself.

### 16.1 Opening the application "Bug reporter"

In the tab <Network Logger> click a logger that is not already connected.

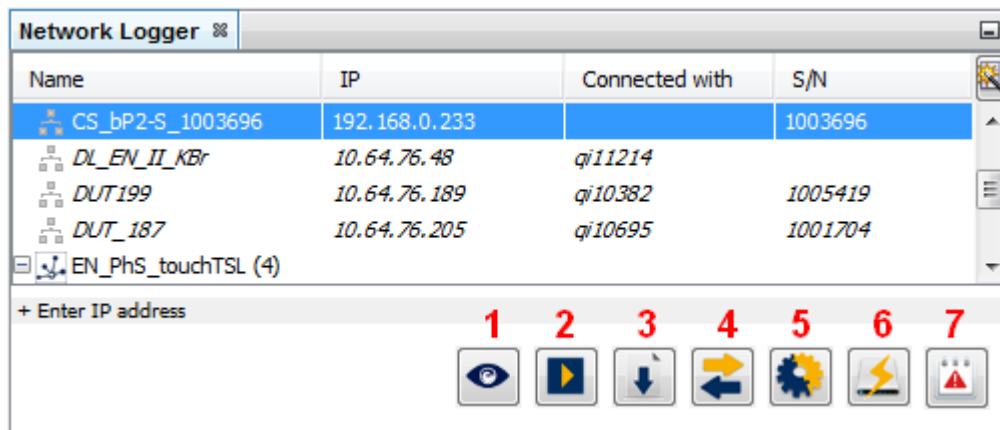

**Figure 16.1: Selecting logger**

Click on the application **[Open bug report] (7)**.

The tab <Bug reporter> is opening with the sections <Error overview> and <Error protocol> on the left and <Error type info> and <Error details> on the right side.


**[Current logger time]** shows the logger time. By clicking the arrow the logger time can be synchronized to PC time.

If the checkbox **Display inactive errors** between <Error overview> and <Error protocol> is enabled, all errors (active and non-active) are displayed. Otherwise only currently present errors are shown.

The button bar at the bottom of the tab contains the following buttons.

Button	Effect
	saves the actual bug report
	reads the bugs from the logger again and updates the tab content

**Table 16.1: Buttons in the tab "Bug reporter"**

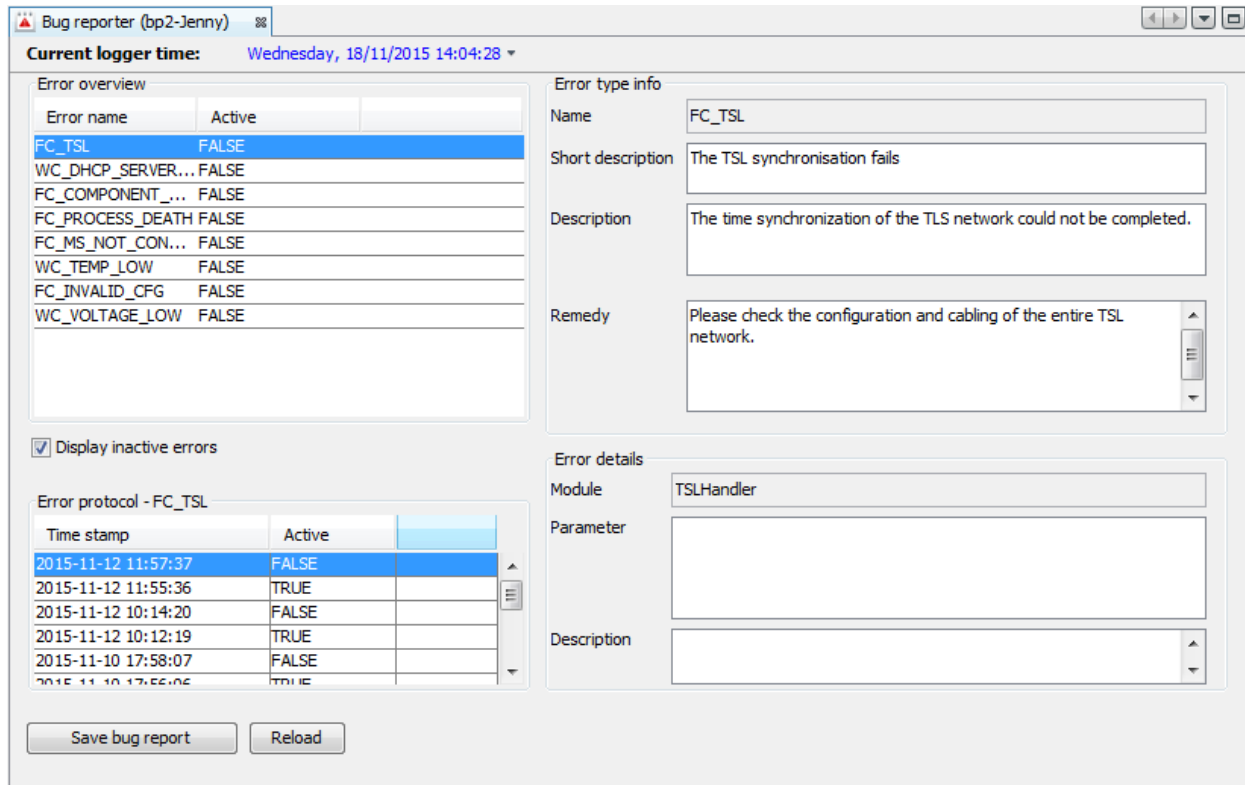

**Figure 16.2: Tab “Bug reporter”**


## 16.2 Error overview

All errors kept on the logger are listed with their currently active status.

If an error in the column <Active> is “TRUE”, i.e., the error is still active.

**Note:**

**That list includes errors that were active at an earlier date. From firmware 02.04.01 older errors will be deleted by the firmware update. In this context the time stamp is important. The time stamp is described in the section below.**

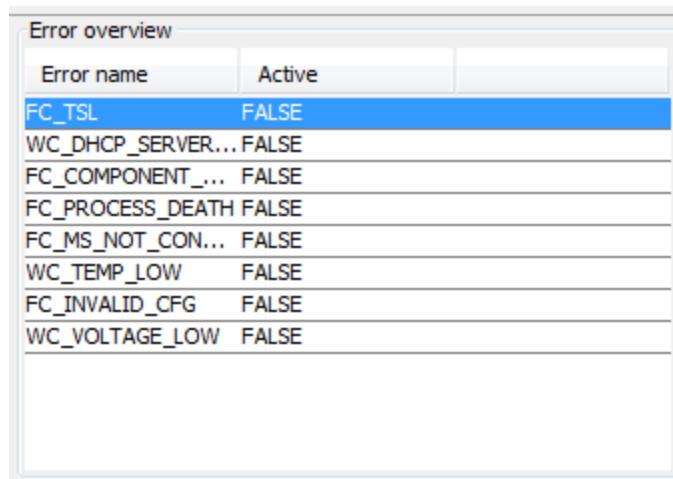

**Figure 16.3: Bug reporter <Error overview>**


## 16.3 Error protocol

Each error has its history stored on the logger, even errors that are not currently active. The section <Error protocol> displays the stored errors and their respective time stamps of the, in the section <Error overview> selected, Error name.

In the column <Active> two states are possible.

“TRUE” The error is/was active at the relevant time stamp.

“FALSE” The error is/was inactive at the relevant time stamp.

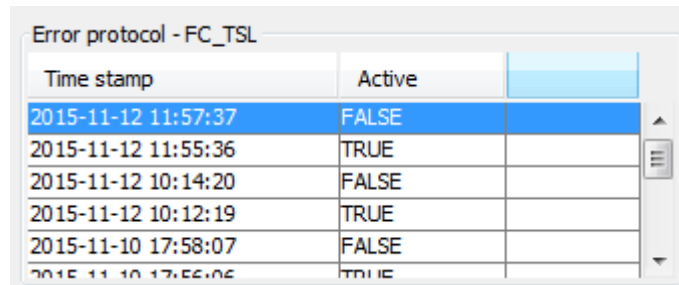


Time stamp	Active
2015-11-12 11:57:37	FALSE
2015-11-12 11:55:36	TRUE
2015-11-12 10:14:20	FALSE
2015-11-12 10:12:19	TRUE
2015-11-10 17:58:07	FALSE
2015-11-10 17:55:06	TRUE

**Figure 16.4: Bug reporter <Error protocol>**

## 16.4 Error type info

The, in the section <Error overview> selected, Error name is displayed together with a description and suggested solutions.

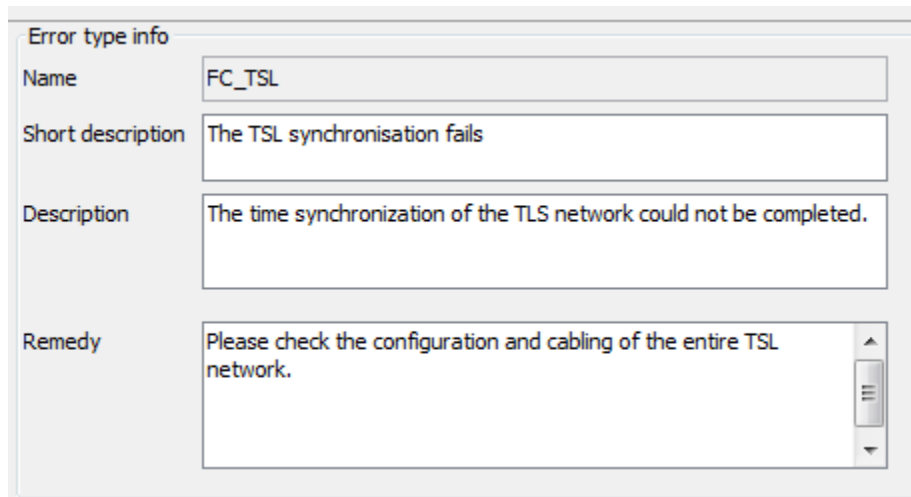

**Error type info**

Name: FC\_TSL

Short description: The TSL synchronisation fails


Description: The time synchronization of the TLS network could not be completed.

Remedy: Please check the configuration and cabling of the entire TSL network.

**Figure 16.5: Bug reporter <Error type info>**

## 16.5 Error details

The details of the error are explained in the last box.

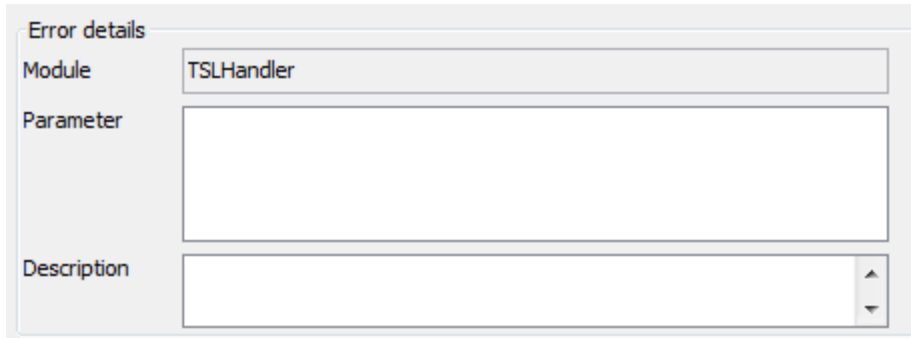

**Figure 16.6: Bug reporter <Error details>**

## 16.6 Save bug report

To save the bug report, click the button **[Save bug report]**. Choose one of the three in the following described options in the appearing dialog. Fill the "\*" marked fields under <Error details>.

Especially important for analysis is to specify the "*Date/time of error*", i.e., the time the error occurred, as accurately as possible.

Option	Effect
<b>1: Client and logger without trace data</b>	This is the standard option. It includes client and data logger logs and configuration files, but does not include trace data.
<b>2: Client and logger with all trace data</b>	Includes all raw trace data in the bug report. In most cases, this leads to a huge zip archive, which cannot be sent by Email. Additionally, the creation of the bug report can take much longer. For these reasons, this option should only be used when requested by the Telemotive support team.
<b>3: Client and logger with trace data of a specific time range</b>	To avoid a possible huge zip archive when including all trace data, one can store only the raw trace data of a specific time period in the bug report.

**Table 16.2: Memory amount of bug report**

Confirm the settings by clicking **[OK]**. Choose saving directory and file name of the bug report in the appearing dialog and confirm them by clicking **[Save]**.

Please send an Email with the bug report to [productsupport@telemotive.de](mailto:productsupport@telemotive.de) or log into our OTRS ticket system to upload the bug report into a new or existing ticket.

If you do not have access to the ticket system, please contact the product support to get login data.

**Figure 16.7: Establishing saving options**

**Figure 16.8: Establishing saving directory and file name**

[Index](#)

## 17 Abbreviations

Kürzel / abbreviation	Bedeutung / meaning
<b>blue PiraT</b>	<b>P</b> rocessing <b>I</b> nformation <b>R</b> ecording <b>A</b> nalyzing <b>T</b> ool
<b>bP</b>	<b>blue PiraT</b>
<b>bP2</b>	<b>blue PiraT2</b>
<b>bP2 5E</b>	<b>blue PiraT2 5E</b>
<b>bPMini</b>	<b>blue PiraT Mini</b>
<b>RC Touch</b>	<b>R</b> emote <b>C</b> ontrol <b>T</b> ouch
<b>bP Remote</b>	<b>blue PiraT Remote</b>
<b>A2L</b>	<b>A</b> SAM <b>M</b> CD- <b>2</b> <b>M</b> C <b>L</b> anguage
<b>AE</b>	<b>A</b> utomotive <b>E</b> lectronics
<b>ACK</b>	<b>A</b> C <b>K</b> nowledged
<b>CAN</b>	<b>C</b> ontroller <b>A</b> rea <b>N</b> etwork
<b>CCP</b>	<b>C</b> AN <b>C</b> alibration <b>P</b> rotocol
<b>CF</b>	<b>C</b> ompact <b>F</b> lash
<b>CRO</b>	<b>C</b> ommand <b>R</b> eceive <b>O</b> bject
<b>DAQ</b>	<b>D</b> ata <b>A</b> cquisition
<b>DTO</b>	<b>D</b> ata <b>T</b> ransmission <b>O</b> bject
<b>ECL</b>	<b>E</b> lectrical <b>C</b> ontrol <b>L</b> ine
<b>ECU</b>	<b>E</b> lectronic <b>C</b> ontrol <b>U</b> nit
<b>FIBEX</b>	<b>F</b> ield <b>B</b> us <b>E</b> xchange <b>F</b> ormat
<b>FW</b>	<b>F</b> irmware
<b>GMT</b>	<b>G</b> reenwich <b>M</b> ean <b>T</b> ime
<b>INCA</b>	<b>I</b> N <b>T</b> egrated <b>C</b> alibration and <b>A</b> pplication <b>T</b> ool
<b>LAN</b>	<b>L</b> ocal <b>A</b> rea <b>N</b> etwork = Netzwerk
<b>LIN</b>	<b>L</b> ocal <b>I</b> nterconnect <b>N</b> etwork
<b>MAC</b>	<b>M</b> edia <b>A</b> ccess <b>C</b> ontrol
<b>MCD</b>	<b>M</b> easure <b>C</b> alibrate <b>D</b> iagnose
<b>MDX</b>	<b>M</b> eta <b>D</b> ata <b>E</b> Xchange <b>F</b> ormat
<b>MEP</b>	<b>M</b> OST <b>E</b> thernet <b>P</b> acket
<b>MOST</b>	<b>M</b> edia <b>O</b> riented <b>S</b> ystems <b>T</b> ransport ( <a href="http://www.mostnet.de">www.mostnet.de</a> )
<b>ODT</b>	<b>O</b> bject <b>D</b> escriptor <b>T</b> able
<b>ODX</b>	<b>O</b> pen <b>D</b> ata <b>E</b> Xchange
<b>OEM</b>	<b>O</b> riginal <b>E</b> quipment <b>M</b> anufacturer

<b>PHY</b>	<b>PHY</b> sical Bus Connect
<b>PW</b>	<b>Pass</b> wort
<b>RX</b>	<b>Recei</b> ver Data
<b>SD</b>	<b>Secure</b> Digital
<b>SFTP</b>	<b>Secure</b> File Transfer Protocol
<b>SHA</b>	<b>Secure</b> Hash
<b>SSL</b>	<b>Secure</b> Sockets Layer
<b>TCP/IP</b>	<b>Trans</b> mission Control Protocol/ <b>Inter</b> net Protocol
<b>TLS</b>	<b>Trans</b> port Layer Security
<b>TMP</b>	<b>Telemotive</b> Packetformat
<b>TSL</b>	<b>Telemotive</b> System Link
<b>UDP</b>	<b>User</b> Datagram Protocol
<b>USB</b>	<b>Univer</b> sals Serial Bus
<b>UTC</b>	<b>Univer</b> sals Time, Coordinated
<b>Wi-Fi</b>	<b>Wire</b> less Fidelity
<b>WLAN</b>	<b>Wire</b> less Local Area Network
<b>XCP</b>	<b>Univer</b> sals Measurement and Calibration Protocol

**Table 17.1: Abbreviations**

## 18 List of figures

Figure 4.1: links to the manuals.....	12
Figure 5.1: Power connection on the blue PiraT2 .....	15
Figure 5.2: Power connection on the blue PiraT2 5E .....	15
Figure 5.3: Switching on the blue PiraT2.....	16
Figure 5.4: Info screen – IP address.....	16
Figure 5.5: Power connection on the blue PiraT Mini.....	17
Figure 5.6: Switching on the blue PiraT Mini.....	17
Figure 5.7: Switching on the blue PiraT Remote.....	18
Figure 5.8: Switching on the Remote Control Touch.....	19
Figure 5.9: TSL Client Portal .....	20
Figure 5.10: Desktop icon.....	21
Figure 5.11: Content off he portable client.....	21
Figure 6.1: Menu item [File].....	23
Figure 6.2: Menu item [Tools].....	23
Figure 6.3: Menu item [Window] .....	24
Figure 6.4: Standard view after [Reset Windows] .....	24
Figure 6.5: Menu item [Help] .....	25
Figure 6.6: Start screen of the client.....	26
Figure 6.7: Application icons .....	26
Figure 6.8: Devices which are used by other users .....	27
Figure 6.9: Device in error state .....	27
Figure 6.10: Context menu .....	28
Figure 6.11: Tab “Favorites” .....	28
Figure 7.1: Selecting logger.....	29
Figure 7.2: Tab “Configuration”.....	29
Figure 7.3: Toolbar in the tab “Configuration” .....	30
Figure 7.4: Saving configuration .....	31
Figure 7.5: Loading configuration .....	31
Figure 7.6: Changing date format .....	32
Figure 8.1: Configuration – General – Name .....	33
Figure 8.2: Configuration – General – Network settings.....	34
Figure 8.3: Configuration – General – Buffer .....	36
Figure 8.4: Configuration – General – Compression.....	37
Figure 8.5: Configuration – General – Standby.....	37
Figure 8.6: Configuration – General – Voice recording Settings .....	38
Figure 8.7: Configuration – General – Zone settings .....	38
Figure 8.8: Current logger time on toolbar .....	38
Figure 8.9: Configuration of External Storage.....	39
Figure 8.10: Configuration via Removable Media .....	40
Figure 8.11: Configuration via Removable Media .....	41
Figure 8.12: Configuration – Password Protection.....	42
Figure 8.13: Configuration – Password Protection – Load configuration... ..	43
Figure 8.14: Configuration – Password Protection – General .....	43
Figure 8.15: Configuration – Password Protection – Administrator (admin) .....	43
Figure 8.16: Changing password.....	43
Figure 8.17: Configuration – Password Protection – Add User.....	44
Figure 8.18: Configuration – Password Protection – User .....	45
Figure 8.19: Device login.....	45
Figure 8.20: Error message due to lack of authorization.....	46
Figure 8.21: Password Protection not visible .....	46
Figure 8.22: Load configuration .....	46
Figure 8.23: Password Protection visible.....	46
Figure 8.24: Configuration – Password Protection: Userlist .....	47
Figure 8.25: Changing users privileges .....	47
Figure 8.26: General settings – Wakeup system .....	48



Figure 8.27: General settings – Keep awake on busload.....	48
Figure 8.28: *port* – *port* interface active.....	48
Figure 8.29: *port* – Name.....	48
Figure 8.30: Configuration – CAN: Channel (overview) .....	49
Figure 8.31: Configuration – CAN – CAN-HS #... .....	49
Figure 8.32: Configuration – CAN – CAN-HS #... <Timing>.....	50
Figure 8.33: Configuration – CAN – CAN-HS #... <CAN Filter> .....	50
Figure 8.34: Adding CAN message .....	51
Figure 8.35: Configuration – CAN – General settings .....	52
Figure 8.36: Configuration – LIN: Channel (overview) .....	52
Figure 8.37: Configuration – LIN – LIN #... .....	53
Figure 8.38: Configuration – LIN – General settings .....	53
Figure 8.39: Configuration – Serial: Channel (overview).....	54
Figure 8.40: Configuration – Serial – Serial #... .....	54
Figure 8.41: Configuration – Serial – General settings .....	54
Figure 8.42: Configuration – MOST – MOST... .....	55
Figure 8.43: Configuration – MOST – ECL .....	55
Figure 8.44: Configuration – FlexRay: Channel (overview).....	56
Figure 8.45: Configuration – FlexRay – FlexRay .....	56
Figure 8.46: Configuration – FlexRay – General settings.....	57
Figure 8.47: Configuration – Ethernet: Channel (overview) .....	58
Figure 8.48: Configuration – Ethernet – Ethernet #.....	58
Figure 8.49: Configuration – Ethernet – Ethernet #... <Connector> .....	59
Figure 8.50: Configuration – Ethernet – Ethernet #... <Protocol>.....	59
Figure 8.51: Configuration – Ethernet – Ethernet #... <Target IP address> and <Port> .....	60
Figure 8.52: Configuration – Ethernet – Ethernet #... <VLAN settings> .....	60
Figure 8.53: Configuration – Ethernet – Ethernet #... <Timeout>.....	60
Figure 8.54: Configuration – Ethernet – Ethernet #... <Debug level> .....	60
Figure 8.55: Configuration – Ethernet – Port Settings.....	61
Figure 8.56: Port modes of blue PiraT Mini.....	61
Figure 8.57: Bridging front / back ethernet ports.....	62
Figure 8.58: Configuration options of rear ports (of blue PiraT Mini) .....	62
Figure 8.59: Choosing Filter Mode .....	63
Figure 8.60: MAC address filter .....	63
Figure 8.61: Port modes of blue PiraT2.....	64
Figure 8.62: Data recording in “Tap” mode .....	65
Figure 8.63: Spy Logging .....	66
Figure 8.64: Choosing protocol “EsoTrace” .....	68
Figure 8.65: Choosing protocol “GNLogger” .....	68
Figure 8.66: Choosing protocol “SpyMode” .....	69
Figure 8.67: Setting an IP Filter .....	70
Figure 8.68: Setting a MAC Filter .....	70
Figure 8.69: Setting a VLAN Filter .....	71
Figure 8.70: Configuration – Analog: Channel (overview).....	72
Figure 8.71: Notification message due to lack of external input for Analog #1 .....	72
Figure 8.72: Configuration – Analog – General settings.....	72
Figure 8.73: Configuration – Digital input: Channel (overview) .....	73
Figure 8.74: Configuration – Digital input – DigitalIn #... .....	73
Figure 8.75: Configuration – Digital input – General settings (of blue PiraT Mini) .....	74
Figure 8.76: Hysteresis curve .....	74
Figure 8.77: Configuration – Digital input – General settings (of blue PiraT2).....	74
Figure 8.78: Digital output settings .....	75
Figure 8.79: Adding new Trigger .....	76
Figure 8.80: Configuration – Trigger – Trigger #... .....	76
Figure 8.81: Configuration – Trigger: Trigger (overview).....	76
Figure 8.82: Selecting the trigger mode.....	77
Figure 8.83: Selecting an event .....	78

Figure 8.84: Selecting the event *Complex event*	78
Figure 8.85: Inserting an expression	79
Figure 8.86: Part of a complex event	79
Figure 8.87: Selecting expression "CAN-Signal"	80
Figure 8.88: Selecting signal from CAN database	80
Figure 8.89: CAN expression	81
Figure 8.90: Selecting expression "Remote control function key pressed/released"	81
Figure 8.91: Remote Control function key expression	82
Figure 8.92: Selecting expression "Digital input is 1 (High)/0 (Low)"	82
Figure 8.93: Digital input expression	83
Figure 8.94: Selecting expression "Analog input"	83
Figure 8.95: Analog input expression	84
Figure 8.96: Valid expression of complex event	85
Figure 8.97: Verification of input parameter	85
Figure 8.98: Moving cursor	86
Figure 8.99: Deleting event/character/operator	86
Figure 8.100: Selecting event *Receive CAN signal*	87
Figure 8.101: Selecting triggering key	88
Figure 8.102: Selecting key status	88
Figure 8.103: Selecting event *Digital Input*	89
Figure 8.104: Selecting event *Analog Input*	90
Figure 8.105: Selecting an action	91
Figure 8.106: Selecting action *Send CAN message*	91
Figure 8.107: Selecting action *Set marker*	92
Figure 8.108: Selecting action *Set digital output*	92
Figure 8.109: Selecting action *Append info entry to event overview*	93
Figure 8.110: Selecting action *Display notification on Remote Control*	93
Figure 8.111: Notification on Remote Control	93
Figure 8.112: Selecting action *Execute CCP/XCP action*	94
Figure 8.113: Setting a marker via an external button	95
Figure 8.114: Configuration – Trigger – Event management	95
Figure 8.115: Event management	96
Figure 8.116: Selecting "Custom event"	96
Figure 8.117: Configuration – Trigger: Trigger (overview)	97
Figure 8.118: Duplicate trigger	98
Figure 8.119: Duplicated trigger	98
Figure 8.120: Configuration – Online Streaming – Online Streaming	100
Figure 8.121: Configuration – Channelmapping – Channelmapping	101
Figure 8.122: Configuration – System Link (TSL) – TSL-Activation	102
Figure 8.123: Configuration – Databases – CAN Databases	103
Figure 9.1: Error message with two DHCP-Server	104
Figure 9.2: TSL example with three blue PiraT Mini	105
Figure 9.3: TSL in tab "Network Logger"	105
Figure 9.4: Loggers within TSL in tab "Network Logger"	106
Figure 9.5: Configuration – System Link (TSL) – TSL-Activation	107
Figure 9.6: Configuration – General	107
Figure 9.7: Voice recording settings with TSL grouping	108
Figure 9.8: Configuration – LIN	108
Figure 9.9: Configuration – LIN – LIN #	108
Figure 9.10: Configuration – LIN: Channel (overview)	109
Figure 9.11: Configuration – MOST	109
Figure 9.12: Configuration – Ethernet – Ethernet #	109
Figure 9.13: Configuration – Databases	110
Figure 9.14: Feature on multiple devices	110
Figure 9.15: Feature just on one device	110
Figure 9.16: Password configuration	111
Figure 9.17: Configuration – System Link (TSL)	111

Figure 9.18: Configuration – System Link (TSL): Logger (overview) .....	111
Figure 9.19: Configuration – System Link (TSL) – TSL-Cascading - Logger: ... ..	112
Figure 9.20: Tab title of offline configuration .....	113
Figure 9.21: Error message due to wrong number of devices in offline config .....	113
Figure 9.22: TSL Configuration matching .....	113
Figure 9.23: Notification message due to incompatibility of device and configpart .....	114
Figure 9.24: Notification message fort he adaption of configurations .....	114
Figure 9.25: Error message due to invalid cascading settings .....	115
Figure 9.26: Download overview without TSL Events .....	116
Figure 9.27: Conversion overview TSL offline data set .....	118
Figure 9.28: TSL bug reporter .....	119
Figure 9.29: Firmware / License update TSL .....	120
Figure 10.1: Activating Online Streaming .....	121
Figure 10.2: Starting online monitor .....	121
Figure 10.3: Starting online streaming .....	122
Figure 10.4: Pausing online streaming .....	122
Figure 10.5: Stopping online streaming .....	122
Figure 10.6: Add channel to new window .....	123
Figure 10.7: Setting a window title .....	123
Figure 10.8: A channel in a new window .....	123
Figure 10.9: Assigning databases by context menu .....	124
Figure 10.10: Database configuration .....	124
Figure 10.11: Add filter .....	125
Figure 10.12: Choosing filter .....	125
Figure 10.13: Newly added filter .....	125
Figure 10.14: Data bases for Online Monitor .....	126
Figure 10.15: Add filter .....	126
Figure 10.16: Creating text filter for Ethernet and serial channels .....	126
Figure 10.17: Write Logging to file .....	127
Figure 10.18: Tab [Online Monitor] .....	128
Figure 10.19: Message details of a CAN message .....	128
Figure 10.20: Clear trace window with button .....	128
Figure 10.21: Clear trace window in Online Monitor data overview .....	129
Figure 10.22: Column configuration .....	130
Figure 10.23: Available fields depending on the selected interface .....	130
Figure 10.24: Column configuration in table header .....	130
Figure 10.25: the menu bar of the data window .....	131
Figure 10.26: tabular view .....	131
Figure 10.27: Telemotive ASCII view] .....	131
Figure 10.28: Changing view .....	131
Figure 10.29: A sorted column .....	132
Figure 10.30: Selecting time zone .....	133
Figure 10.31: Searching in online monitor .....	133
Figure 11.1: Open the Live View over the Icon .....	134
Figure 11.2: Open the Live View over right click .....	134
Figure 11.3: Opening Live View via the configuration .....	135
Figure 11.4: Open the Live View via the Client-Portal .....	135
Figure 11.5: Live View – General .....	136
Figure 11.6: Changing password .....	136
Figure 11.7: Registering device .....	138
Figure 11.8: Assigning databases .....	140
Figure 11.9: Adding signals .....	141
Figure 11.10: Bus selection .....	141
Figure 11.11: Selecting signals .....	142
Figure 11.12: Telemotive Live View startscreen .....	143
Figure 11.13: Presentation with one column .....	144
Figure 11.14: Presentation with two columns .....	145

Figure 11.15: Presentation with three columns .....	145
Figure 11.16: Presentation with four columns .....	145
Figure 11.17: Presentation with five columns .....	145
Figure 11.18: Adding a widget .....	146
Figure 11.19: Field Label .....	146
Figure 11.20: Adding signals .....	147
Figure 11.21: Widget with multiple signals .....	147
Figure 11.22: Field Update Interval .....	148
Figure 11.23: Configuring presentation .....	149
Figure 11.24: Setting the scaling .....	150
Figure 11.25: Setting the timeunit in the line chart .....	150
Figure 11.26: Setting dec. places .....	150
Figure 11.27: Example Presentation Configuration .....	151
Figure 11.28: Setting window range .....	152
Figure 11.29: Color selection .....	152
Figure 11.30: Range input .....	153
Figure 11.31: Colored Range .....	153
Figure 11.32: Remove a range .....	153
Figure 11.33: Taking over of the color presentation .....	154
Figure 11.34: Colored Presentation of the signal as bar .....	154
Figure 11.35: Colored Presentation of the signal as gauge .....	154
Figure 11.36: Colored Presentation of the signal as text .....	154
Figure 11.37: Colored Presentation of the signal as line chart .....	155
Figure 11.38: Tab "Marker" .....	156
Figure 11.39: Tab "Channels" .....	157
Figure 11.40: Tab "Settings" .....	158
Figure 11.41: Saving a layout .....	159
Figure 11.42: Loading a layout .....	159
Figure 11.43: Tab "Info" .....	160
Figure 12.1: Selecting logger .....	161
Figure 12.2: Tab "Create data set" .....	162
Figure 12.3: Toolbar in the tab "Create data set" .....	163
Figure 12.4: Setting time and date .....	163
Figure 12.5: Window with disk usage .....	163
Figure 12.6: Reset marker counter .....	164
Figure 12.7: Delete all data incl. Reset marker counter .....	164
Figure 12.8: Delete selected data .....	164
Figure 12.9: Defining data block start and end .....	165
Figure 12.10: Create data set – Event overview .....	166
Figure 12.11: Window for overview of recorded channels each section .....	166
Figure 12.12: Wakup sources in the event window (highlighted in red) .....	167
Figure 12.13: Create data set – Time period .....	168
Figure 12.14: Change download-options .....	169
Figure 12.15: Download data set .....	169
Figure 12.16: Create offline data subset from this .....	170
Figure 12.17: Creating an offline data subset .....	170
Figure 12.18: Trace file viewer .....	171
Figure 12.19: Selecting groups or interfaces .....	171
Figure 12.20: Folder structure of an offline data set from blue PiraT2 / 5E .....	172
Figure 12.21: Folder structure of an offline data set from blue PiraT Mini .....	172
Figure 13.1: Change IP settings .....	173
Figure 14.1: Trace in Serial Trace Analyser format .....	178
Figure 14.2: Trace in the Telemotive ASCII format .....	179
Figure 14.3: Selecting logger .....	180
Figure 14.4: Tab "Conversion" .....	180
Figure 14.5: Tab "Favorites" .....	181
Figure 14.6: Defining data block start and end .....	184

Figure 14.7: Choosing conversion format .....	184
Figure 14.8: "Channel selection tree" and area for format settings .....	185
Figure 14.9: Selecting target directory .....	185
Figure 14.10: Import/export format settings .....	185
Figure 14.11: Changing conversion format.....	186
Figure 14.12: Changing Color-IDs .....	186
Figure 14.13: Notification message due to improper conversion.....	187
Figure 14.14: Example Events.txt.....	187
Figure 14.15: Tab sheet "General" .....	188
Figure 14.16: Tab sheet "File names" .....	189
Figure 14.17: Tab sheet "Partitioning" .....	189
Figure 14.18: Tab sheet "Formats" .....	190
Figure 14.19: Tab sheet "CAN pseudo messages" .....	191
Figure 14.20: Tab sheet "MOST pseudo messages" .....	192
Figure 14.21: Tab sheet "CAN databases" .....	193
Figure 14.22: Tab sheet "Specific Format Settings".....	194
Figure 14.23: Notification message due to conversion of a streaming channel to *.ts.....	195
Figure 14.24: Notification message due to conversion of a streaming channel to *.blf.....	195
Figure 15.1: Tab "Network Logger" .....	196
Figure 15.2: Tab "Firmware- / Licenses update" (of blue PiraT2).....	197
Figure 15.3: Firmware- / Licenses update: device information.....	198
Figure 15.4: Selecting firmware file .....	198
Figure 15.5: Notification message by invalid firmwarepacket.....	199
Figure 15.6: Notification message before firmware update .....	199
Figure 15.7: Selecting license file .....	199
Figure 15.8: Firmware- / Licenses update <Licenses> .....	200
Figure 15.9: Force component update.....	200
Figure 16.1: Selecting logger.....	201
Figure 16.2: Tab "Bug reporter" .....	202
Figure 16.3: Bug reporter <Error overview>.....	202
Figure 16.4: Bug reporter <Error protocol> .....	203
Figure 16.5: Bug reporter <Error type info> .....	203
Figure 16.6: Bug reporter <Error details> .....	204
Figure 16.7: Establishing saving options .....	205
Figure 16.8: Establishing saving directory and file name .....	205

## 19 List of tables

Table 4.1: Additional features by optional licensees .....	13
Table 5.1: Arguments for console installer.....	22
Table 7.1: Buttons in the tab “Configuration” .....	30
Table 8.1: CAN-Bit-Timing-Parameter .....	50
Table 8.2: Debug level.....	60
Table 8.3: Available port speeds and allowed remote sites configuration .....	67
Table 8.4: Operators (overview) .....	84
Table 8.5: Priority order of the operators .....	85
Table 8.6: Buttons in the trigger overview.....	98
Table 8.7: Busses and compatible databases .....	103
Table 10.1: Continuous and changing parts of the messages.....	132
Table 14.1: Conversion options (overview).....	174
Table 14.2: Buttons in the tab “Conversion” .....	182
Table 16.1: Buttons in the tab “Bug reporter” .....	201
Table 16.2: Memory amount of bug report.....	204
Table 17.1: Abbreviations.....	207

[Index](#)

## 20 Contact



### Telemotive AG

Office München  
Frankfurter Ring 115a  
80807 München

Tel.: +49 89 357186-0  
Fax.: +49 89 357186-520  
E-Mail: [info@telemotive.de](mailto:info@telemotive.de)  
Web: [www.telemotive.de](http://www.telemotive.de)

Sales  
Tel.: +49 89 357186-550  
Fax.: +49 89 357186-520  
E-Mail: [sales@telemotive.de](mailto:sales@telemotive.de)

Support  
Tel.: +49 89 357186-518  
E-Mail: [productsupport@telemotive.de](mailto:productsupport@telemotive.de)  
ServiceCenter: <https://sc.telemotive.de/bluepirat>